ATC200-LITE-USB
Teletilt® Remote Control
Variable Electrical Downtilt System

Installation and Operation User Guide

POWERED BY ANDREW

Bulletin 639536 • Revision L • October 2014

CommScope
1100 CommScope Place SE P.O. Box 339, Hickory, NC 28603-0339
(828) 324-2200 (800) 982-1708
www.commscope.com/andrew

Customer Service 24 hours
North America: +1-800-255-1479, Option 1 (toll free)
Any country: +1-779-435-6500, Option 1
email: acicustomersupportcenter@commscope.com

Notice: CommScope disclaims any liability or responsibility for the results of improper or unsafe installation, inspection, maintenance, or removal practices.
Aviso: CommScope no acepta ninguna obligación ni responsabilidad como resultado de prácticas incorrectas o peligrosas de instalación, inspección, mantenimiento o retiro.
Avis : CommScope décline toute responsabilité pour les conséquences de procédures d'installation, d'inspection, d'entretien ou de retrait incorrectes ou dangereuses.
Hinweis: CommScope lehnt jede Haftung oder Verantwortung für Schäden ab, die aufgrund unsachgemäßer Installation, Überprüfung, Wartung oder Demontage auftreten.
Atenção: A CommScope abdica do direito de toda responsabilidade pelos resultados de práticas inadequadas e sem segurança de instalação, inspeção, manutenção ou remoção.
Avvertenza: CommScope declina eventuali responsabilità derivanti dell'esecuzione di procedure di installazione, ispezione, manutenzione e smontaggio improprie o poco sicure.
注意：CommScope 公司申明對於不恰當或不安全的安裝、檢驗、維修或拆卸操作所導致的后果不負任 何義務和責任

© 2014 CommScope Bulletin 639536

Revision History

Revision No.	Date	Description of Changes
A	October 2006	Released.
B	January 2007	Change discussion on device configuration settings in Section 4 to show that factory installed actuators are pre-configured to include the antenna model number, antenna type, and antenna serial number.
C	September 2007	No longer uses lite scan. Calibrate button added for other antenna vendor actuator calibrations. Added operating instructions for use with SmartBeam™ antennas.
D	May 2008	ATC Lite v5.0 supports both AISG 1.1 and 2.0 protocols. Main screen displays AISG mode. Added section on switching AISG mode in Andrew actuators. Added warranty notice.
E	November 2008	Updated from Version 5.0 to 6.0. Added 3 sections about configuring and adjusting Multiple Integrated Actuators.
F	April 2009	Contact information updated
G	August 2012	Updated for the features implemented in ATCLIte 7.2 as per the EAO 600300.
H	November 2012	Contact information updated
J	March 2013	Update the ATCLite7.2 software features
K	November 2013	Updated for the features implemented in ATCLite 8.0 with support for full control of TMAs.
L	October 2014	Updated the latest CommScope branding to document.

Notices and Precautions

IMPORTANT

Before installing/operating the ATC200-LITE-USB controller, please **DOWNLOAD the latest antenna definition file and controller software** from the Commscope web site at www.commscope.com. Please register online to receive E-mail notifications for software updates.

WARRANTY NOTICE

Proper installation procedures must be followed when installing and operating RET equipment. Failure to assure installations are done properly by trained installation personnel and to follow procedures discussed in this bulletin may cause warranty for such products to be void.

Andrew requires that all RET installations be pre-tested and configured prior to installation. Failure to conduct pre-test and pre-installation procedures defined by Andrew will void warranty.

SAFETY NOTICE

The installation, maintenance, or removal of an antenna requires qualified, experienced personnel. Andrew installation instructions are written for such installation personnel. Antenna systems should be inspected once a year by qualified personnel to verify proper installation, maintenance, and condition of equipment.

Andrew disclaims any liability or responsibility for the results of improper or unsafe installation practices.

Do not install near power lines. Power lines, telephone lines, and guy wires look the same. Assume any wire or line can electrocute you.

Do not install on a wet or windy day or when lightning or thunder is in the area. Do not use metal ladder.

Wear shoes with rubber soles and heels. Wear protective clothing including a long-sleeved shirt and rubber gloves.

Installation Training Available at Andrew Institute

WARNING

It is very important to disconnect the ATC200-LITE-USB controller from the system after each use to prevent permanent damage to the system.

Electric Static Discharge (ESD) can damage or destroy the hardware equipment used for the ATC200-LITE-USB Teletilt® System. ESD can occur during handling of equipment without the user feeling a shock. The following precautions should be taken to prevent ESD.

Figure 1. ESD Wrist Strap.

1. Wear an ESD wrist strap (Figure 1) and/or use a test lead (ground), such as a single-wire conductor with a series resistance of 1 megohm equipped with alligator clips on each end. In using a ground, one end of the alligator clip is connected to a grounded equipment frame and the other end of the alligator clip is touched with a bare hand.
2. Other precautions the user may take to reduce the risk of ESD are:
   - avoid wearing clothing that conducts static electricity, such as wool
   - remove all jewelry
   - avoid handling equipment during an electrical storm
3. Before opening a package containing an electrostatic unit or an electrostatic sensitive device/ assembly, clip the free end of a test lead to the package. Leave the other end connected to the equipment frame or other ESD ground. This will cause any static electricity which may have built up on the package to discharge. Keep the unit package grounded during removal or placement of equipment in the package.
4. Minimize handling of ESDS (Electric Static Discharge Sensitive) equipment. Keep replacement equipment in the electrostatic-free packaging (with ground established between packaging and equipment frame) until needed. Repairable ESD equipment should be placed in the electrostatic-free packaging (with ground connecting package to equipment frame) upon removal from ATC200-LITE-USB system. ESD equipment should only be transported and stored in ESD protective packaging.
5. Always avoid unnecessary movement of body, such as scuffing feet across flooring, when handling ESDS equipment. Such movement will generate additional charges of static electricity.

6. When removing or replacing ESDS equipment, hold the device or assembly through the electrostatic-free wrap, where possible. If this is not possible, lift the device or assembly by its body only. Do not touch component leads, connector pins, or any other electrical connections or paths, even though they are covered by conformal coating.
7. Do not allow ESDS equipment to come in contact with clothing or other ungrounded materials that may have an electrostatic charge. Charges on non-conductive material are not equal. For instance, a plastic storage bag may have a –10,000 volt potential 1/2 inch from a +15,000 volt potential with many such charges all over the bag. Do not hand ESD equipment to another person until it is safely packaged for protection for ESD.
8. When moving ESDS equipment, always touch the surface on which it rests with bare skin for at least one second before lifting. Before setting it on any surface, touch the surface with your free hand for at least one second. Contact with bare skin provides a safe discharge path for charges accumulated while you are moving around.
9. While servicing equipment containing ESD devices, do not handle or touch materials such as plastic, vinyl, synthetic textiles, polished wood, fiberglass, or similar items that can generate static charges; unless you repeat the grounding process with bare hands after contacting these materials.
10. Where possible, avoid repairs that require soldering at the equipment level. Soldering irons must have heater/tips assemblies that are grounded to an electrical ground. Do not use standard plastic solder suckers (special antistatic solder suckers are commercially available).
11. Ground the leads of test equipment momentarily before you energize the test equipment and before you probe ESD devices or assemblies.
12. Work benches used for setting ESDS equipment should have ESD protective work surfaces. These work benches should also have personnel ground straps. These straps prevent discharge of static electricity from personnel handling ESDS items on the work bench surface. The work bench surface should be connected to a ground through a ground cable. The resistance in the bench top ground cable should be located at or near the point of contact with the top of the work bench. The resistance should be high enough to limit any leakage current to 5 milliamperes or less. This takes into consideration the highest voltage source within reach of grounded people and all the parallel resistances to ground, such as wrist ground straps, table tops, and conductive flooring.

Table of Contents

Revision History i

Notices and Precautions ii

Part 1 – Initial Setup

Section 1 Program Installation 1-1
1.0 System Requirements/Recommendations 1-1
1.1 Program Download and Installation 1-1

Section 2 Controller Setup 2-1
2.1 System Description 2-1
2.2 Controller Communication 2-2
2.3 Controller Setup 2-3
2.4 Program Startup 2-7

Part 2 – Uploading Firmware

Section 3 Uploading Firmware 3-1
3.0 Overview 3-1
3.1 Installing Firmware Updates to Actuators 3-1
3.2 Installing Firmware Updates to TMA devices 3-2
3.3 Updating the Antenna Definition File 3-5
3.4 Specifying an Antenna Definition File 3-5

Part 3 – Device Discovery for All Types of Antennas

Section 4 Device Discovery and Addressing 4-1
4.1 Device Search 4-1
4.2 Device Information Views 4-5
4.2.1 All Devices View 4-5
4.2.2 RET Devices View 4-6
4.2.3 TMA Devices View 4-7
4.3 Addressing 4-8

Part 4 – Operating Instructions for Standard Antennas with Attached Actuators

Section 5 Actuator Protocol Mode Switching 5-1
5.0 Protocol Mode switching for ATM3 devices 5-1
5.0.1 Using AISG Reset Option Tools 5-1
5.0.2 Switching a Single ATM200-002 to Ericsson Protocol 5-4
5.1 Protocol Mode switching for AccuRET devices 5-6
Section 6 Device Configuration 6-1
Section 7 Changing the Electrical Downtilt on a Single Antenna 7-1
Section 8 Changing the Electrical Downtilt on a Group of Antennas 8-1

Part 5 – Operating Instructions for Antennas with Multiple Integrated Actuators

Section 9 Switching Operating Modes for Multiple Integrated Actuators 9-1
Section 10 Device Configuration for Antennas with Multiple Integrated Actuators 10-1
Section 11 Adjusting the Electrical Downtilt on a Single Antenna Equipped with Multiple Integrated Actuators 11-1
Section 12 Adjusting the Electrical Downtilt on a Group of Antennas Equipped with Multiple Integrated Actuators 12-1

Part 6 – Operating Instructions for SmartBeam™ Antennas

Section 13 Device Configuration with SmartBeam™ Antennas 13-1
Section 14 Changing the Electrical Downtilt on a Single SmartBeam™ Antenna 14-1
Section 15 Changing the Boresight (Pan) on a Single SmartBeam™ Antenna 15-1
Section 16 Changing the Beamwidth (Fan) on a Single SmartBeam™ Antenna 16-1
Section 17 Changing the Electrical Downtilt on a Group of SmartBeam™ Antennas 17-1

Part 7 – Saving Reports and Retrieving Alarm Status

Section 18 Saving a Site Report or Site Configurations 18-1
18.1 Saving/Viewing a Site Report Formatted to Open in Word 18-1
18.2 Saving/Viewing a Site Report Formatted to Open in Excel 18-4

Section 19 Device Test, Alarm Status, and Device Information 19-1
19.1 Obtaining Device Information 19-2
19.2 Retrieving Current Alarm Status 19-2
19.3 Clearing All Alarms on a Device 19-3
19.4 Executing a Self Test Movement for a Device 19-3

Section 20 Alarm Status for TMA 20-1
20.1 Alarm Reported by TMA 20-1
20.2 Retrieving Current Alarm from TMA 20-3
20.3 Clearing All Alarms on TMA 20-4

Part 8 – Operating Instructions for Tower Mounted Amplifiers (TMA)

Section 21 Device Configuration with TMA 21-1

Section 22 Changing the Gain on a Variable-Gain TMA 22-1

Section 23 Changing the Operating Mode on a TMA 23-1

Part 9 – Appendix

Appendix A Letter of Compliance A-1

Appendix B Declaration of Conformity B-1

Site Configuration Worksheet ..... (Tear Out Page)

This page intentionally left blank.

Part 1

Initial Setup

This page intentionally left blank.

Section 1
Program Installation

The controller MUST remain disconnected from the computer and its power supply during the ATC Lite software installation process.

1.0 System Requirements/Recommendations

Required:
- Windows® 2000 or XP operating systems, or newer
- Available working USB port (USB1.1 or USB2.0)

Recommended:
- Screen resolution of 1024 x 768, or higher

1.1 Program Download and Installation

If you are upgrading the ATC Lite software from an earlier installed version, it is recommended that the earlier version is uninstalled before the new version is installed. Download the ATC Lite software zip file.

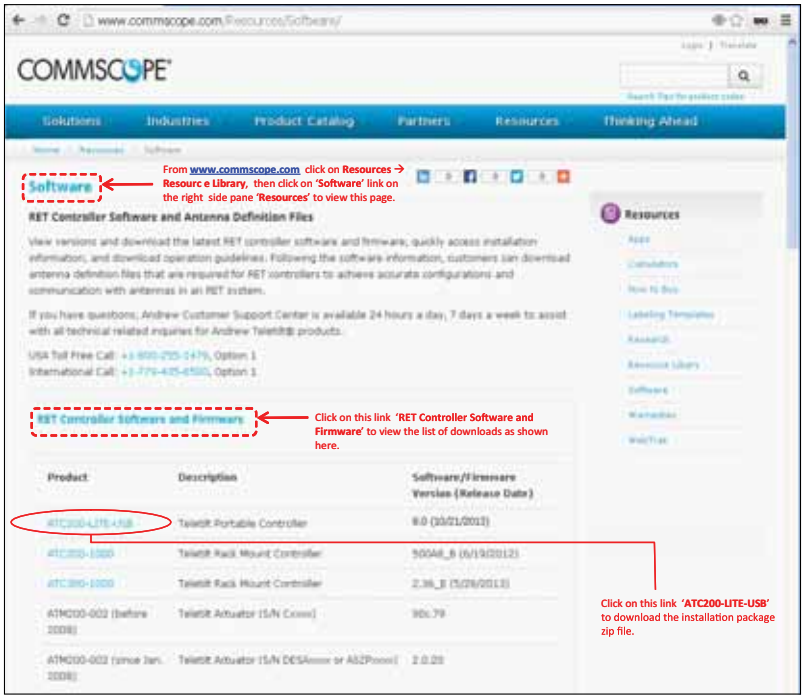
COMMSCOPE
Solutions
Industries
Product Catalog
Partners
Resources
Thinking Ahead
From www.commscope.com click on Resources → Resource e Library, then click on 'Software' link on the right side pane 'Resources' to view this page.
Software
RET Controller Software and Antenna Definition Files
Resources
Click on this link 'RET Controller Software and Firmware' to view the list of downloads as shown here.
RET Controller Software and Firmware
Product
Description
Software/Firmware Version (Release Date)
Click on this link 'ATC200-LITE-USB' to download the installation package zip file.

Figure 1-1. Downloading ATC Lite Software.

Microsoft, Encarta, MSN, and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

1. Download the ATC Lite software zip file. From the **www.commscope.com** click on the **Resources** drop down and then on **RESOURCE LIBRARY** link, then select the link **Software** on the right side pane named **Resources**. In the **Software** page click on the link **RET Controller Software and Firmware** to view the download list.

   Select the **ATC200-LITE-USB** link to download the installation zip file (See Figure 1-1).

2. This zip file can be placed in any directory on the PC's local C:\ drive. Double-click on the zip file to extract the ATC Lite setup file and its supporting installation documentation.

   Do not connect the ATC200-LITE-USB controller to the computer at anytime during the software installation process.

3. Double click on the setup file (eg. **ATCLite80Setup.msi**) to begin the installation process. Note that the number shown in the filename represents the software release version.

   During the program installation process, a single antenna definition file and additional support files will self-extract into the same directory with the program file, and a program icon will be placed on the computer's desktop. The antenna definition file provides the program with an updated drop down list of antennas compatible with the ATC200-LITE-USB controller. Tilt parameters for each antenna are included in the antenna definition file to show the tilt range for each antenna and to communicate instructions to the antenna/actuator when tilt adjustments are made from the controller. Latest firmware files for Tower Mounted Amplifiers (TMA) and USB driver files are available

4. Follow the on-screen prompts, as shown in Figures 1-2 through 1-5.

5. This installation process automatically installs the relevant USB drivers (32 bit or 64 bit) for con necting the ATC200-Lite-USB device through USB connection. Proceed to Section 2.3, Control ler setup for further instructions for connecting using serial or USB.

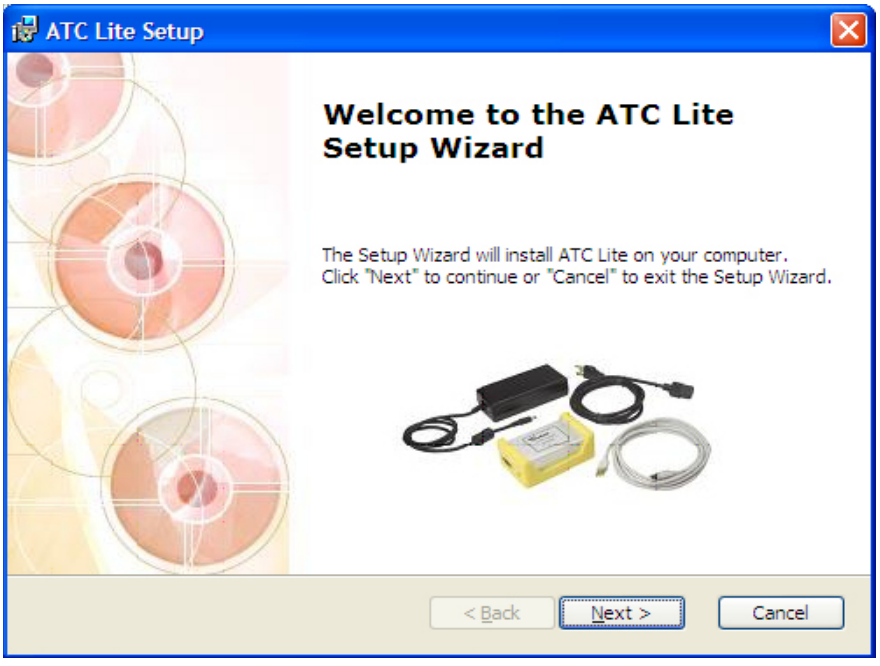
ATC Lite Setup
Welcome to the ATC Lite Setup Wizard
The Setup Wizard will install ATC Lite on your computer.
Click "Next" to continue or "Cancel" to exit the Setup Wizard.
< Back
Next >
Cancel

Figure 1-2. ATC Lite Software Setup Wizard.

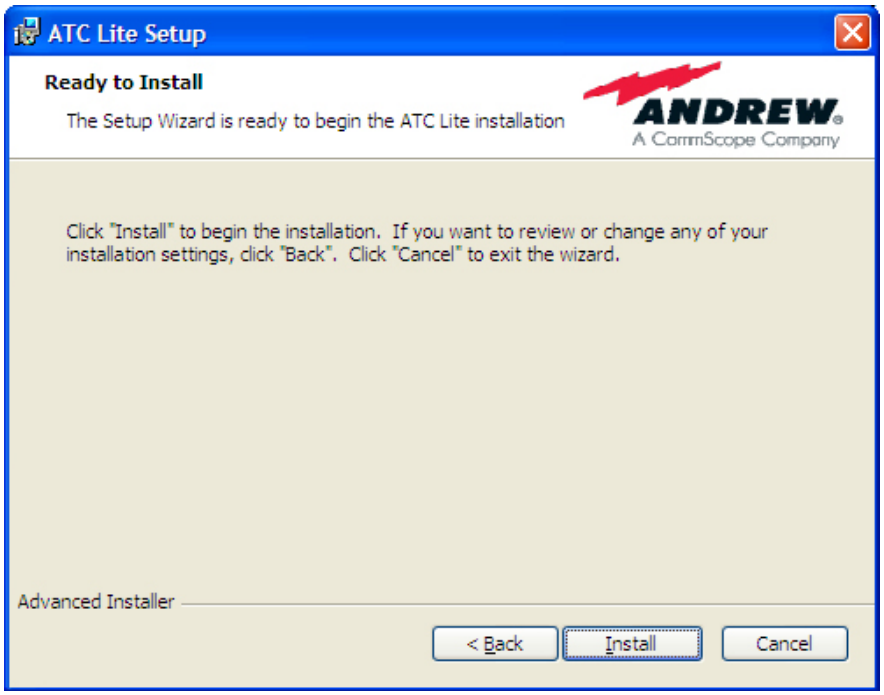
ATC Lite Setup
Ready to Install
The Setup Wizard is ready to begin the ATC Lite installation
ANDREW
A CommScope Company
Click "Install" to begin the installation. If you want to review or change any of your installation settings, click "Back". Click "Cancel" to exit the wizard.
Advanced Installer
< Back
Install
Cancel

Figure 1-3. ATC Lite Software setup.

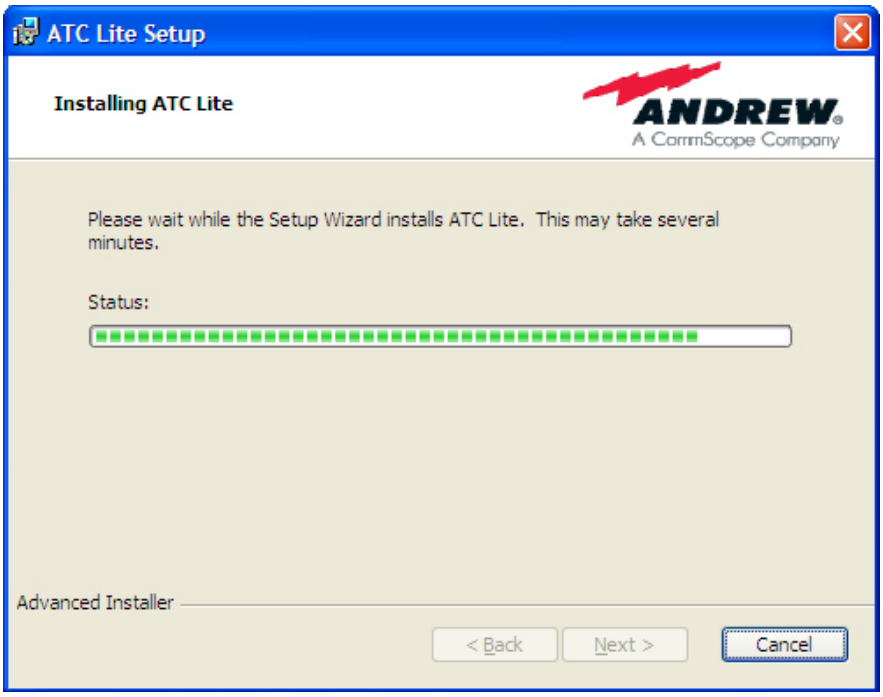

Figure 1-4. Status for ATC Lite Software Installation.

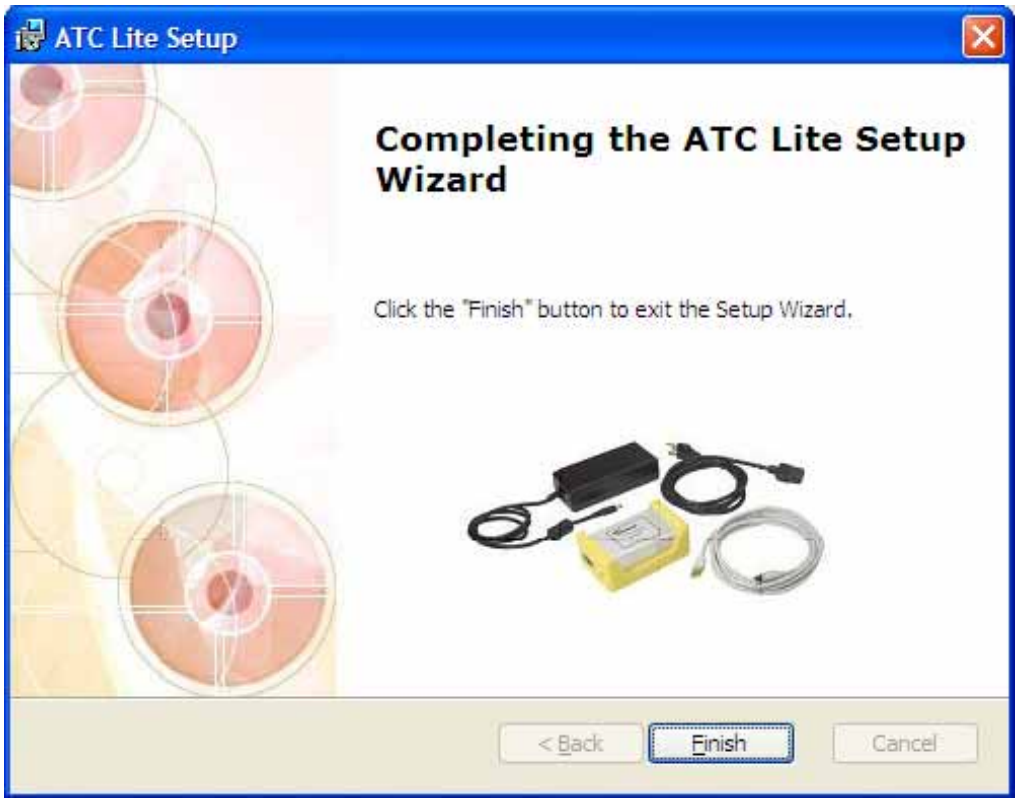

Figure 1-5. Completing ATC Lite Software Installation.

This page intentionally left blank.

Section 2
Controller Setup

2.1 System Description

The ATC200-LITE-USB is an antenna system controller that is used within the Andrew Teletilt® RET system to manage electrical tilt settings of an antenna(s) remotely. Figure 2-1 shows an example of components used in an ATC200-LITE-USB Teletilt system. Follow the procedures described in the installation bulletins included with each component for successful installation for each device.

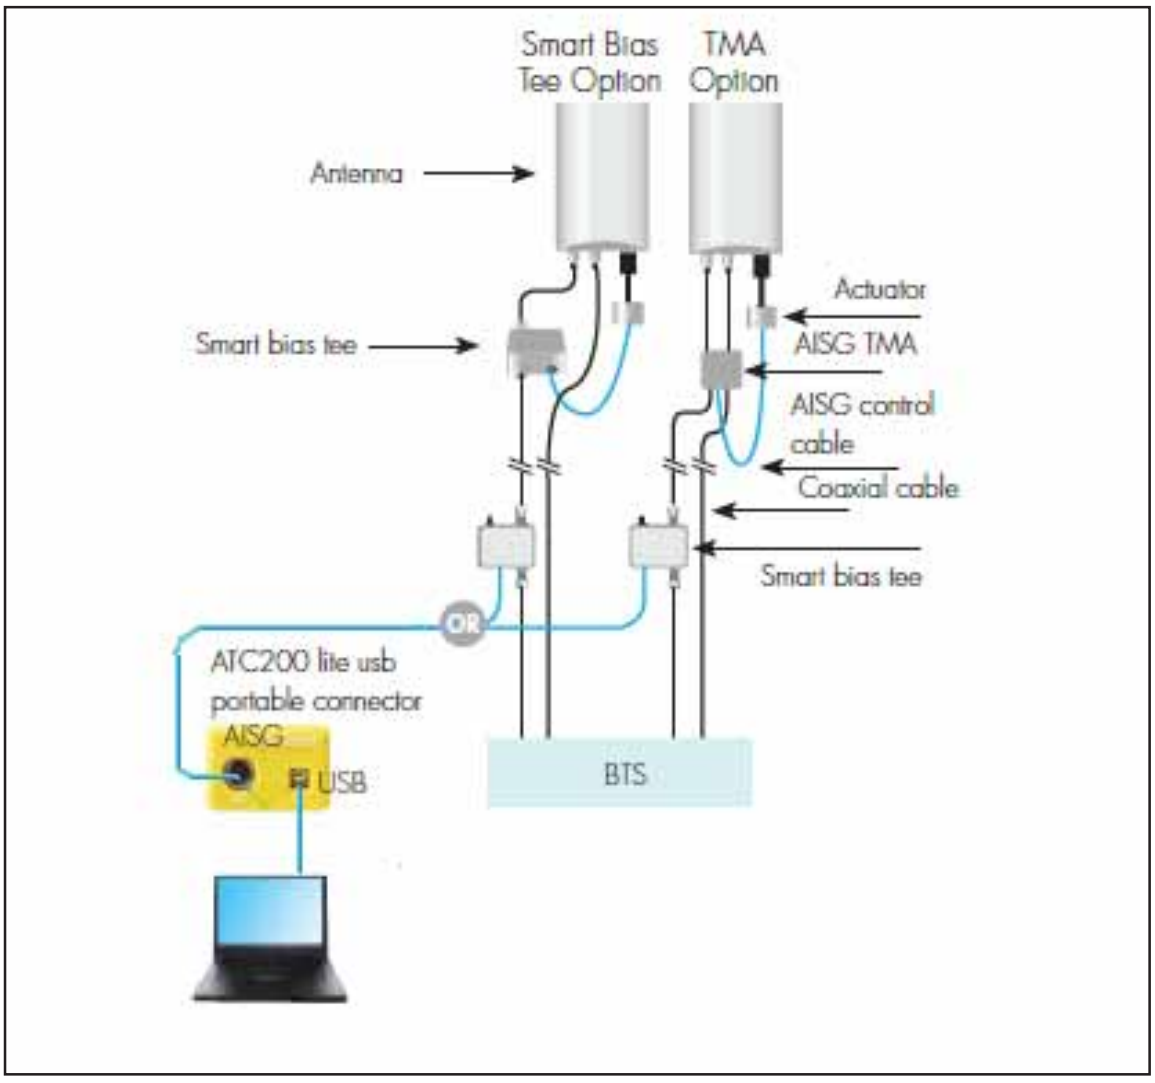

Figure 2-1. Example of Andrew Teletilt® Basic RET System with an ATC200-LITE-USB.

It is recommended that each actuator be connected to the controller while on the ground and tested for proper function. The following site antenna/actuator information should be recorded before the antennas are installed on the tower:

- The serial number for each actuator
- The antenna type (model number) in which the actuator will be operating
- The location the antenna will be positioned at on the tower site

This will assist in configuring the controller to manage tilt operations successfully for each actuator. A site configuration worksheet is provided at the end of this manual to record the antenna/actuator information.

2.2 Controller Communication

The controller serves as an interface between a local PC/laptop and the ATM200 RET actuator/antenna system. The ATC200-LITE-USB controller provides signal level conversion from a PC to RS–485 (used in the ATM200 actuators), as well as power to the ATM200 actuators that are attached to the antennas. LEDs on the controller are used to indicate power and data communication. The ATC200-LITE-USB controller is equipped with a USB port, as well as a RS–232 serial port for flexibility in connecting to a PC. See Figures 2-2 and 2-3.

Note that although data is stored in the actuator, it can not be saved in the controller. All site information can be saved on the PC (see Section 13).

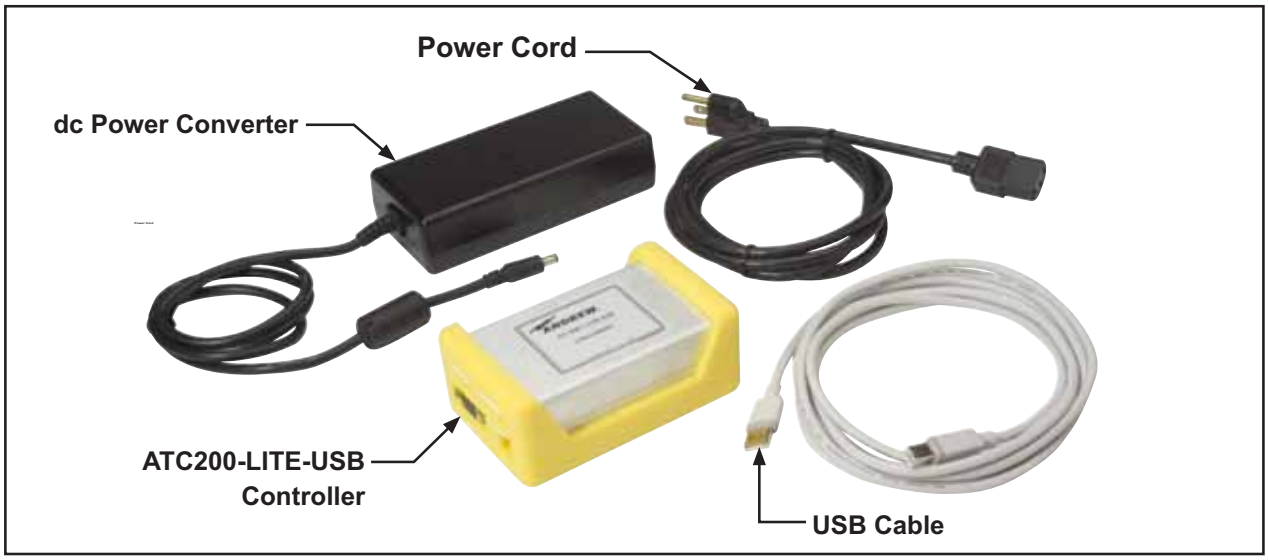

Figure 2-2. ATC200-LITE-USB Controller Kit.

IMPORTANT

DISCONNECT THE ATC200-LITE-USB CONTROLLER FROM THE RET SYSTEM AT THE END OF EACH SESSION TO PREVENT POSSIBLE DAMAGE TO RET DEVICES.

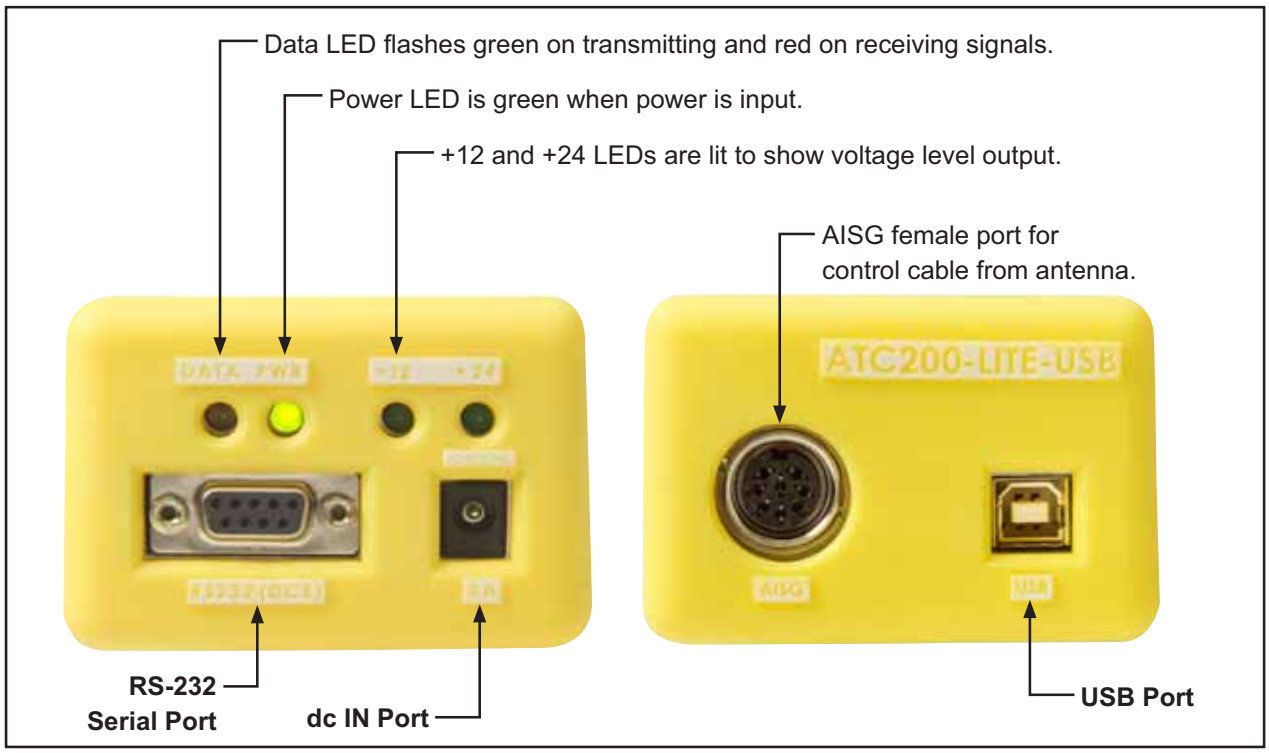
Data LED flashes green on transmitting and red on receiving signals.
Power LED is green when power is input.
+12 and +24 LEDs are lit to show voltage level output.
AISG female port for control cable from antenna.
ATC200-LITE-USB
RS-232 Serial Port
dc IN Port
USB Port

Figure 2-3. ATC200-LITE-USB Controller End Panels.

2.3 Controller Setup

Connect the supplied 24 Vdc power converter to the dc IN port on the controller (Figure 2-3).

Verify that the PWR LED turns green.

1. Using a USB Connection

- Connect the supplied USB cable between the controller and the PC. See Figure 2-3 for port connections on the controller.

> The first time you connect a given ATC200-LITE-USB controller to a given local computer, the drivers will be loaded automatically for the USB connection.

- If you are prompted to locate/install the USB driver for the new device found, then the drivers failed to install during the installation process.
  Proceed as given below.
- Follow the steps shown in Figures 2-4 through 2-6 to successfully install the USB driver for the ATC200-LITE-USB controller.
- See paragraph 2.4 to launch the ATC Lite program and view the USB port assignment.

Microsoft, Encarta, MSN, and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Found New Hardware Wizard
Welcome to the Found New Hardware Wizard
Windows will search for current and updated software by looking on your computer, on the hardware installation CD, or on the Windows Update Web site (with your permission).
Read our privacy policy
Can Windows connect to Windows Update to search for software?
Yes, this time only
Yes, now and every time I connect a device
No, not this time
1. Select No, not this time.
Click Next to continue.
2. Click on Next.
< Back
Next >
Cancel

Figure 2-4. Notification When New Hardware Is Found.

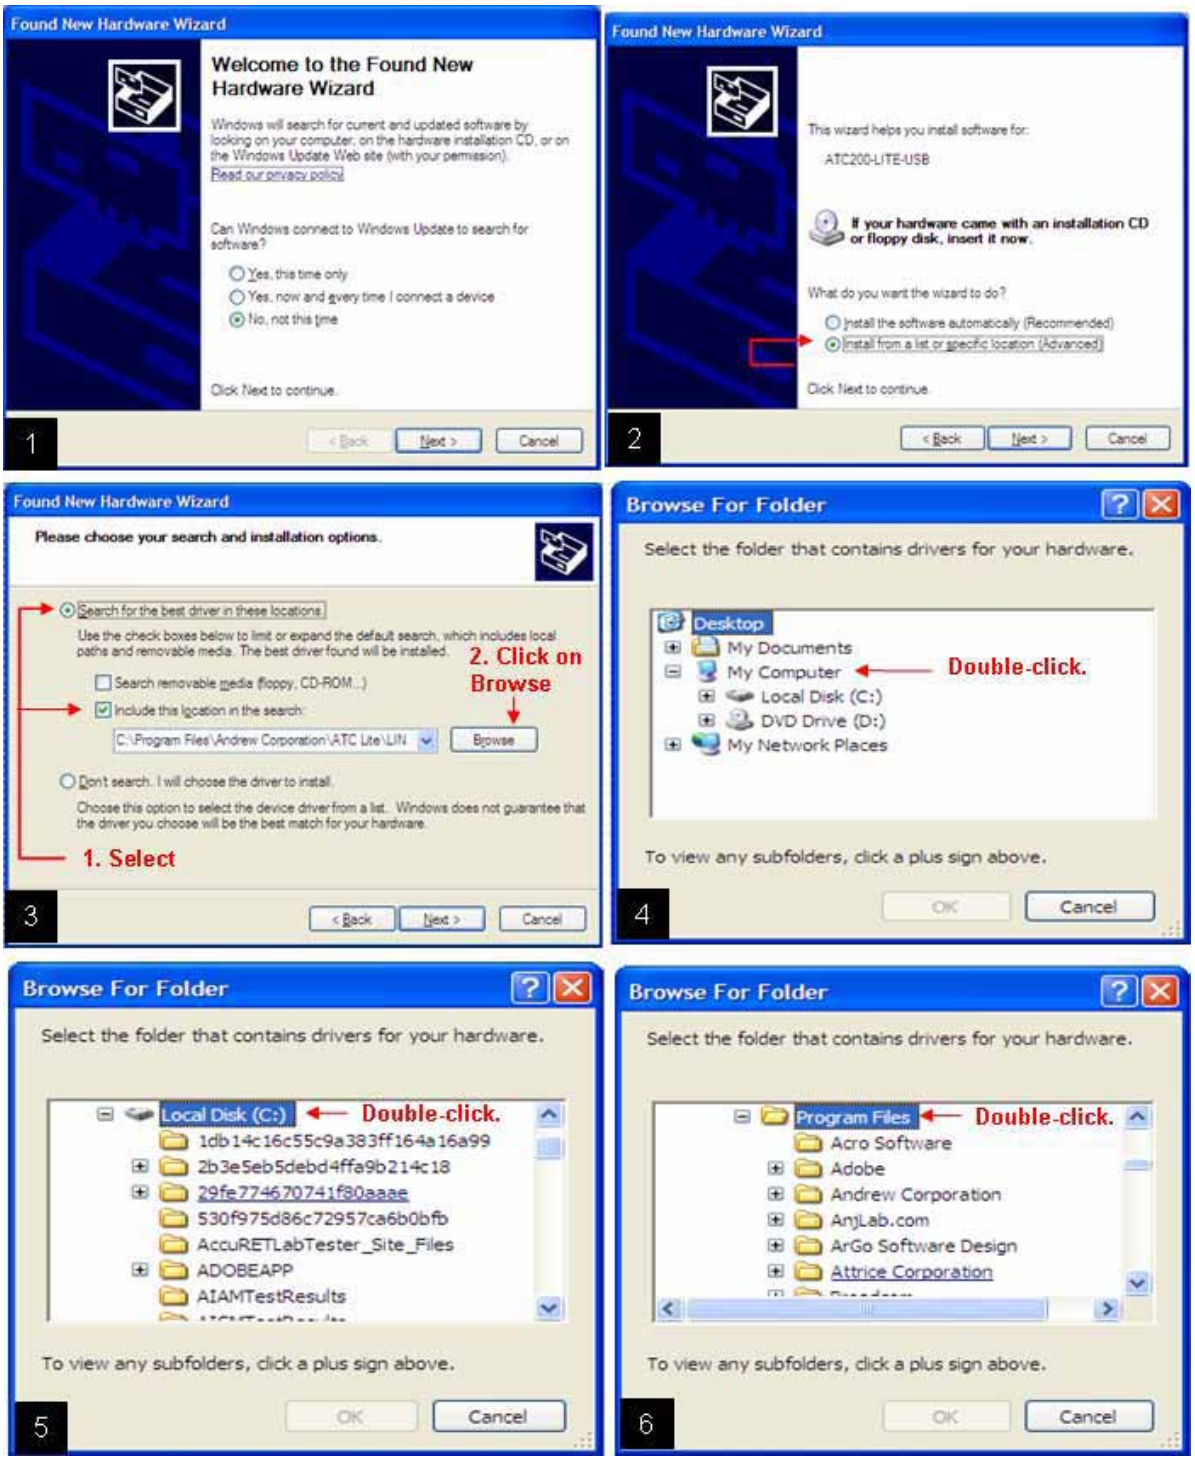
Found New Hardware Wizard
Welcome to the Found New Hardware Wizard
Windows will search for current and updated software by looking on your computer, on the hardware installation CD, or on the Windows Update Web site (with your permission).
Read our privacy policy
Can Windows connect to Windows Update to search for software?
Yes, this time only
Yes, now and every time I connect a device
No, not this time
Click Next to continue.
< Back
Next >
Cancel
1
Found New Hardware Wizard
This wizard helps you install software for:
ATC200-LITE-USB
If your hardware came with an installation CD or floppy disk, insert it now.
What do you want the wizard to do?
Install the software automatically (Recommended)
Install from a list or specific location (Advanced)
Click Next to continue.
< Back
Next >
Cancel
2
Found New Hardware Wizard
Please choose your search and installation options.
Search for the best driver in these locations.
Use the check boxes below to limit or expand the default search, which includes local paths and removable media. The best driver found will be installed.
Search removable media (floppy, CD-ROM...)
Include this location in the search:
C:\Program Files\Andrew Corporation\ATC Lite\LIN
Browse
2. Click on Browse
Don't search. I will choose the driver to install.
Choose this option to select the device driver from a list. Windows does not guarantee that the driver you choose will be the best match for your hardware.
1. Select
< Back
Next >
Cancel
3
Browse For Folder
Select the folder that contains drivers for your hardware.
Desktop
My Documents
My Computer
Double-click.
Local Disk (C:)
DVD Drive (D:)
My Network Places
To view any subfolders, click a plus sign above.
OK
Cancel
4
Browse For Folder
Select the folder that contains drivers for your hardware.
Local Disk (C:)
Double-click.
1db14c16c55c9a383ff164a16a99
2b3e5eb5debd4ffa9b214c18
29fe77467074 1f80aaae
530f975d86c72957ca6b0bfb
AccuRETLabTester_Site_Files
ADOBEAPP
AIAMTestResults
To view any subfolders, click a plus sign above.
OK
Cancel
5
Browse For Folder
Select the folder that contains drivers for your hardware.
Program Files
Double-click.
Acro Software
Adobe
Andrew Corporation
AnjLab.com
ArGo Software Design
Attrice Corporation
To view any subfolders, click a plus sign above.
OK
Cancel
6

Figure 2-5. Locating the ATC Lite Directory.

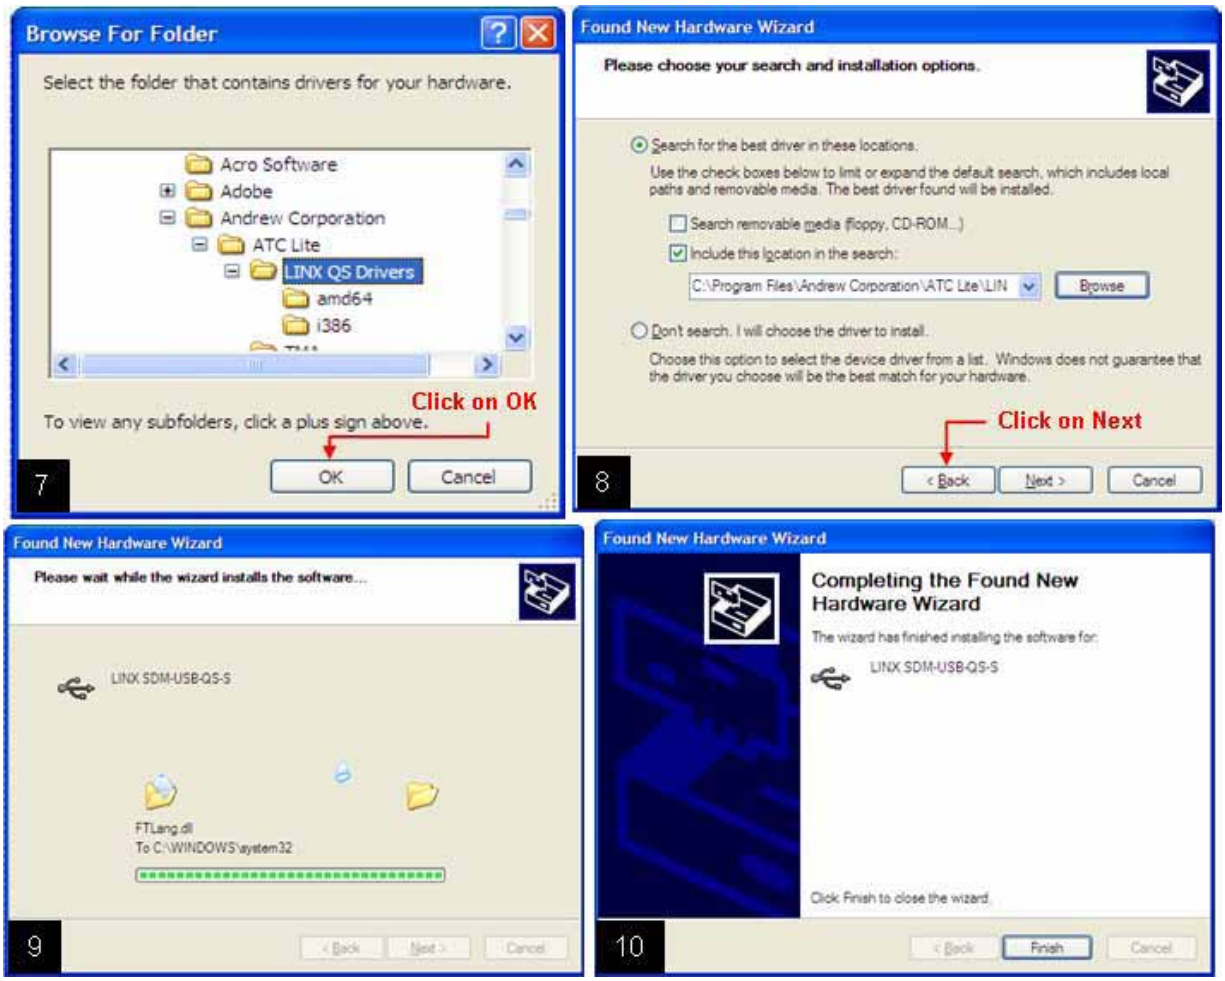
Browse For Folder
Select the folder that contains drivers for your hardware.
Acro Software
Adobe
Andrew Corporation
ATC Lite
LINX QS Drivers
amd64
i386
To view any subfolders, click a plus sign above.
Click on OK
OK
Cancel
7
Found New Hardware Wizard
Please choose your search and installation options.
Search for the best driver in these locations.
Use the check boxes below to limit or expand the default search, which includes local paths and removable media. The best driver found will be installed.
Search removable media (floppy, CD-ROM...)
Include this location in the search:
C:\Program Files\Andrew Corporation\ATC Lite\LIN
Browse
Don't search. I will choose the driver to install.
Choose this option to select the device driver from a list. Windows does not guarantee that the driver you choose will be the best match for your hardware.
Click on Next
< Back
Next >
Cancel
8
Found New Hardware Wizard
Please wait while the wizard installs the software...
LINX SDM-USB-QS-S
FTLang.dll
To C:\WINDOWS\system32
9
Found New Hardware Wizard
Completing the Found New Hardware Wizard
The wizard has finished installing the software for:
LINX SDM-USB-QS-S
Click Finish to close the wizard.
Finish
10

Figure 2-6. Installing USB Driver.

2.4 Program Startup

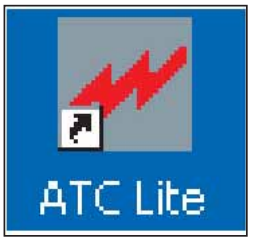

Figure 2-8. ATC Lite Program Icon.

1. Connect the desired length RET control cable between the controller's AISG connector and the first device in the RET system (or actuator that is to be tested before the antenna is mounted on the tower).
2. Double-click on the ATC Lite icon that was placed on the computer's desktop during program installation (Figure 2-8).
3. The controller program will open to its main screen (Figure 2-9).
4. Select **Communication** from the main menu to view the communication port used for the connection. See Figures 2-10 and 2-11 for examples.
5. If you desire to exit the program at this time, select **File→Exit** from the main menu or click on the **X** in the far top right.

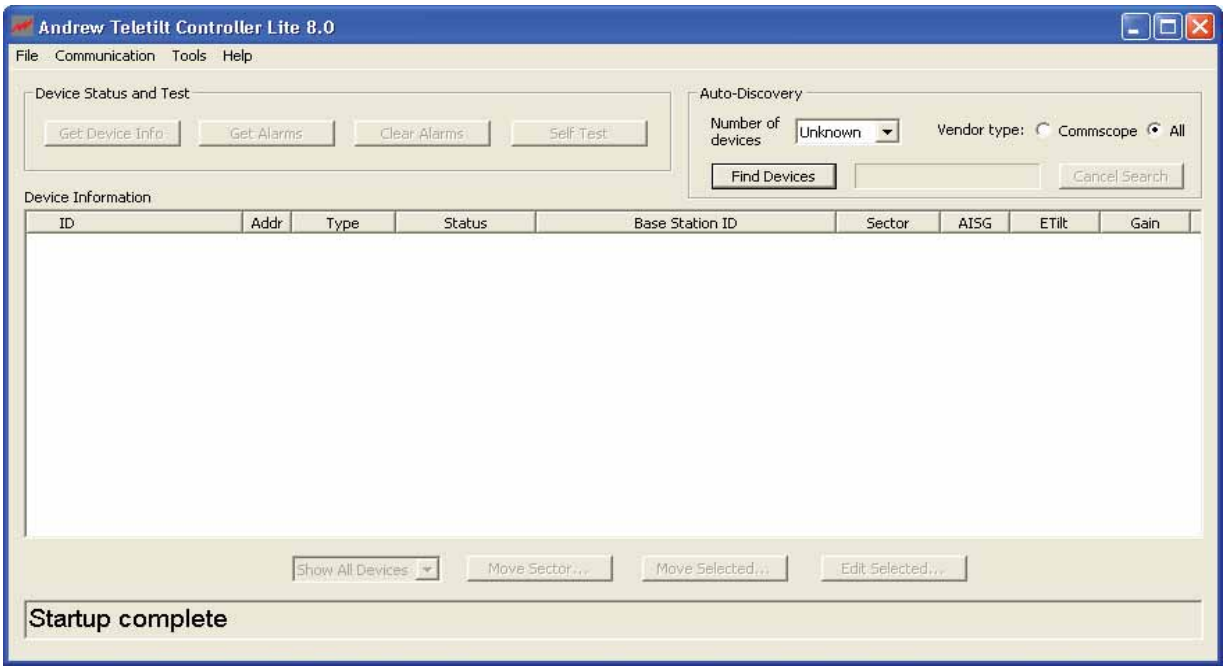

Figure 2-9. ATC Lite Program Main Screen.

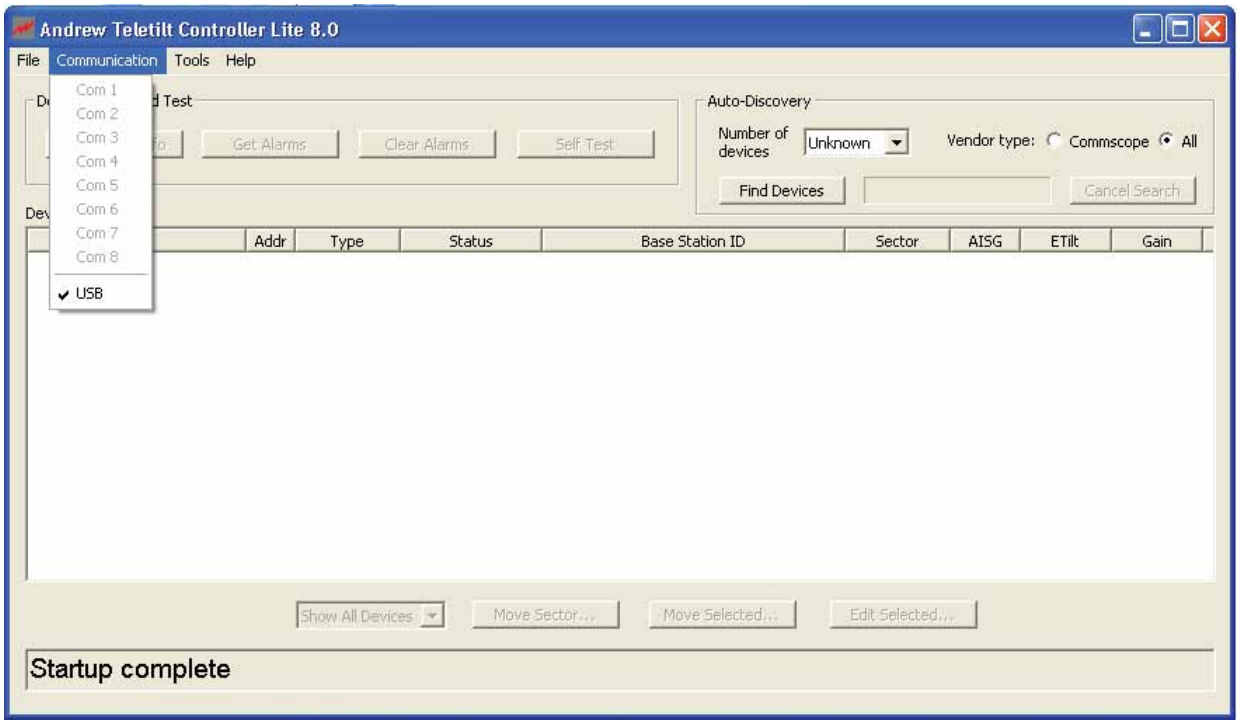

Figure 2-10. USB Port Connection Shown.

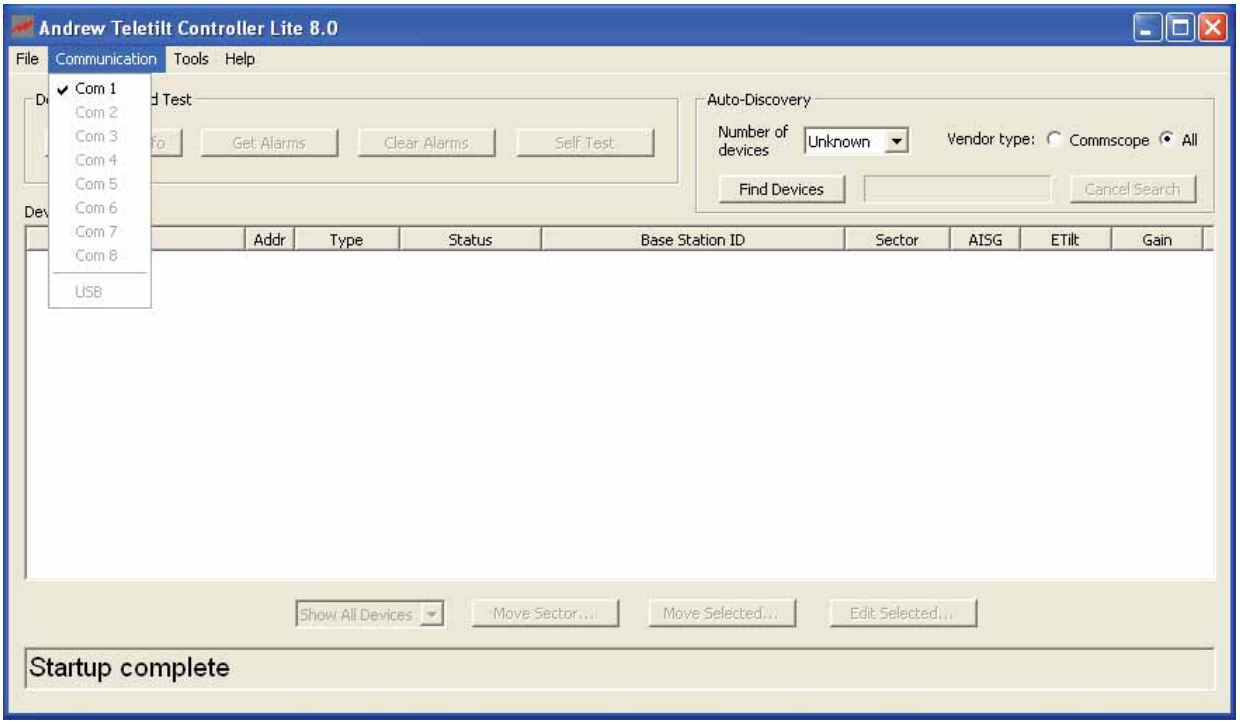

Figure 2-11. COM Port (Serial) Connection Shown.

This page intentionally left blank.

Part 2

Uploading Firmware

This page intentionally left blank.

Section 3
Uploading Firmware

3.0 Overview

Firmware files for the Andrew Teletilt controller and antenna definition file can be downloaded from **Software** web page on the web site www.commscope.com, by Clicking on the **Resources →RESOURCE LIBRARY** link, then select the link **Software** on the right side pane named **Resources**. In the **Software** page click on the link **RET Controller Software and Firmware** to view the download list and from this select link **ATC200-LITE-USB** or **ATClite v8.0 Software** to download the zip for installation.

Note: See Section 1 for installing upgrades to the ATC Lite program.

3.1 Installing Firmware Updates to Actuators

Firmware updates are occasionally made. Actuators are upgraded following a device scan when the newer version firmware is available.

Download Phase is new way to install firmware updates. The actuator update status box appears at the end of the first device search (Figure 3-1). Once the updates are made, this status box is not seen again, until new actuator updates are made available.

If any of the actuators require updates, they are listed by serial number and the time needed for installation. Click **Yes** to confirm updates. If no action is taken, downloads will begin automatically within 60 seconds.

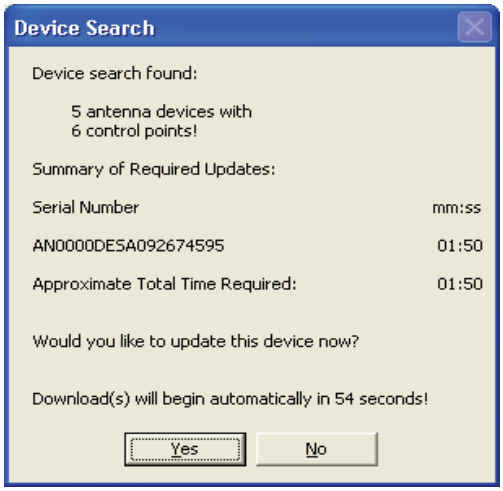

Figure 3-1. Starting Download Phase.

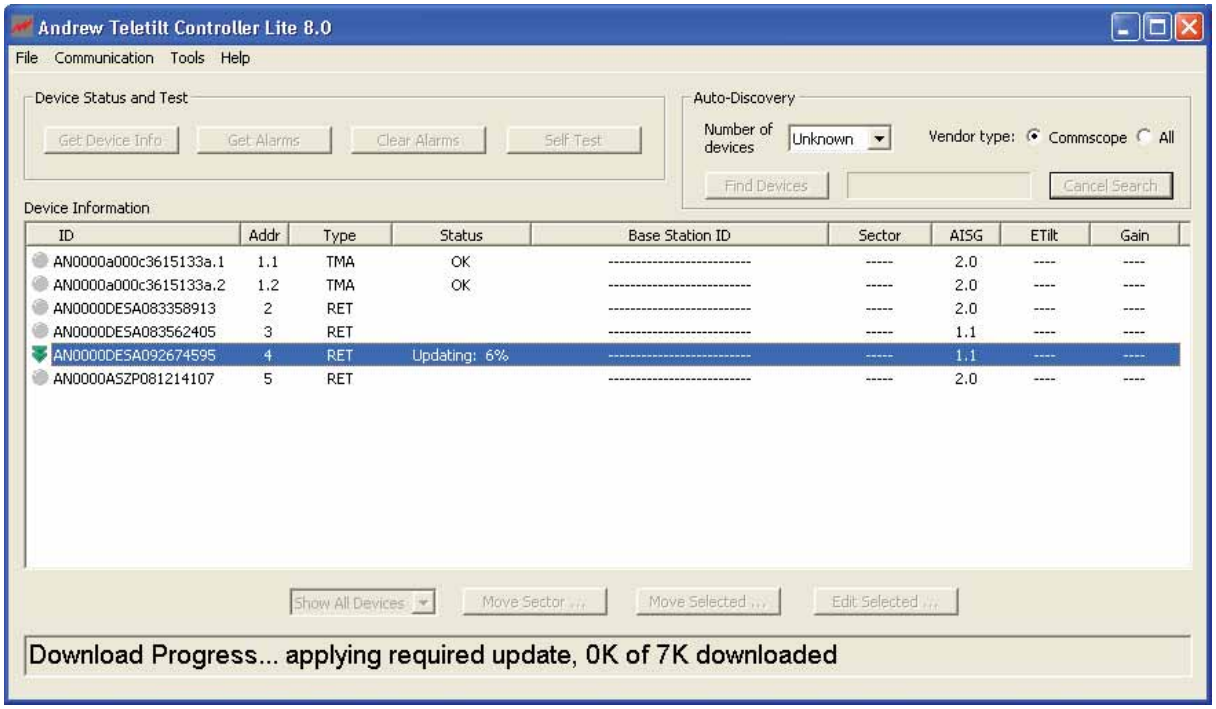
Andrew Teletilt Controller Lite 8.0
File Communication Tools Help
Device Status and Test
Get Device Info
Get Alarms
Clear Alarms
Self Test
Auto-Discovery
Number of devices
Unknown
Vendor type: Commscope All
Find Devices
Cancel Search
Device Information
ID Addr Type Status Base Station ID Sector AISG ETilt Gain
AN0000a000c3615133a.1 1.1 TMA OK ----- 2.0 ---- ----
AN0000a000c3615133a.2 1.2 TMA OK ----- 2.0 ---- ----
AN0000DESA083358913 2 RET ----- 2.0 ---- ----
AN0000DESA083562405 3 RET ----- 1.1 ---- ----
AN0000DE5A092674595 4 RET Updating: 6% ----- 1.1 ---- ----
AN0000ASZP081214107 5 RET ----- 2.0 ---- ----
Show All Devices
Move Sector ...
Move Selected ...
Edit Selected ...
Download Progress... applying required update, 0K of 7K downloaded

Figure 3-2. Applying Firmware Update .

Firmware updates were placed in the **C\:Program Files\Andrew Corporation\ATC Lite** directory of the computer when the ATC Lite **Setup** file is run.

3.2 Installing Firmware updates to TMA devices

Firmware updates are occasionally made to TMA devices. TMA firmware is upgraded by selecting the device from the list following a device scan.

Select the TMA device from list, then right click to view the menu ‘Start firmware update…’ and click or press ENTER to initiate the update. The TMA device that is selected for update is listed with serial number and time needed for update. Click on Yes in the “TMA device firmware update” dialog to proceed with the firmware update (Figure 3-4).

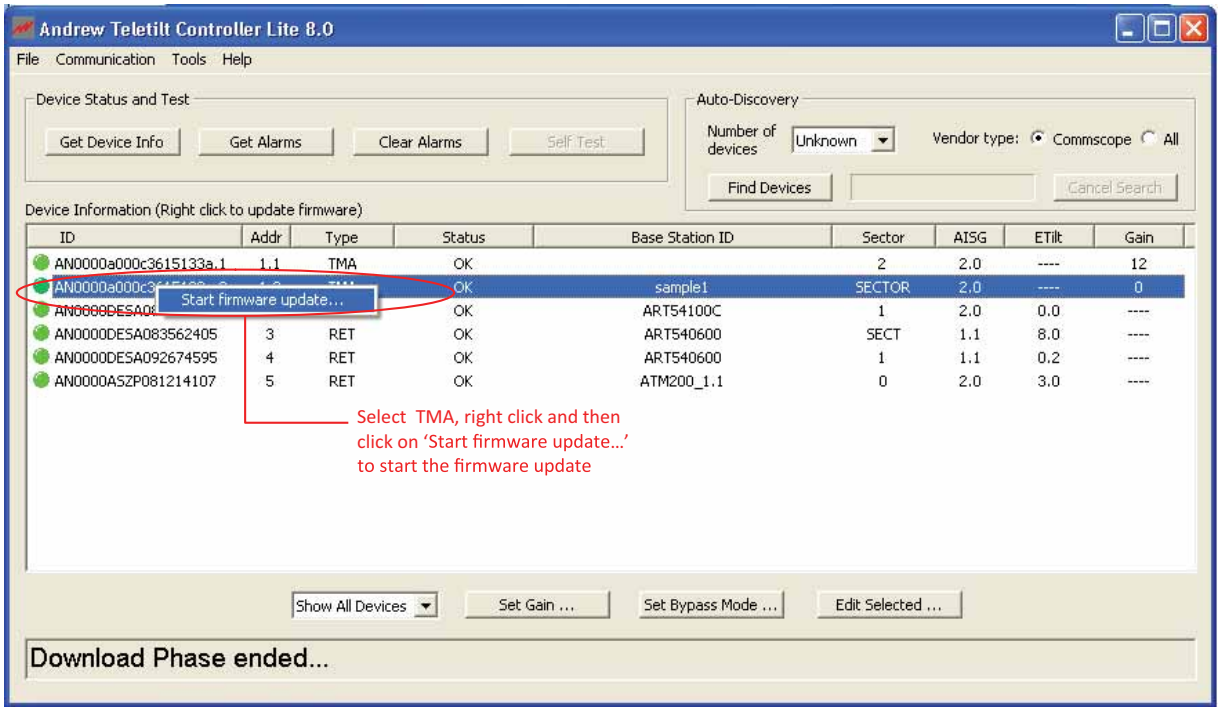
Andrew Teletilt Controller Lite 8.0
File Communication Tools Help
Device Status and Test
Get Device Info
Get Alarms
Clear Alarms
Self Test
Auto-Discovery
Number of devices
Unknown
Vendor type: Commscope All
Find Devices
Cancel Search
Device Information (Right click to update firmware)
ID Addr Type Status Base Station ID Sector AISG ETilt Gain
AN0000a000c3615133a.1 1.1 TMA OK 2 2.0 ---- 12
Start firmware update...
OK sample1 SECTOR 2.0 ---- 0
OK ART54100C 1 2.0 0.0 ----
AN0000DESA083562405 3 RET OK ART540600 SECT 1.1 8.0 ----
AN0000DESA092674595 4 RET OK ART540600 1 1.1 0.2 ----
AN0000ASZP081214107 5 RET OK ATM200_1.1 0 2.0 3.0 ----
Select TMA, right click and then click on 'Start firmware update...' to start the firmware update
Show All Devices
Set Gain ...
Set Bypass Mode ...
Edit Selected ...
Download Phase ended...

Figure 3-3. Initiate firmware upgrade for TMA device.

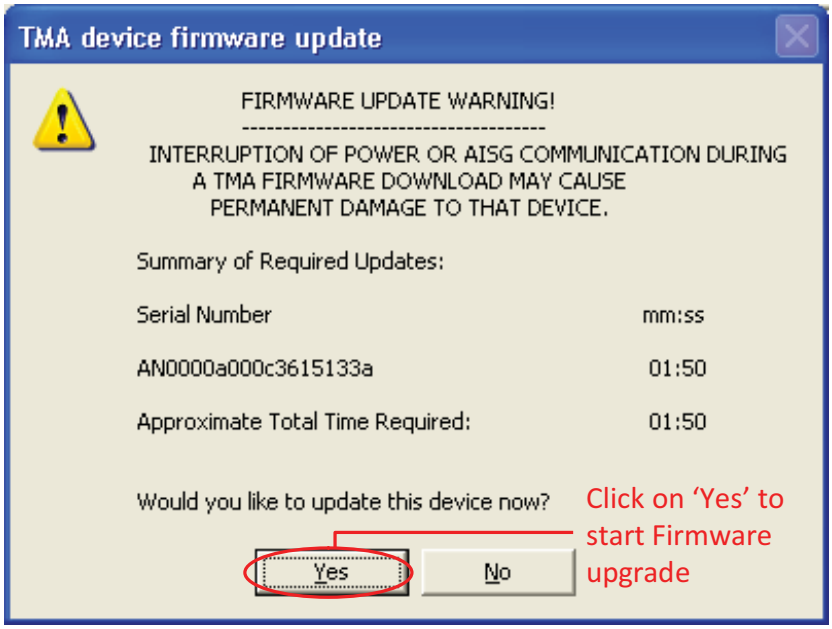
TMA device firmware update
FIRMWARE UPDATE WARNING!
INTERRUPTION OF POWER OR AISG COMMUNICATION DURING A TMA FIRMWARE DOWNLOAD MAY CAUSE PERMANENT DAMAGE TO THAT DEVICE.
Summary of Required Updates:
Serial Number mm:ss
AN0000a000c3615133a 01:50
Approximate Total Time Required: 01:50
Would you like to update this device now?
Yes
No
Click on 'Yes' to start Firmware upgrade

Figure 3-4. Starting TMA firmware update.

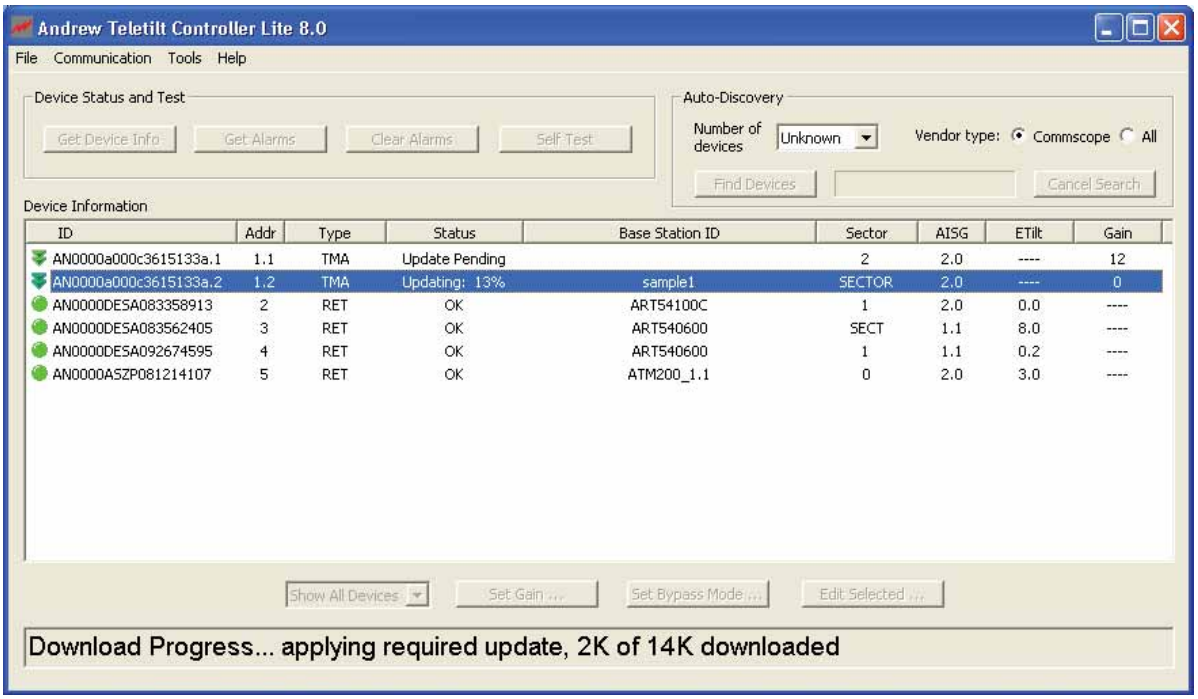
Andrew Teletilt Controller Lite 8.0
File Communication Tools Help
Device Status and Test
Get Device Info
Get Alarms
Clear Alarms
Self Test
Auto-Discovery
Number of devices
Unknown
Vendor type:
Commscope
All
Find Devices
Cancel Search
Device Information
ID Addr Type Status Base Station ID Sector AISG ETilt Gain
AN0000a000c3615133a.1 1.1 TMA Update Pending 2 2.0 ---- 12
AN0000a000c3615133a.2 1.2 TMA Updating: 13% sample1 SECTOR 2.0 ---- 0
AN0000DESA083358913 2 RET OK ART54100C 1 2.0 0.0 ----
AN0000DESA083562405 3 RET OK ART540600 SECT 1.1 8.0 ----
AN0000DESA092674595 4 RET OK ART540600 1 1.1 0.2 ----
AN0000ASZP081214107 5 RET OK ATM200_1.1 0 2.0 3.0 ----
Show All Devices
Set Gain ...
Set Bypass Mode ...
Edit Selected ...
Download Progress... applying required update, 2K of 14K downloaded

Figure 3-5. Firmware update in progress.

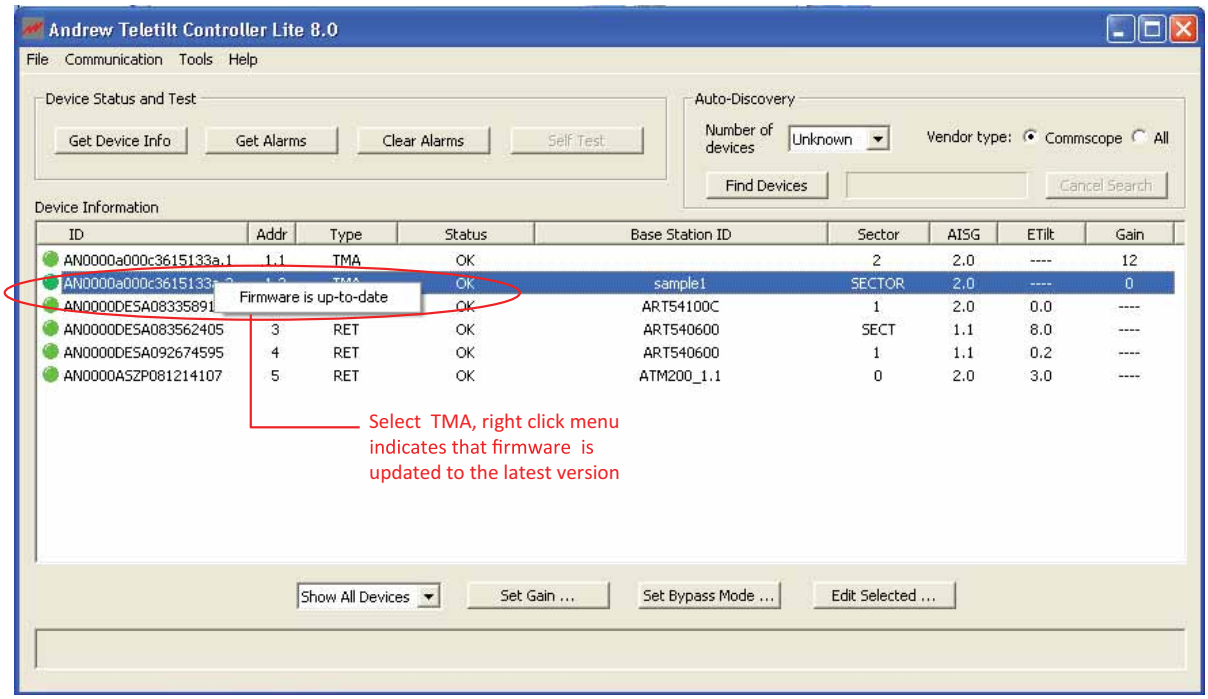
Andrew Teletilt Controller Lite 8.0
File Communication Tools Help
Device Status and Test
Get Device Info
Get Alarms
Clear Alarms
Self Test
Auto-Discovery
Number of devices
Unknown
Vendor type:
Commscope
All
Find Devices
Cancel Search
Device Information
ID Addr Type Status Base Station ID Sector AISG ETilt Gain
AN0000a000c3615133a.1 1.1 TMA OK 2 2.0 ---- 12
sample1 SECTOR 2.0 ---- 0
ART54100C 1 2.0 0.0 ----
AN0000DESA083562405 3 RET OK ART540600 SECT 1.1 8.0 ----
AN0000DESA092674595 4 RET OK ART540600 1 1.1 0.2 ----
AN0000ASZP081214107 5 RET OK ATM200_1.1 0 2.0 3.0 ----
Firmware is up-to-date
Select TMA, right click menu indicates that firmware is updated to the latest version
Show All Devices
Set Gain ...
Set Bypass Mode ...
Edit Selected ...

Figure 3-6. Firmware update status

After successful completion of firmware update the right click on the TMA display “Firmware is up-to-date” indicates that the firmware on TMA is updated to the latest version provided with ATC Lite.

Firmware updates for TMA were placed in the C:\Program Files\Andrew Corporation\ATC Lite\TMA directory of the computer when the ATC Lite setup file is run.

3.3 Updating the Antenna Definition File

The antenna definition file is automatically placed in the **C:\Program Files\Andrew Corporation\ ATC Lite** directory of the computer when the ATC Lite **Setup** file is run. The latest version of the antenna definition file can be separately downloaded from the Commscope website at www.commscope.com (Select Resources -> RESOURCE LIBRARY ->Software->Antenna Definition Files). After the file has been downloaded, double-click on the zip file (e.g. **Andrew_Self-Extracting.zip**) to extract the self-installer files available in the folder Andrew_Self-Extracting (e.g. **RET-ANAT_057_msi.msi and ACRET1-TABLE_005.msi**). Double-click on the extracted self-installer file to have the antenna definition file automatically placed in the **ATC Lite** directory.

During program startup, the ATC200-LITE-USB controller will look in the **ATC Lite** directory for the latest Andrew antenna definition file and automatically load it into the program. Note that if an updated antenna definition file has been placed in the **ATC Lite** directory while the **ATC Lite** program is launched, the program will need to be exited and restarted to recognize the new file.

3.4 Specifying an Antenna Definition File

Although the **ATC Lite** program automatically defaults to use the latest version Andrew antenna definition table file, earlier versions can be loaded by the controller. This may be necessary if the latest antennna file does not list your Andrew antenna model. This feature also provides to load antenna definition table for Andrew AccuRET devices.

1. To select a different antenna definition file, go to **Tools→Antenna Files** from the main menu at the top of the screen (Figure 3-7).
2. Click on the drop down list arrow to select the desired antenna definition file from the list (Figure 3-8) for ATM200 and AccuRET devices respectively.
3. Click **Load File** to load the selected antenna definition files for (Figure 3-8) ATM200 and AccuRET devices. Status of loading the files will be displayed in the **Com-mand Status/Response** window.
4. Click **Close** after the antenna definition files have been loaded successfully.

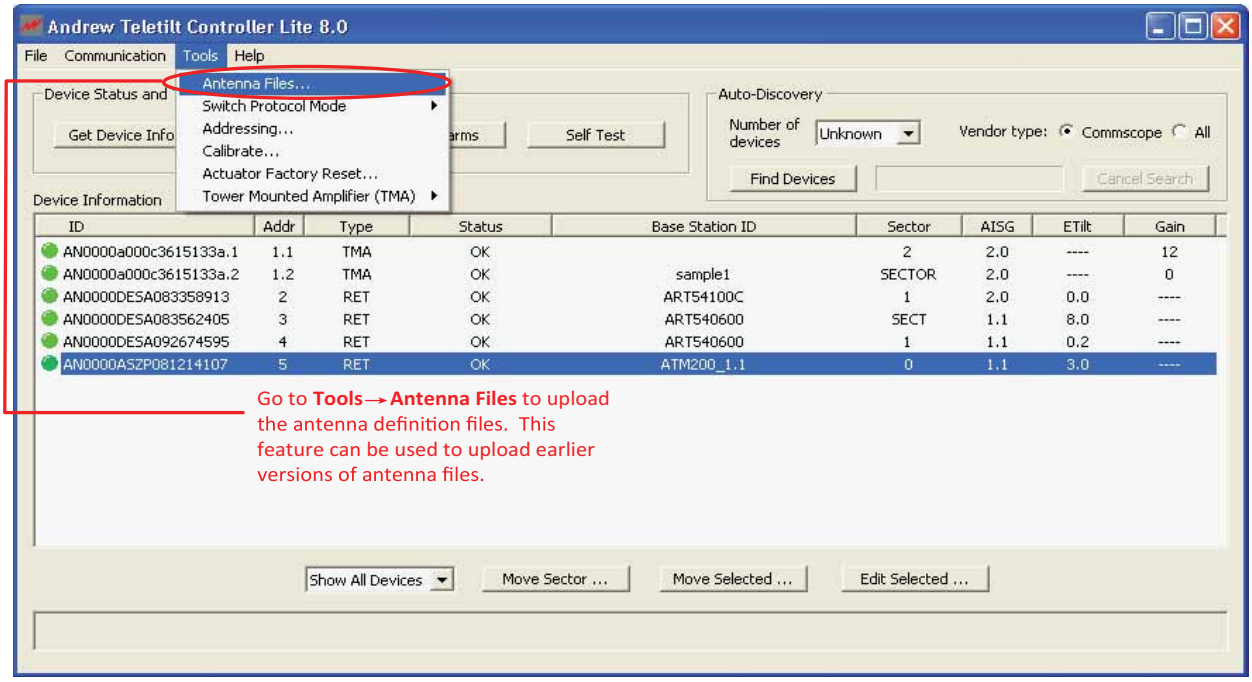

Figure 3-7. Selecting Antenna Files from the Main Menu.

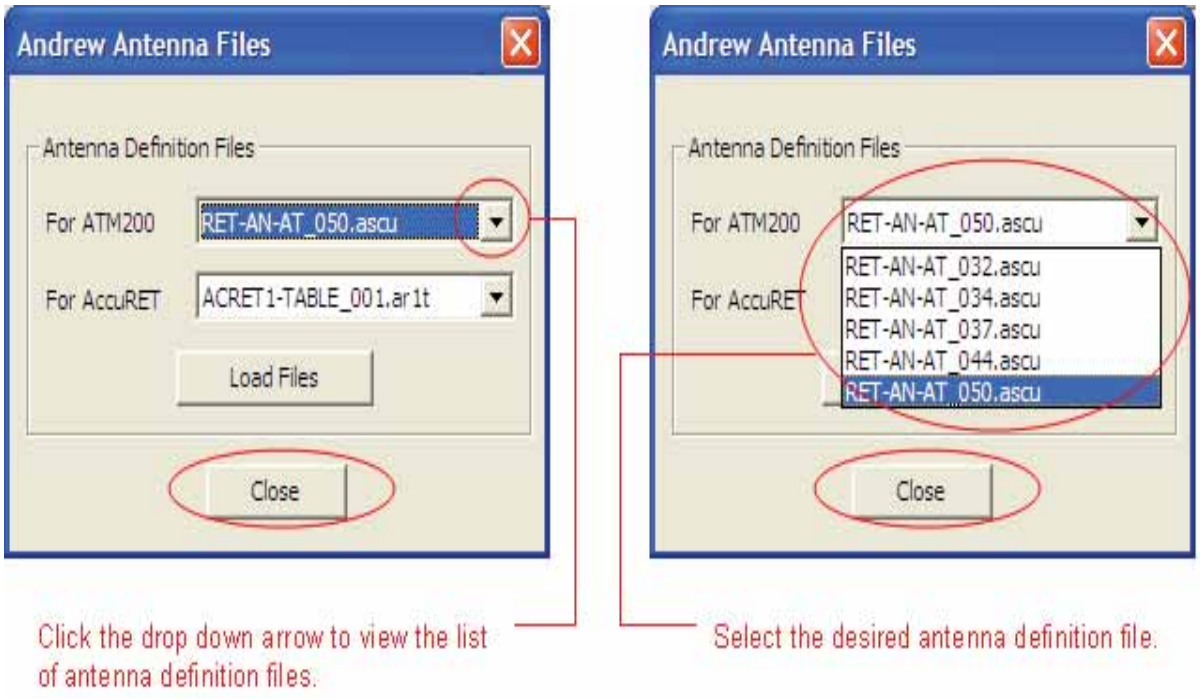

Figure 3-8. Antenna Definition Files Drop Down List.

This page is intentionally left blank.

Part 3

Device Discovery for All Types of Antennas

This page intentionally left blank.

Section 4
Device Discovery and Addressing

4.1 Device Search

A device search is required in order for the program to determine which devices are present on the tower and to retrieve their current configuration parameters. It is important to note that this feature automatically scans and sets each device address to '0' and then readdresses them in the order that they respond to the controller during the device search. Generally, the devices respond in sequential order of their serial number. This feature helps reduce possible conflict issues that could arise during operation later. The device search is controlled by number of devices and vendor type. Initially the device search is set find all the devices available and only Commscope devices. Selecting number of devices for search can significantly reduce the time to complete device search.

Any actuator having an earlier version firmware than used by the controller will be updated after the device search (see Section 3). Firmware update for TMA devices can be carried out manually after the device search (see Section 3).

1. From the program's main startup screen, click **Find Devices** to start the device search (Figure 4-1).

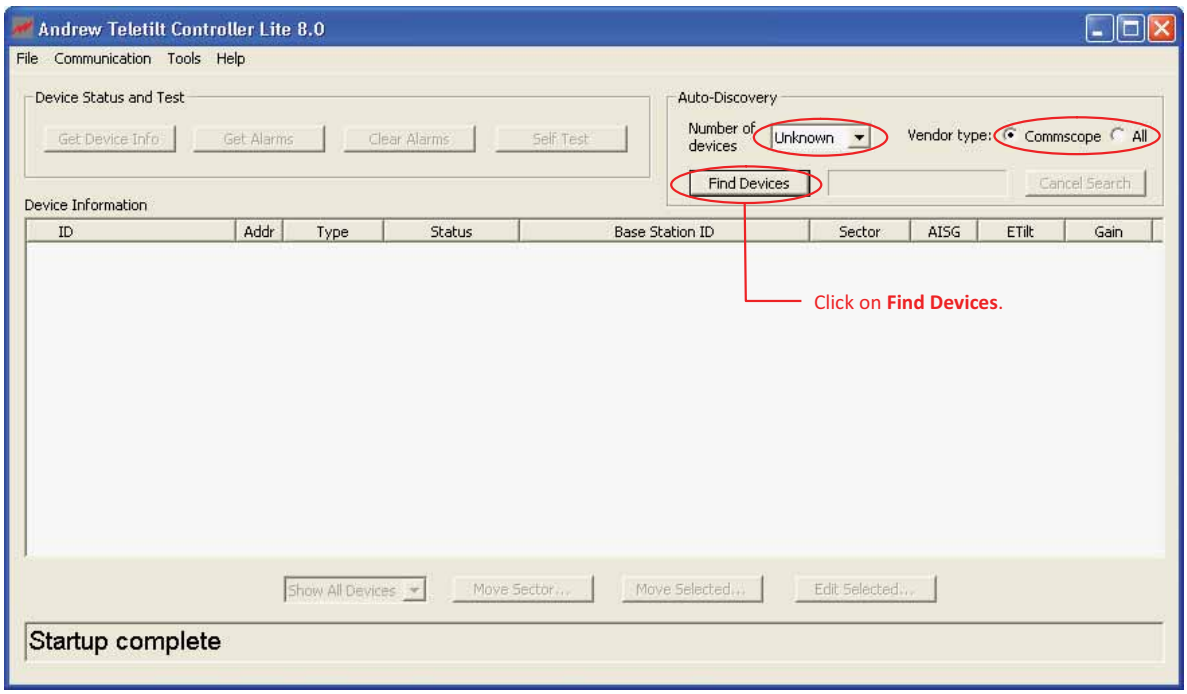

Figure 4-1. Main Startup Screen Ready for Device Search.

2. The **Auto Discovery Bar** (located at the top of the screen) and the **Command Status/Response** window (located at the bottom of the screen) will show the progress/activity during the search (Figure 4-2). As each device is found during the search, the **Command Status/Response** window will show the status of how many devices have been found and the found devices are displayed on screen. Number of devices can be selected for value from 1 to 32 for specific number of devices or “Unknown” for all devices available. Vendor type selection can be for Commscope devices only or all vendor devices including Commscope.

   NOTE: The amount of time the device search takes is dependent upon the number of AISG devices present on the tower. Typically, a device search for a tower site that contains a small number of devices (e.g. 6) will take about 3 minutes. A device search for a tower site with a full complement of devices may take up to 10 minutes.

   The **Cancel Search** button can be used to halt the device search at anytime except during Firmware downloads. Note that if a device search is halted, a new search can be started. To start a new device search, click on **Find Devices** again (Figure 4-2). If a device search is halted, the devices found will be displayed in the list and proceed to required firmware download followed by device information retrieval.

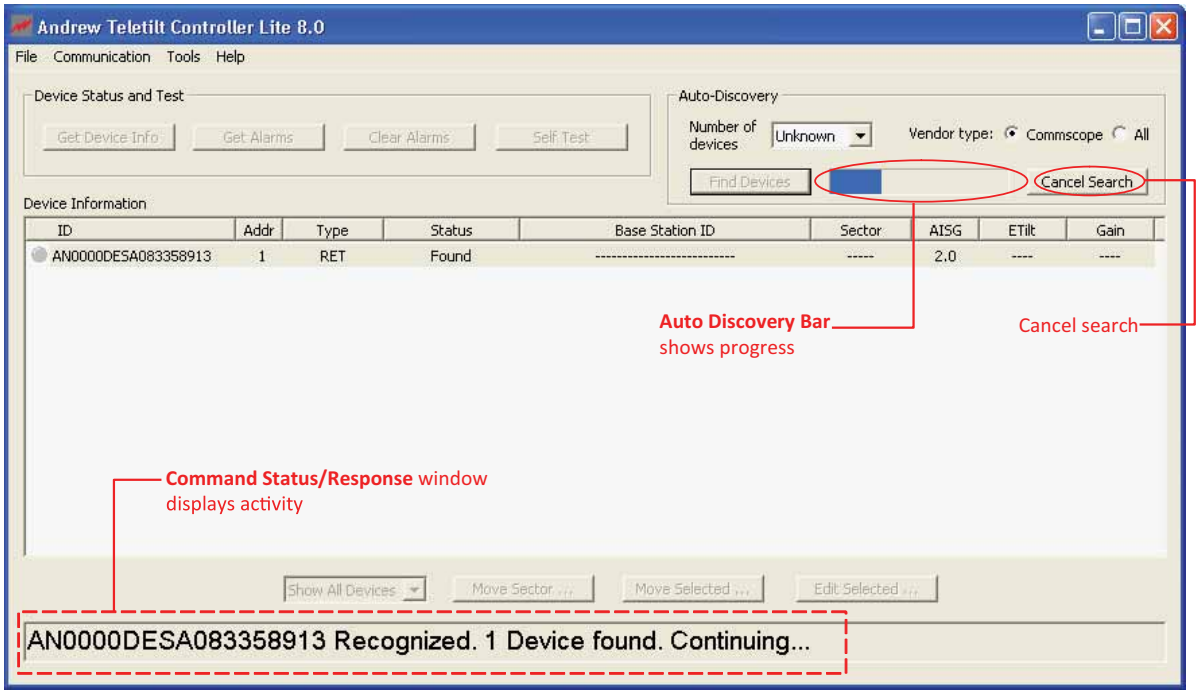

Figure 4-2. Progress Shown During Device Search.

3. At completion of the search, a notification will appear showing the number of devices found (Figure 4-3). This example shows 5 devices and 7 total sub-devices (or control points) found. Click **OK**. Devices found during the device search will be displayed in the main screen (Figure 4-4). The default view of the device list displaying device information is 'Show All Devices' as shown Figure 4-4. See next section for details on device list views section.

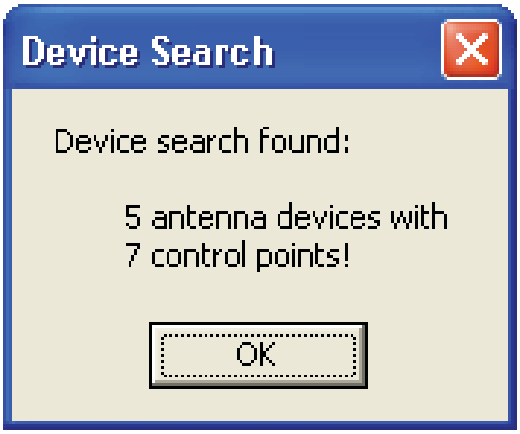

Figure 4-3. Device Search Results.

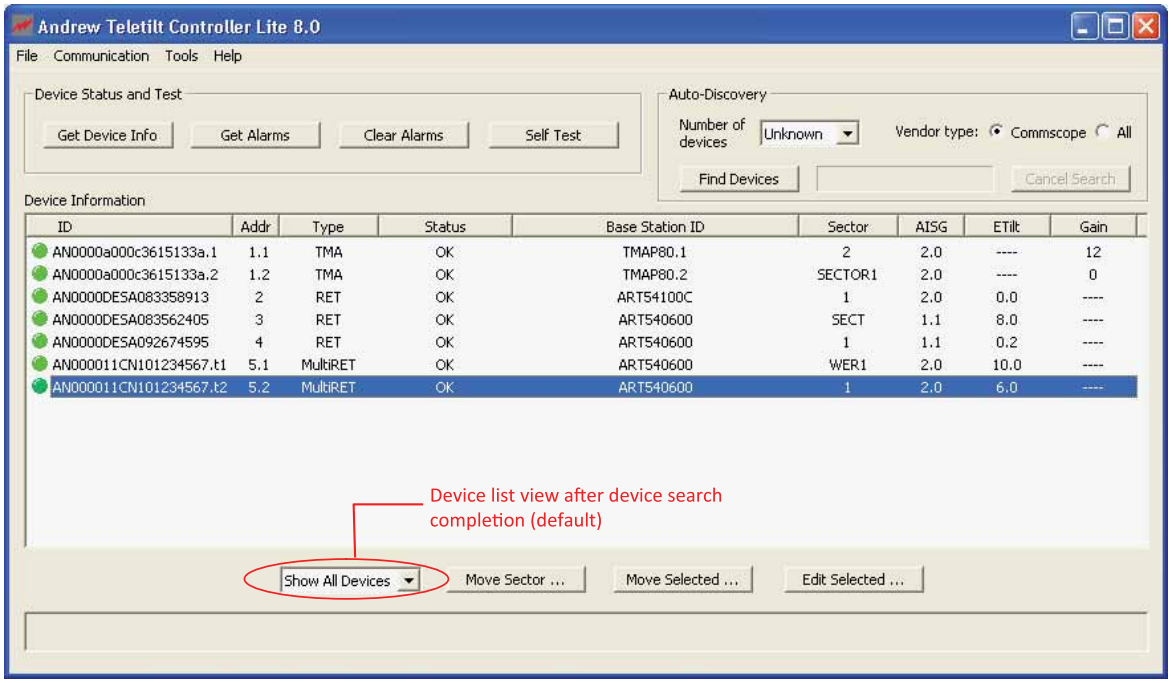
Andrew Teletilt Controller Lite 8.0
File Communication Tools Help
Device Status and Test
Get Device Info
Get Alarms
Clear Alarms
Self Test
Auto-Discovery
Number of devices
Unknown
Vendor type: Commscope All
Find Devices
Cancel Search
Device Information
ID Addr Type Status Base Station ID Sector AISG ETilt Gain
AN0000a000c3615133a.1 1.1 TMA OK TMAP80.1 2 2.0 ---- 12
AN0000a000c3615133a.2 1.2 TMA OK TMAP80.2 SECTOR1 2.0 ---- 0
AN0000DESA083358913 2 RET OK ART54100C 1 2.0 0.0 ----
AN0000DESA083562405 3 RET OK ART540600 SECT 1.1 8.0 ----
AN0000DESA092674595 4 RET OK ART540600 1 1.1 0.2 ----
AN000011CN101234567.t1 5.1 MultiRET OK ART540600 WER1 2.0 10.0 ----
AN000011CN101234567.t2 5.2 MultiRET OK ART540600 1 2.0 6.0 ----
Device list view after device search completion (default)
Show All Devices
Move Sector ...
Move Selected ...
Edit Selected ...

Figure 4-4. The Main Screen Provides Configuration Data.

NOTE: If it is known that devices are present and operational, but none were found by the device search, it is possible that the currently selected USB or serial port is not communicating with the controller.

To check USB or serial port communication, repeat the device search and watch the communication light shown on the data LED of the controller. It should blink rapidly during the device search. If it does not, the USB or serial port currently selected may not be functional. In this case, use the methods described in Section 4.2 to select a different serial port and repeat the search until you see activity on the controller data communication LED. If you are using a USB connection, close the program and verify that the ATC200-LITE-USB driver is properly installed.

If attempts have been made on all available serial ports without success, contact your IT department for assistance in determining the reason no serial port is available for use by the program.

For any questions regarding the ATC200-LITE-USB or the ATC Lite software, please contact our Customer Technical Support Center.

Available 24 hours a day, 7 days a week at the telephone numbers listed below.

- U.S.A.: (800) 279-8185
- International: (703) 726-5556

4.2 Device Information Views

4.2.1 All Devices View

The ‘Show All Devices’ device information view displays the main information about the device found. This view also displays device specific information like Current tilt for RET device and Gain value for TMA devices (Figure 4-5). Views of the device information list is switched between ‘Show All Devices’, ‘Show RETs’ and ‘Show TMAs’ by using drop down list (Figure 4-6).

Relevant actions for devices like Tilt Move, Tilt Move for Sector, Edit configuration, Set TMA Gain and Set TMA Mode can be performed by selecting the device from the list and clicking on the appropriate button(Move Selected, Move Sector, Edit Selected, Set Gain, Set Bypass Mode)

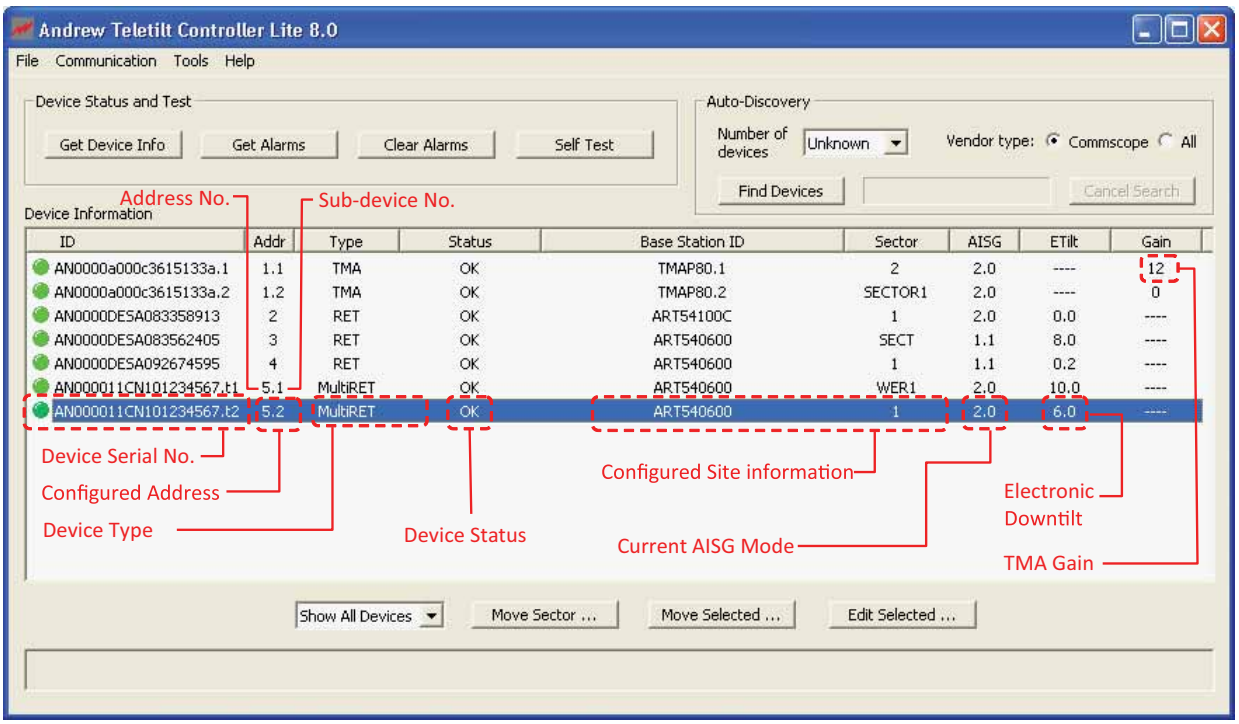
Andrew Teletilt Controller Lite 8.0
File Communication Tools Help
Device Status and Test
Get Device Info
Get Alarms
Clear Alarms
Self Test
Auto-Discovery
Number of devices
Unknown
Vendor type: Commscope All
Find Devices
Cancel Search
Address No.
Sub-device No.
Device Information
ID Addr Type Status Base Station ID Sector AISG ETilt Gain
AN0000a000c3615133a.1 1.1 TMA OK TMAP80.1 2 2.0 ---- 12
AN0000a000c3615133a.2 1.2 TMA OK TMAP80.2 SECTOR1 2.0 ---- 0
AN0000DESA083358913 2 RET OK ART54100C 1 2.0 0.0 ----
AN0000DESA083562405 3 RET OK ART540600 SECT 1.1 8.0 ----
AN0000DESA092674595 4 RET OK ART540600 1 1.1 0.2 ----
AN000011CN101234567.t1 5.1 MultiRET OK ART540600 WER1 2.0 10.0 ----
AN000011CN101234567.t2 5.2 MultiRET OK ART540600 1 2.0 6.0 ----
Device Serial No.
Configured Address
Device Type
Device Status
Configured Site information
Current AISG Mode
Electronic Downtilt
TMA Gain
Show All Devices
Move Sector ...
Move Selected ...
Edit Selected ...

Figure 4-5. All Devices List View

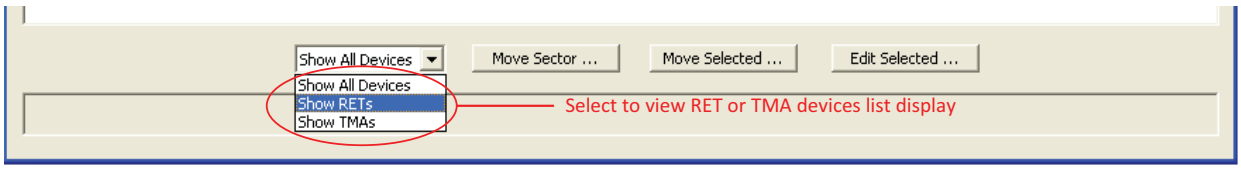

Figure 4-6. Selection for switch to different views

4.2.2 RET Devices View

The ‘Show RETs’ device list view displays the main information about the RET (Single/Multi Axis) devices found (Figure 4-7).

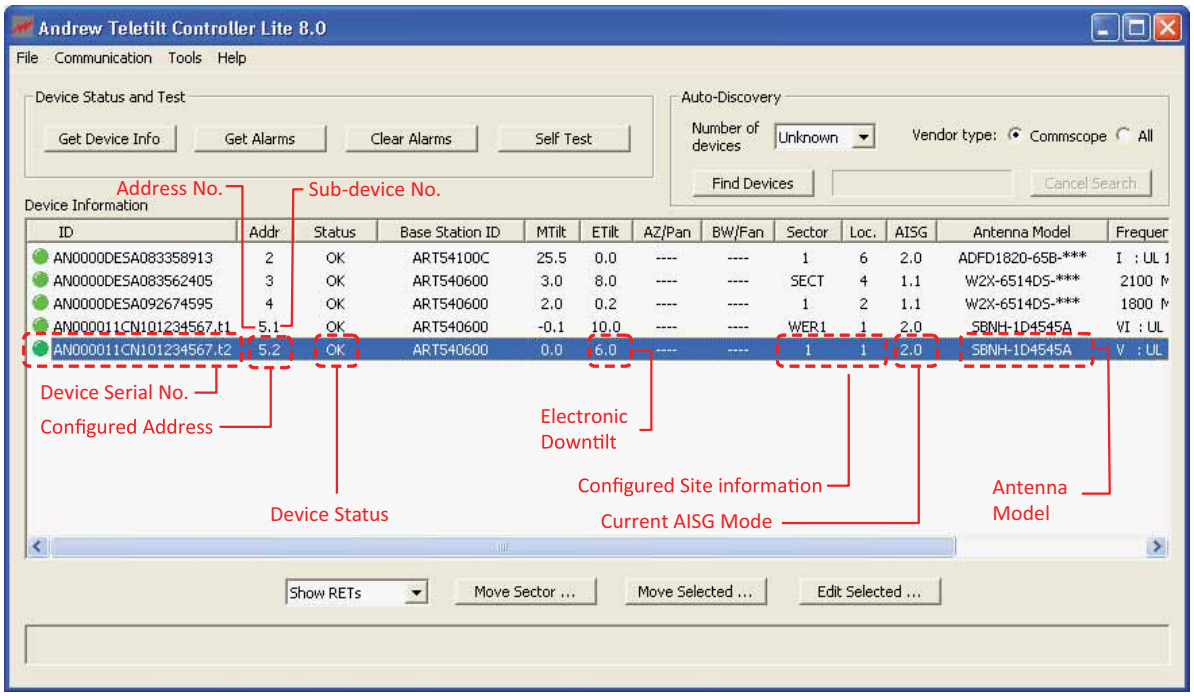
Andrew Teletilt Controller Lite 8.0
File Communication Tools Help
Device Status and Test
Get Device Info
Get Alarms
Clear Alarms
Self Test
Auto-Discovery
Number of devices
Unknown
Vendor type: Commscope All
Find Devices
Cancel Search
Address No.
Sub-device No.
Device Information
ID Addr Status Base Station ID MTilt ETilt AZ/Pan BW/Fan Sector Loc. AISG Antenna Model Frequer
AN0000DESA083358913 2 OK ART54100C 25.5 0.0 ---- ---- 1 6 2.0 ADFD1820-65B-*** I : UL 1
AN0000DESA083562405 3 OK ART540600 3.0 8.0 ---- ---- SECT 4 1.1 W2X-6514DS-*** 2100 M
AN0000DESA092674595 4 OK ART540600 2.0 0.2 ---- ---- 1 2 1.1 W2X-6514DS-*** 1800 M
AN000011CN101234567.t1 5.1 OK ART540600 -0.1 10.0 ---- ---- WER1 1 2.0 SBNH-1D4545A VI : UL
AN000011CN101234567.t2 5.2 OK ART540600 0.0 6.0 ---- ---- 1 1 2.0 SBNH-1D4545A V : UL
Device Serial No.
Configured Address
Device Status
Electronic Downtilt
Configured Site information
Current AISG Mode
Antenna Model
Show RETs
Move Sector ...
Move Selected ...
Edit Selected ...

Figure 4-7. RET Devices List View

4.2.3 TMA Devices View

The ‘Show TMAs’ device list view displays the main information about the TMA devices found (Figure 4-8).

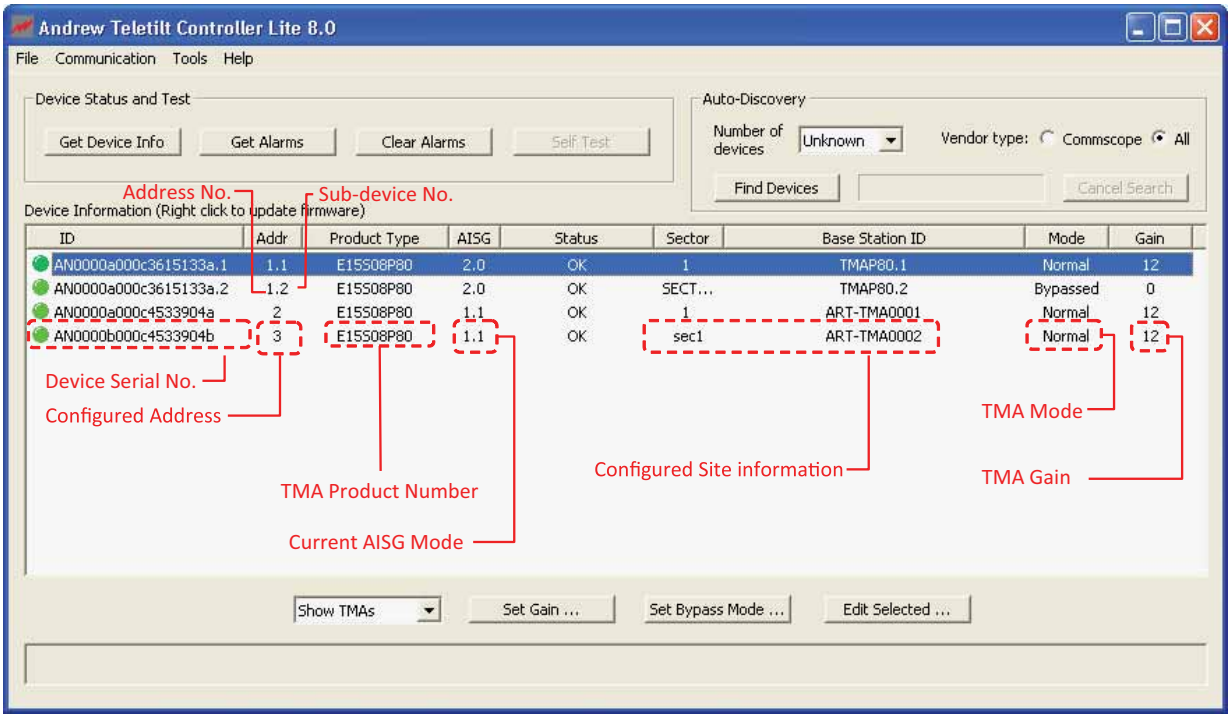

Figure 4-8. TMA Devices List View

4.3 Addressing

1. If desired, these devices can be manually readdressed by the user.

> **IMPORTANT!** Running the **Find Devices** search function will automatically clear all devices and will address each device by the order that they respond.

To manually readdress a device, select the device and go to **Tools→Addressing** from the main menu, located at the top of the main screen (Figure 4-9).

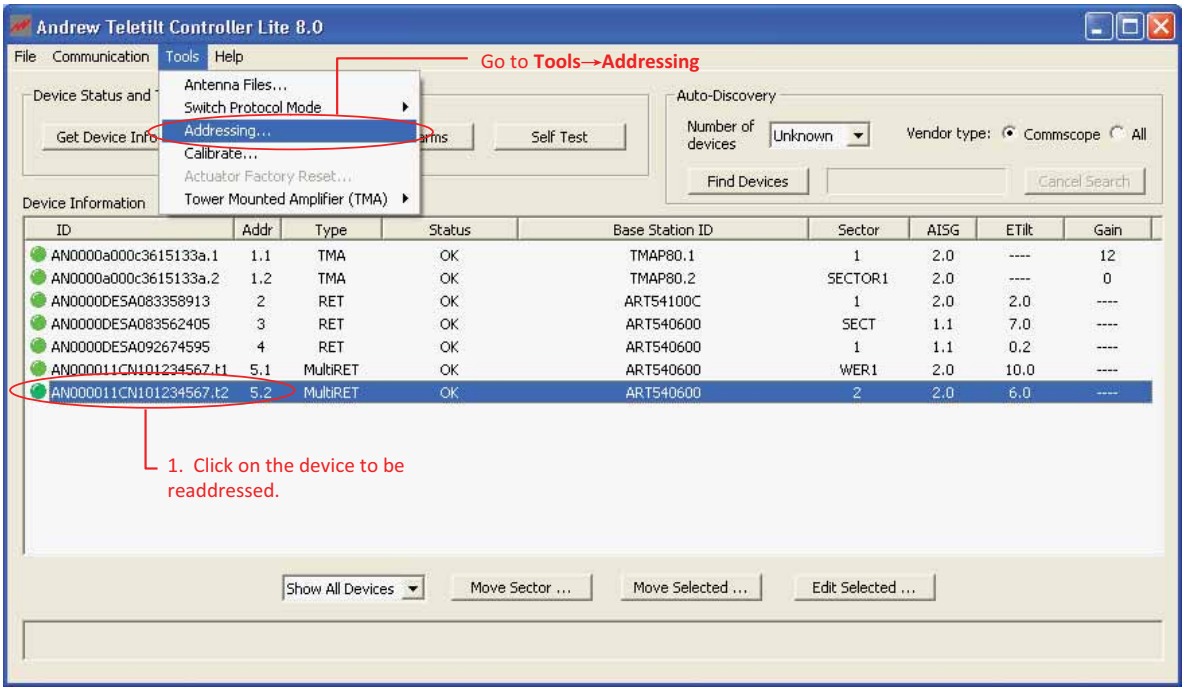

Figure 4-9. Selecting ***Addressing*** *from the Main Menu.*

2. From the **Manual Addressing** dialog box (Figure 4-10), note the device serial number or copy it to your clipboard. **CAUTION: After the device is removed, the controller will no longer list that ID on the main screen.**
3. Click **Remove Device**. This will clear the device to enable a new address assignment.

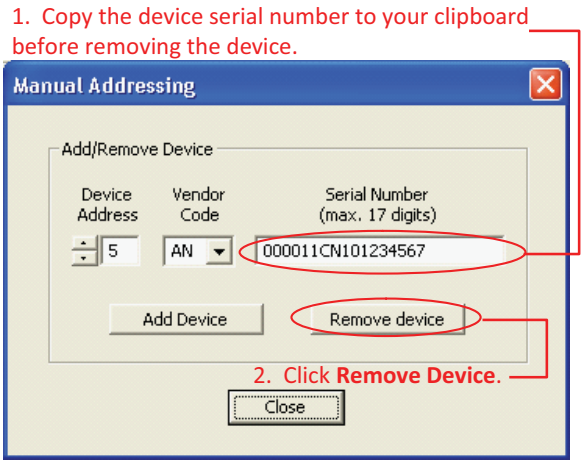

Figure 4-10. Removing Device.

4. A message will appear that the device was successfully removed from the address it originally held (Figure 4-11). Click **OK** to return to the **Manual Addressing** screen. After the device is re- moved, the **Serial Number** field changes to a string of 0's (Figure 4-12).
5. Using the **up or down** arrow buttons, select an available **Device Address**. (Available device addresses will always show a string of 0's for the Serial Number). Change the **Vendor Code**, and enter the serial number for the device that was removed (Figure 4-13).
6. Click **Add Device** (Figure 4-13).
7. Click **Close** (Figure 4-14).
8. Click **OK** to return to the main screen (Figure 4-15).

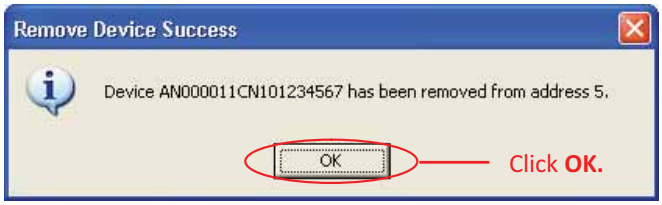

Figure 4-11. Confirmation of Device Removal.

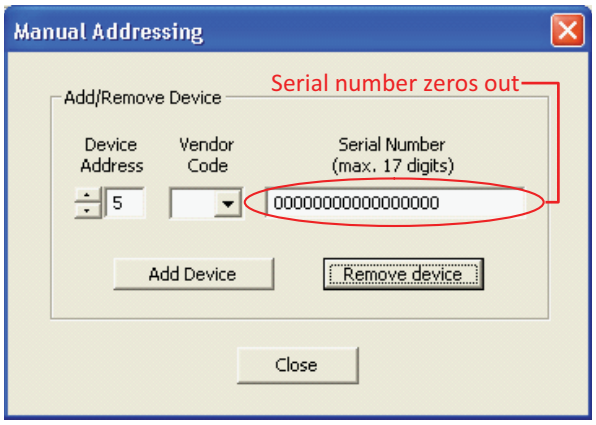

Figure 4-12. Device is Removed.

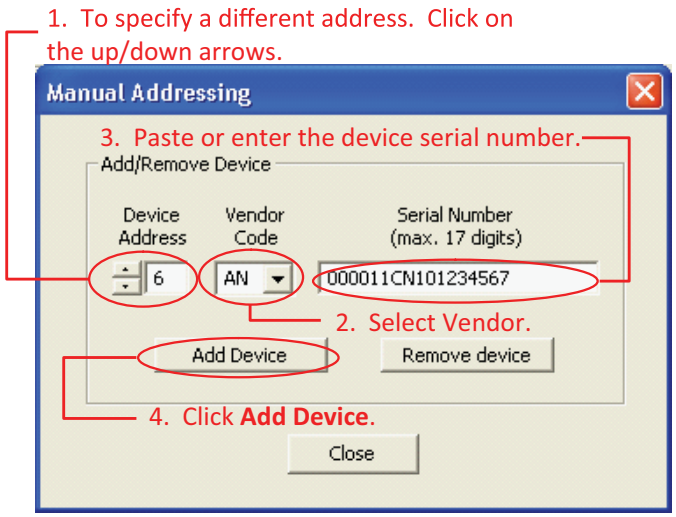

*Figure 4-13. **Manual Addressing** Screen is used to Add Device to New Address.*

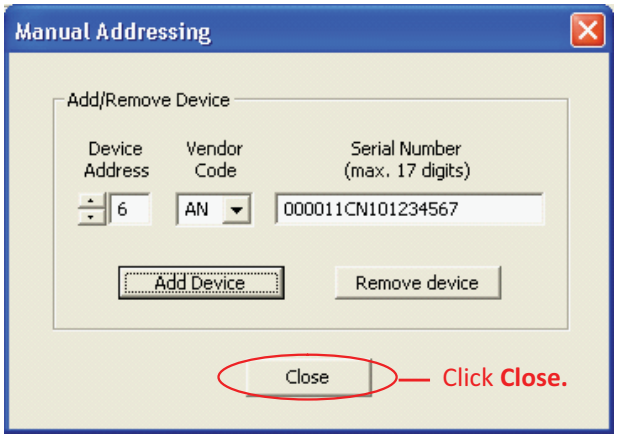

*Figure 4-14. Closing **Manual Addressing** Screen.*

Figure 4-15. Confirmation of New Device Address.

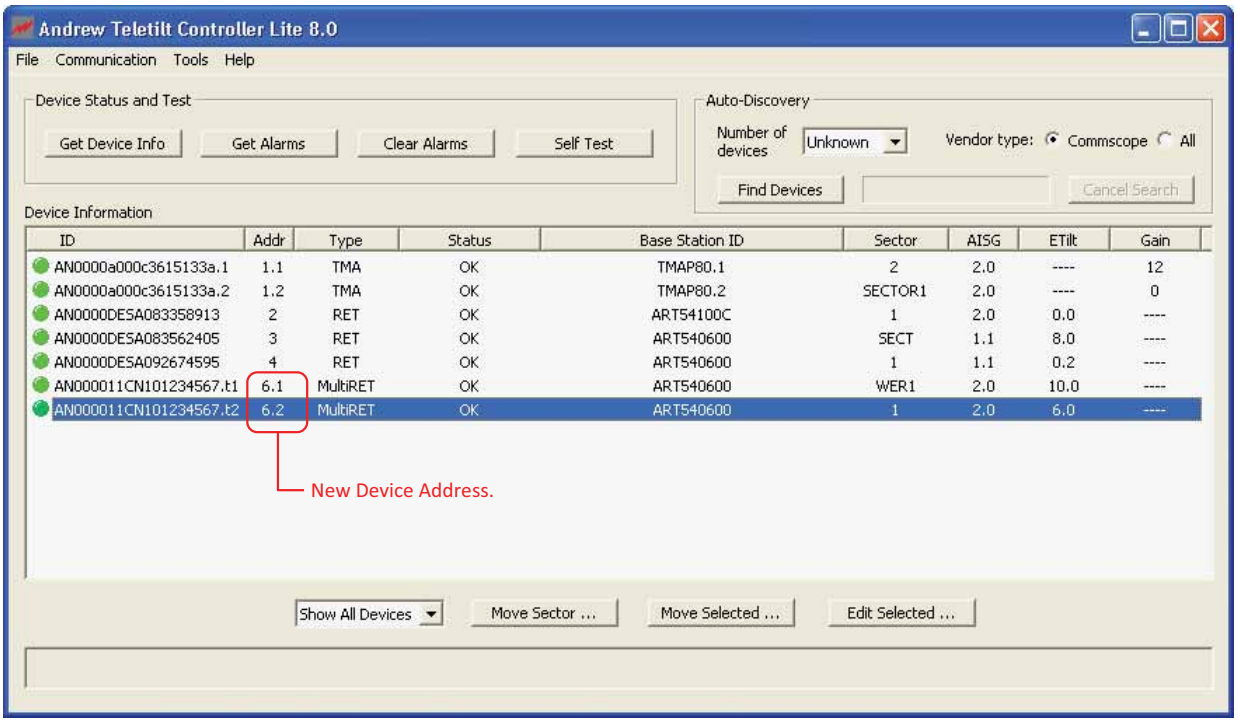
Andrew Teletilt Controller Lite 8.0
File Communication Tools Help
Device Status and Test
Get Device Info
Get Alarms
Clear Alarms
Self Test
Auto-Discovery
Number of devices
Unknown
Vendor type: Commscope All
Find Devices
Cancel Search
Device Information
ID Addr Type Status Base Station ID Sector AISG ETilt Gain
AN0000a000c3615133a.1 1.1 TMA OK TMAP80.1 2 2.0 ---- 12
AN0000a000c3615133a.2 1.2 TMA OK TMAP80.2 SECTOR1 2.0 ---- 0
AN0000DESA083358913 2 RET OK ART54100C 1 2.0 0.0 ----
AN0000DESA083562405 3 RET OK ART540600 SECT 1.1 8.0 ----
AN0000DESA092674595 4 RET OK ART540600 1 1.1 0.2 ----
AN000011CN101234567.t1 6.1 MultiRET OK ART540600 WER1 2.0 10.0 ----
AN000011CN101234567.t2 6.2 MultiRET OK ART540600 1 2.0 6.0 ----
New Device Address.
Show All Devices
Move Sector ...
Move Selected ...
Edit Selected ...

Figure 4-16. Device Shows New Address.

9. The device will display its new address in the **Device Information** list on the main screen (Figure 4-16).

This page intentionally left blank.

Part 4

Operating Instructions for Standard Antennas with Attached Actuators

This page intentionally left blank.

Section 5
Actuator Protocol Mode Switching

5.0 Protocol Mode switching for ATM3 devices

ATC Lite v5.0 and later versions introduces changes to support two AISG modes, simultaneously, on the same AISG or antenna line system. Andrew ATM200-002 actuators are factory set to operate in AISG 1.1 mode, but can be switched to operate in AISG 2.0 using the controller's AISG Reset Option Tools.

Notes:

- Older Andrew actuators in the field are not capable of operating in AISG 2.0 mode.
- Other AISG devices will not switch AISG protocol using the AISG Reset Option tools, but will reset which may temporarily interrupt power and RF signal lines. For example, an AISG tower mounted amplifier operating in AISG 2.0 will reboot when an **AISG 2.0 Reset** command is sent by the user.
- Andrew is unable to guarantee AISG Reset results for other manufacturer AISG devices.

5.0.1 Using AISG Reset Option Tools

Two reset options are provided under the Tools menu that allow all ATM200-002 devices on a RET system to be reset to either AISG 1.1 or AISG 2.0.

1. Run a **Device Scan** to detect all devices on the RET system.
2. To operate in AISG 2.0, select **Tools→Switch Protocol Mode →AISG 2.0 Reset All** to reset all AISG 2.0 capable RET devices to operate in AISG 2.0 (Figure 5-1). This option sends command to all the devices available on the bus.
3. To operate in AISG 1.1, select **Tools→Switch Protocol Mode →ATM3 /TMAs →AISG 1.1 Reset All** to reset all AISG 1.1 capable RET devices to operate in AISG 1.1 (Figure 5-1). This option sends command to only ATM3 RET devices and selective TMA devices (software version starting with 0M).
4. Refer to the AISG column in the Device Information window to view the AISG protocol in use for each device (Figure 5-2).

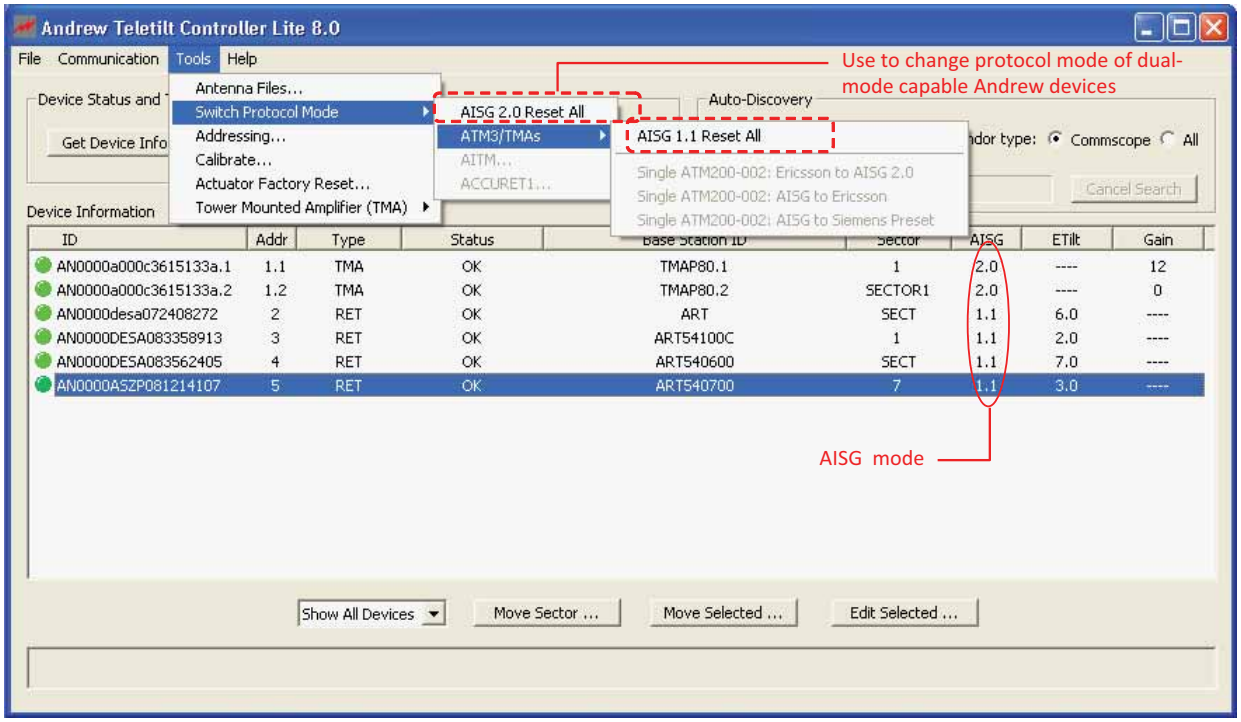
Andrew Teletilt Controller Lite 8.0
File Communication Tools Help
Antenna Files...
Switch Protocol Mode
Addressing...
Calibrate...
Actuator Factory Reset...
Tower Mounted Amplifier (TMA)
AISG 2.0 Reset All
ATM3/TMAs
AITM...
ACCURET1...
AISG 1.1 Reset All
Single ATM200-002: Ericsson to AISG 2.0
Single ATM200-002: AISG to Ericsson
Single ATM200-002: AISG to Siemens Preset
Use to change protocol mode of dual-mode capable Andrew devices
Auto-Discovery
Get Device Info
Cancel Search
Device Information
ID Addr Type Status Base Station ID Sector AISG ETilt Gain
AN0000a000c3615133a.1 1.1 TMA OK TMAP80.1 1 2.0 ---- 12
AN0000a000c3615133a.2 1.2 TMA OK TMAP80.2 SECTOR1 2.0 ---- 0
AN0000desa072408272 2 RET OK ART SECT 1.1 6.0 ----
AN0000DESA083358913 3 RET OK ART54100C 1 1.1 2.0 ----
AN0000DESA083562405 4 RET OK ART540600 SECT 1.1 7.0 ----
AN0000ASZP081214107 5 RET OK ART540700 7 1.1 3.0 ----
AISG mode
Show All Devices
Move Sector ...
Move Selected ...
Edit Selected ...

Figure 5-1. ATM200-002 AISG Protocol Reset

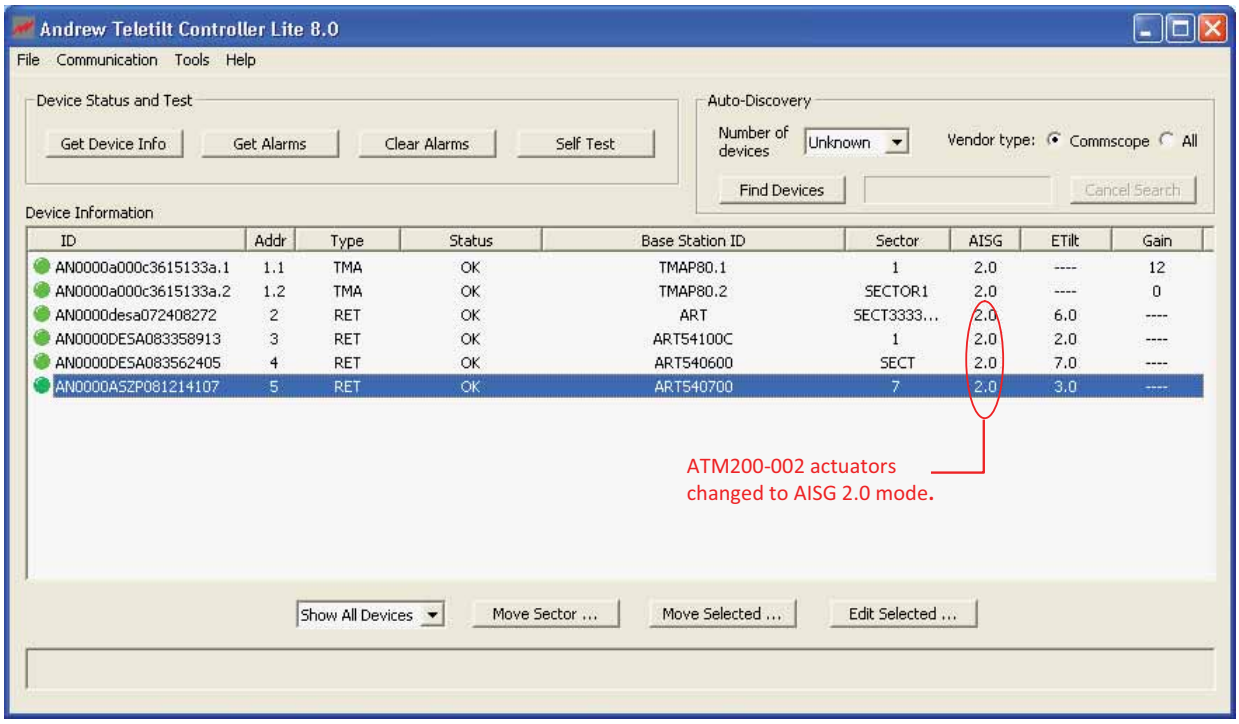
Andrew Teletilt Controller Lite 8.0
File Communication Tools Help
Device Status and Test
Get Device Info
Get Alarms
Clear Alarms
Self Test
Auto-Discovery
Number of devices
Unknown
Vendor type: Commscope All
Find Devices
Cancel Search
Device Information
ID Addr Type Status Base Station ID Sector AISG ETilt Gain
AN0000a000c3615133a.1 1.1 TMA OK TMAP80.1 1 2.0 ---- 12
AN0000a000c3615133a.2 1.2 TMA OK TMAP80.2 SECTOR1 2.0 ---- 0
AN0000desa072408272 2 RET OK ART SECT3333... 2.0 6.0 ----
AN0000DESA083358913 3 RET OK ART54100C 1 2.0 2.0 ----
AN0000DESA083562405 4 RET OK ART540600 SECT 2.0 7.0 ----
AN0000ASZP081214107 5 RET OK ART540700 7 2.0 3.0 ----
ATM200-002 actuators changed to AISG 2.0 mode.
Show All Devices
Move Sector ...
Move Selected ...
Edit Selected ...

Figure 5-2. AISG Reset Displayed on the Main Screen.

Notes:

- Communication is temporarily interrupted to the AISG devices on the RET system when an **AISG 2.0 Reset** command is sent. This interruption is identified by a red indicator next to the device in the Device Information window (Figure 5-3).
- Operating screens will vary somewhat for devices operating in AISG 1.1 to those operating in ASIG 2.0, due to the differences in the two AISG protocols. Where possible, all AISG devices should operate in the same AISG mode to provide the best operating conditions.

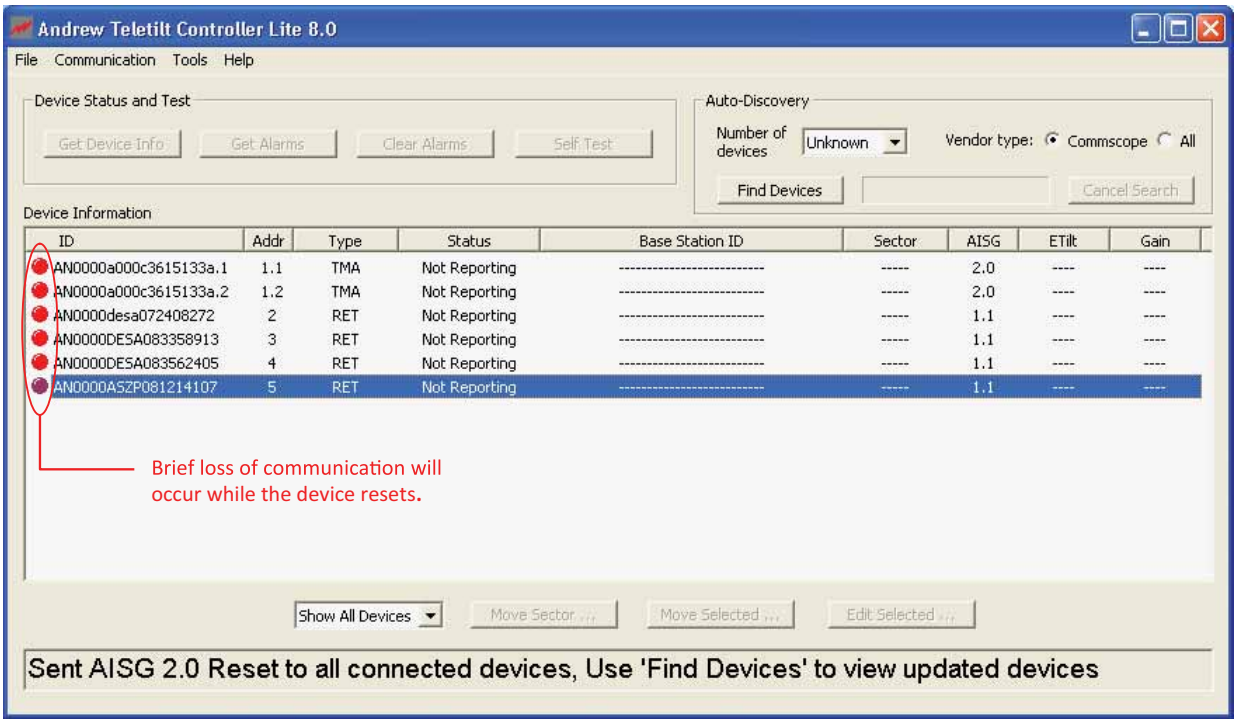
Andrew Teletilt Controller Lite 8.0
File Communication Tools Help
Device Status and Test
Get Device Info
Get Alarms
Clear Alarms
Self Test
Auto-Discovery
Number of devices
Unknown
Vendor type: Commscope All
Find Devices
Cancel Search
Device Information
ID Addr Type Status Base Station ID Sector AISG ETilt Gain
AN0000a000c3615133a.1 1.1 TMA Not Reporting ----- 2.0 ---- ----
AN0000a000c3615133a.2 1.2 TMA Not Reporting ----- 2.0 ---- ----
AN0000desa072408272 2 RET Not Reporting ----- 1.1 ---- ----
AN0000DESA083358913 3 RET Not Reporting ----- 1.1 ---- ----
AN0000DESA083562405 4 RET Not Reporting ----- 1.1 ---- ----
AN0000ASZP081214107 5 RET Not Reporting ----- 1.1 ---- ----
Brief loss of communication will occur while the device resets.
Show All Devices
Move Sector ...
Move Selected ...
Edit Selected ...
Sent AISG 2.0 Reset to all connected devices, Use 'Find Devices' to view updated devices

Figure 5-3. Resetting All ATM200-002 Actuators to AISG 2.0.

5.0.2 Switching a Single ATM200-002 to Ericsson Protocol

Note: This procedure may only be applied when a *single* RET is connected.

1. Connect the ATC200-LITE-USB controller to the PC with the serial cable. Always use the serial cable with this system.

Note: When switching to/from Ericsson mode, using a USB connection is not possible.

2. To switch a single ATM200-002 to Ericsson proprietary protocol, select **Tools→Switch Protocol Mode →ATM3 →Single ATM200-002: AISG to Ericsson**. See Figure 5-4.

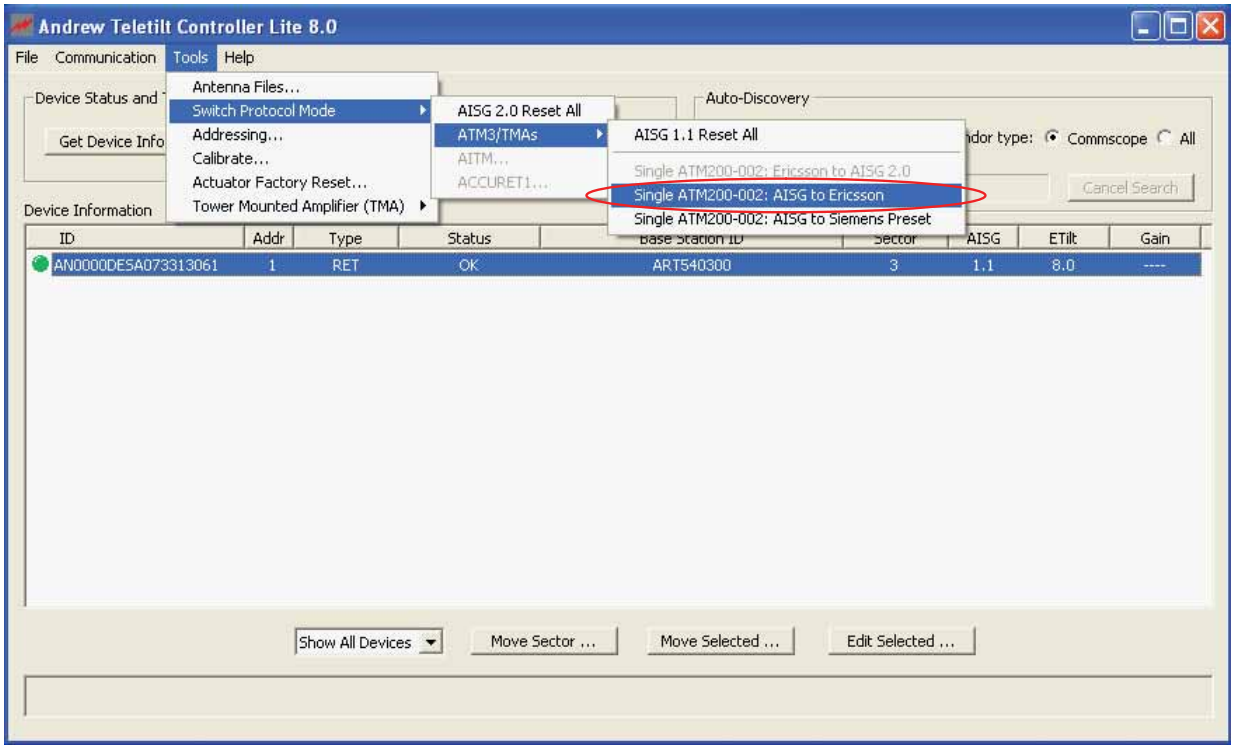

Figure 5-4. Switching To Ericsson Protocol.

3. After the actuator has been reset to Ericsson proprietary protocol, the ATC200-LITE-USB controller software can no longer be used with the actuator. Only use Andrew EFCT software on the PC that operates the controller (Figure 5-5).

Warning

Portions of the operational configuration stored on the RET can be lost when switching to / from Ericsson mode. Because antenna model information will be lost, the antenna table would have to be reprogrammed to return to the previous setting.

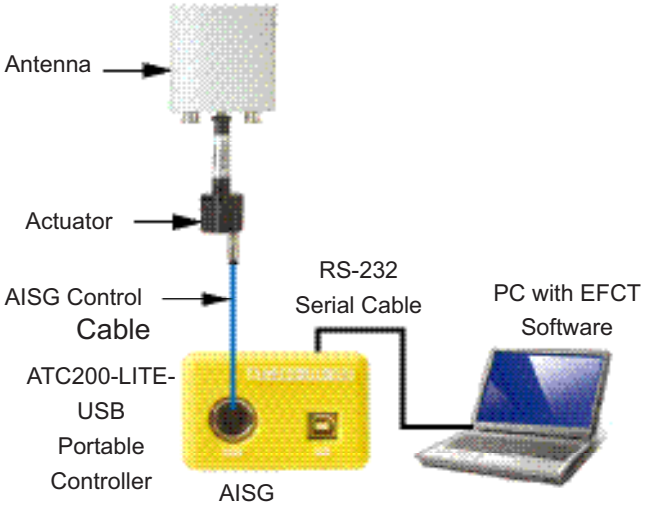

Figure 5-5. Actuator Reset to Ericsson Proprietary Software Shown with EFCT Software on PC.

4. EFCT software can be downloaded from www.commscope.com.
5. Once the device switches from AISG to Ericsson protocol, it is no longer controlled by the ATC200-LITE-USB and will not appear on the display (Figure 5-6).

   The single ATM200-002 in Ericsson mode is equivalent to Andrew's E-ATM300.

   A device in Ericsson mode cannot be found using **Find Devices**. In order to restore control of the device using ATCLite, the device must be switched back from Ericsson mode to AISG.

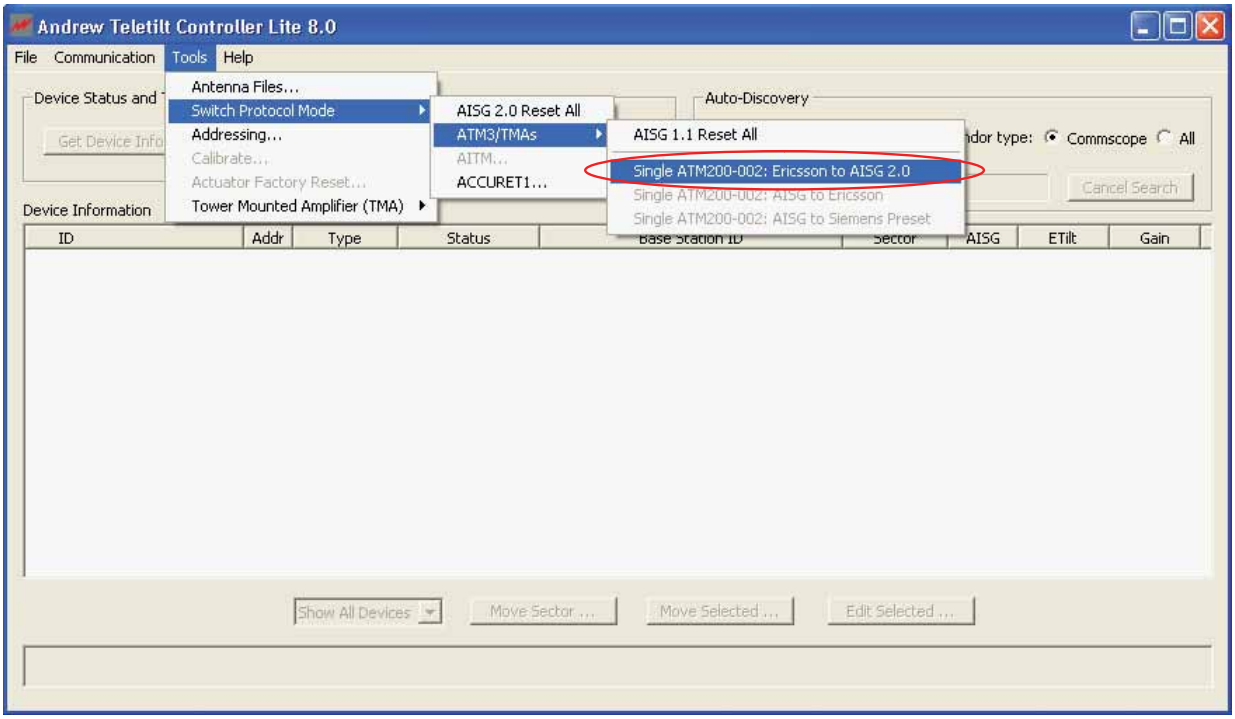

Figure 5-6. Switching Ericsson Protocol Back to AISG 2.0 Mode.

5.1 Protocol Mode switching for AccuRET devices

Andrew AccuRET devices can be switched between AISG modes (1.1 and 2.0) and AISG to Ericsson modes.

1. Run a Device Scan to detect all devices on the RET system including AccuRET devices.
2. To switch AccuRET mode, select the AccuREt device from the displayed list.
3. Select **Tools→Switch Protocol Mode →ACCURET1...**
4. Select the protocol mode to switch to from the list and Click on “OK” button. Message indicating the switching of protocol mode will be displayed in the **Command Status/Response** window.
5. AccuRET device switched between AISG modes (1.1 and 2.0) will reset and will be displayed in the switched protocol mode. Device switched to Ericsson mode will display “Not Reporting”.

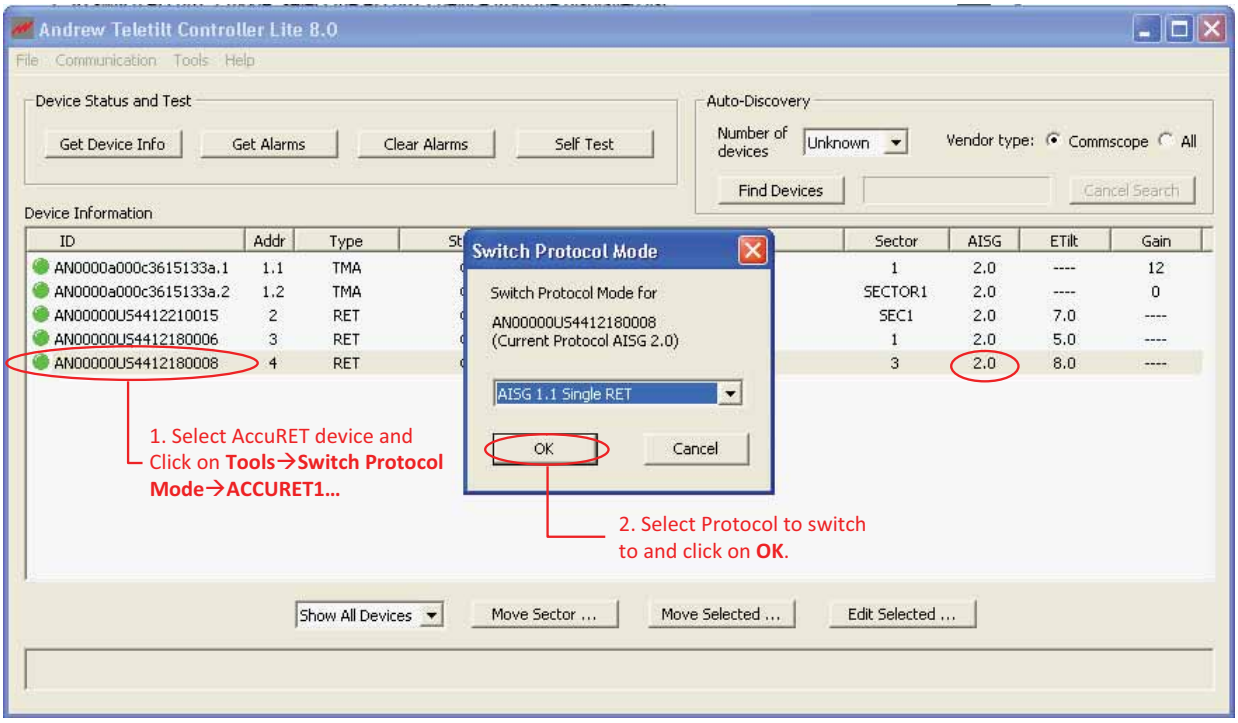

Figure 5-9. Switching protocol mode for AccuRET device.

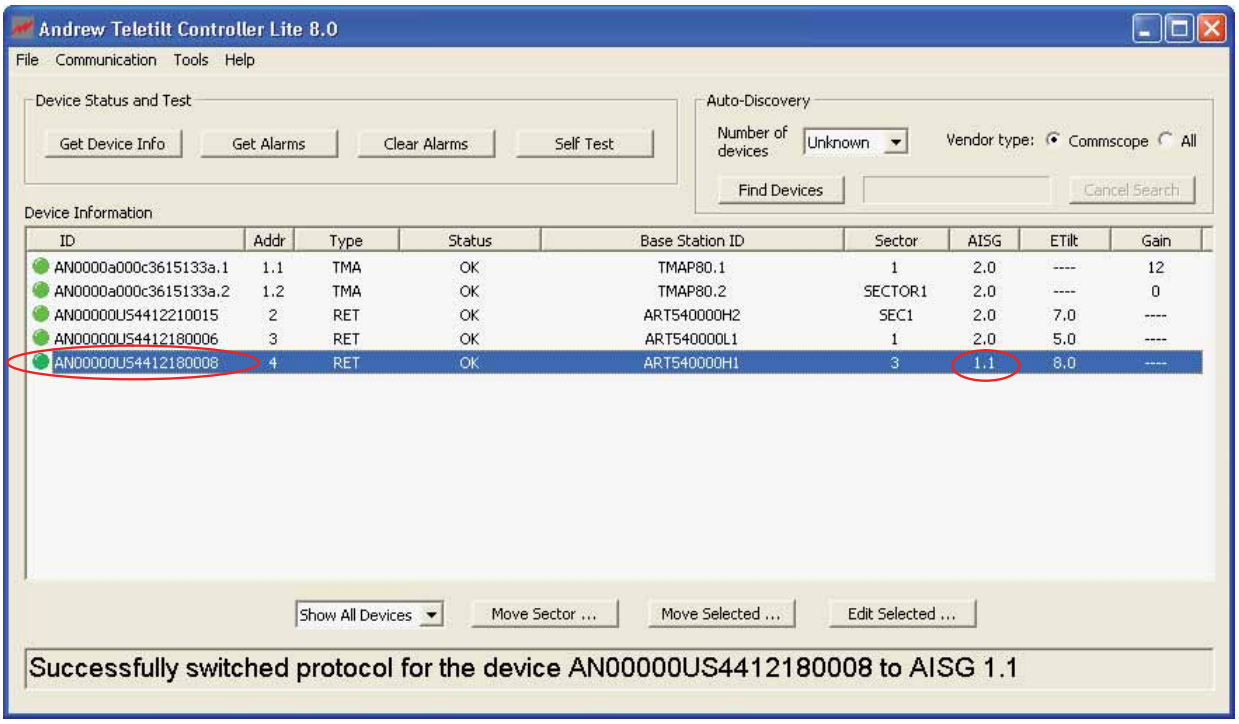
Andrew Teletilt Controller Lite 8.0
File Communication Tools Help
Device Status and Test
Get Device Info
Get Alarms
Clear Alarms
Self Test
Auto-Discovery
Number of devices
Unknown
Vendor type: Commscope All
Find Devices
Cancel Search
Device Information
ID Addr Type Status Base Station ID Sector AISG ETilt Gain
AN0000a000c3615133a.1 1.1 TMA OK TMAP80.1 1 2.0 ---- 12
AN0000a000c3615133a.2 1.2 TMA OK TMAP80.2 SECTOR1 2.0 ---- 0
AN00000US4412210015 2 RET OK ART540000H2 SEC1 2.0 7.0 ----
AN00000US4412180006 3 RET OK ART540000L1 1 2.0 5.0 ----
AN00000US4412180008 4 RET OK ART540000H1 3 1.1 8.0 ----
Show All Devices
Move Sector ...
Move Selected ...
Edit Selected ...
Successfully switched protocol for the device AN00000US4412180008 to AISG 1.1

Figure 5-10. AccuRET device configured to ASIG protocol mode.

Section 6
Device Configuration

After new devices are found and addressed in the ATC Lite program, each device is ready to be configured. New devices, that have not been configured before, will display a yellow icon with the status listed as **Not Configured** in the **Device Information** list. Not configured devices cannot be moved until they have been configured successfully.

1. To begin device configuration, click on the device to be configured (Figure 6-1).
2. Click on **Edit Selected** to open the **Configuring Device** screen (Figures 6-1 and 6-2).

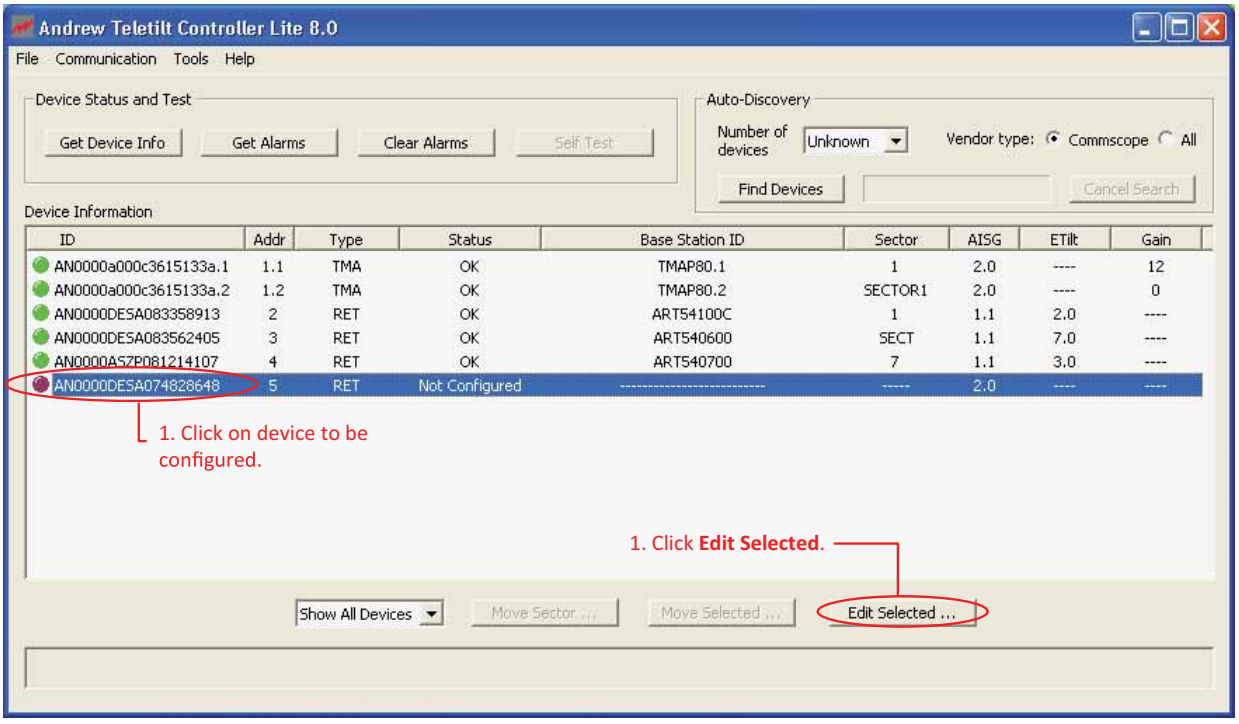
Andrew Teletilt Controller Lite 8.0
File Communication Tools Help
Device Status and Test
Get Device Info
Get Alarms
Clear Alarms
Self Test
Auto-Discovery
Number of devices
Unknown
Vendor type: Commscope All
Find Devices
Cancel Search
Device Information
ID Addr Type Status Base Station ID Sector AISG ETilt Gain
AN0000a000c3615133a.1 1.1 TMA OK TMAP80.1 1 2.0 ---- 12
AN0000a000c3615133a.2 1.2 TMA OK TMAP80.2 SECTOR1 2.0 ---- 0
AN0000DESA083358913 2 RET OK ART54100C 1 1.1 2.0 ----
AN0000DESA083562405 3 RET OK ART540600 SECT 1.1 7.0 ----
AN0000ASZP081214107 4 RET OK ART540700 7 1.1 3.0 ----
AN0000DESA074828648 5 RET Not Configured ----- 2.0 ---- ----
1. Click on device to be configured.
1. Click Edit Selected.
Show All Devices
Move Sector ...
Move Selected ...
Edit Selected ...

Figure 6-1. Selecting Device to be Configured.

Note the following in Figure 6-2:

- The ID of the device to be configured is displayed in the title bar of the dialog box.
- Devices that have never been configured before will display blank fields for most parameters.
- Actuators that have been factory installed on an antenna are pre-configured to include the antenna model number, antenna type, and antenna serial number. The remaining fields such as Installation Date, Mechanical Tilt, Bearing, Height, Sector, Location, Oper. Band (for AISG 2.0 actuators) or Freq. Band (for AISG 1.1 actuators), Technology, Station ID, and Installer ID will need to be configured.
- Configuration items marked with an asterisk are required; saving a new configuration will be disabled if any of these fields are blank.
- The **Installation Date** field is handled differently from all other configuration items. Although this field is not required, if no installation date has been saved on the actuator, the program will suggest the current date as the default.
- AISG 2.0 Protocol Mode allows a 32 character Station ID.

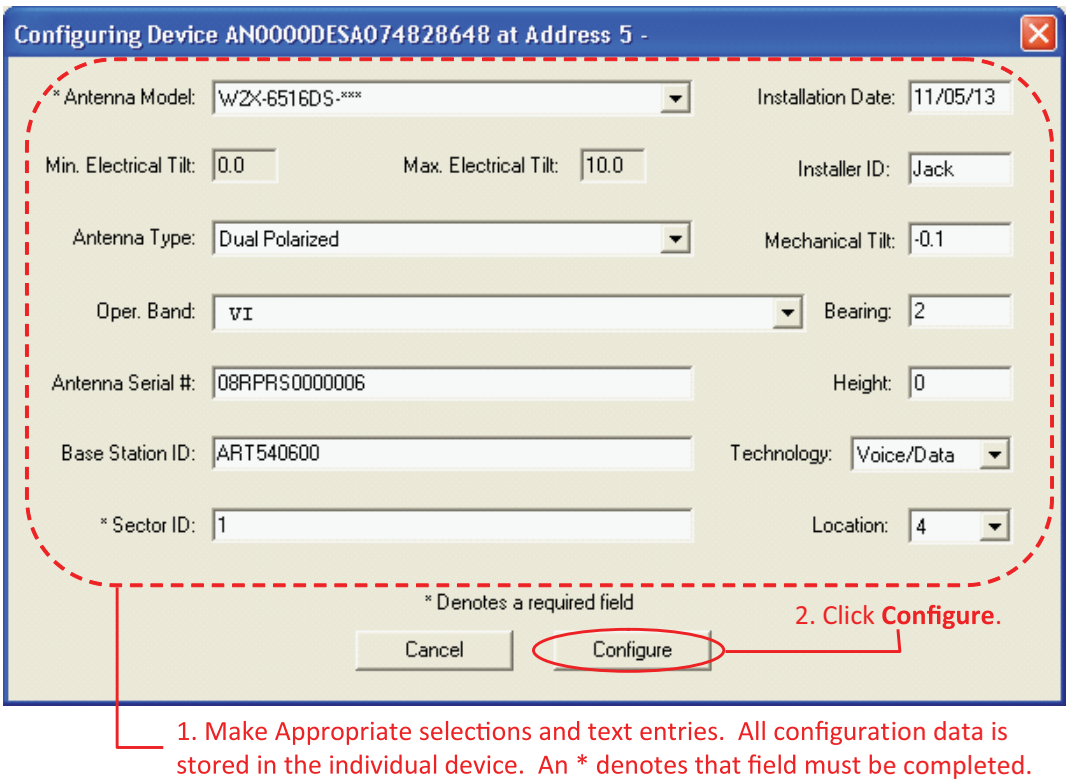

Figure 6-2. Device Configuration Screen.

3. Click on the down arrow found on the right hand side of the **Antenna Model** drop down list. This will display all of the available Andrew base station antenna models that were contained in the antenna definition file that was loaded at program startup (Figure 6-2). SmartBeam and multiple-actuator-equipped antennas do not change the assigned **Antenna Model**.

   If an Antenna Model belonging to Andrew base station is not available in the antenna definition file, it is listed and selected in the drop down list with the other model names.

   The Andrew base station antenna model names displayed in the list are long family names retrieved from the antenna definition file.

4. Select the desired antenna model for this actuator if applicable. Note that after an antenna model is selected, its minimum and maximum electrical down tilt range values are displayed just below the drop down list (Figure 6-2).

   IMPORTANT: The antenna model selected *must* match the actual installed antenna that is attached to the actuator that is being configured. Movement control data specific to this antenna will be sent to the actuator as a result of this selection. If the antenna model selected does not match the attached antenna, the movement range sent to the actuator will be incorrect and may prevent the antenna from functioning correctly or may damage it.

   For the most current listing of antenna models designed for use with the ATC200-LITE-USB Teletilt system, Click the Antennas link on the CommScope website at http://www.commscope.com/Product-Catalog/Wireless/Brand/Base-Station-Antennas/Teletilt%C2%AE/

5. Use the **Antenna Type** drop down list to select the antenna type that is correct for the antenna model selected (Figure 6-2). Note that this value is used for reference only and has no direct affect upon the Actuator/Antenna that is being configured.

6. Enter the serial number of the antenna that is attached to this actuator in the **Antenna Serial #** text entry field. Note that this field is optional. SmartBeam and multiple-actuator-equipped antennas are pre-set, so they cannot be changed. (Figure 6-2).

7. Using the drop down lists and entry fields, specify the parameters for the remaining fields (Operating/Frequency Band, Technology, Base Station ID, Installer ID, Install Date, Mechanical Tilt, Bearing, Height, Sector, and Location). Note the following:

   - A positive mechanical tilt angle means that the antenna beam is directed below the horizontal plane. A negative mechanical tilt angle means that the antenna beam is directed above the horizontal plane.
   - The bearing is the installed compass orientation for this antenna.
   - The height of the antenna on the tower must be entered in the range of 1 to 999. No specific unit of length, such as feet or meters, is associated with this field. However, you should enter a value that conforms to the units of length customarily used by your company for antenna installations.
   - If in AISG 1.1 mode, the ID for the base station associated with this antenna must be 1 to 12 characters in length, and it may contain any combination of numbers and letters. When the actuator is in AISG 2.0 protocol mode, the longer station ID consists of 32 characters.
   - The Installation Date field is handled differently from all other configuration items. Although

this field is not required, if no installation date has been saved on the actuator the program will suggest the current date as the default. If the current date is used, it will be saved on the actuator when the **Configure** button is activated. Alternately, the suggested date may be erased and a new date entered, or the field may be left blank. When a date is entered, it must be formatted as MM/DD/YY as shown in Figure 6-2 (A **forward slash** character placed between the month and day and a **forward slash** character placed between the day and year) i.e., July 7, 2008 would be typed as 07/07/08.

- The installer's ID must be 1 to 5 characters in length with any combination of letters and numbers.
- Values specified for the frequency band, sector, technology, location, and mechanical tilt are used for reference only and have no direct affect upon the actuator/antenna that is being configured.

- Frequency band (AISG 1.1)/Operating Band (AISG 2.0) value can have multiple values set. Click on the drop down arrow in the list to open the multi selection list. Make selection by clicking on the check box for the relevant frequency. Click outside the list or press ESC key to close the list (Figure 6-3).

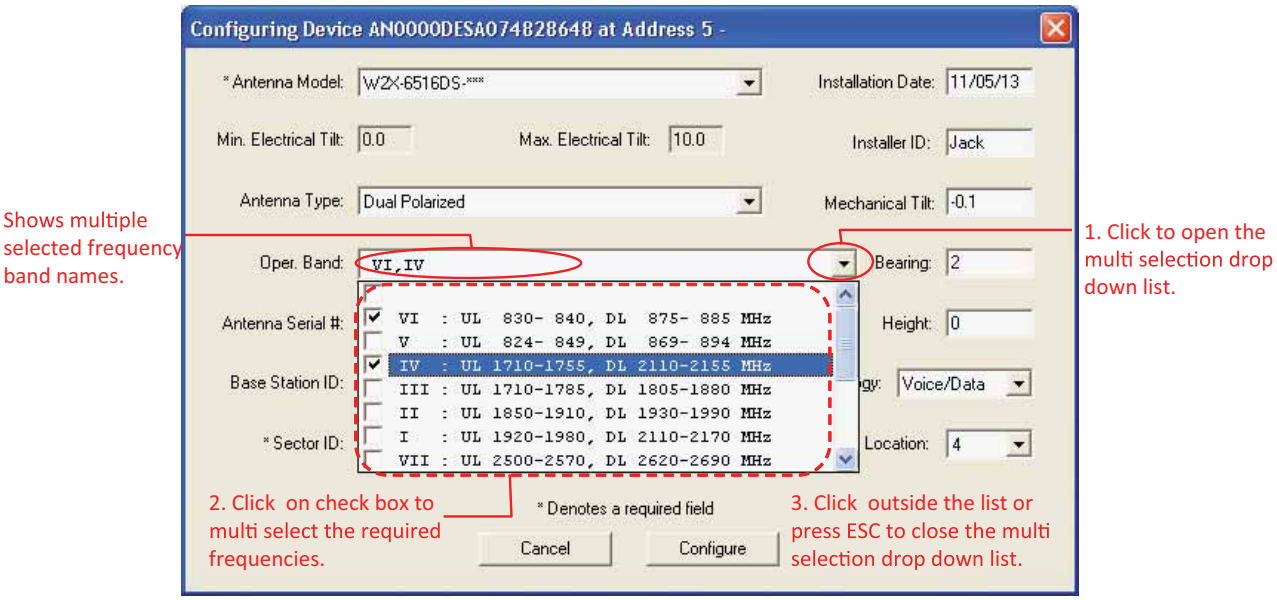

Figure 6-3. Multiple Frequency/Operating Band Selection

8. After verifying the accuracy of all fields, click **Configure**. Alternately, the user may go back and edit/change any of the selections made or click the **Cancel** button to quit this process without making any changes to the actuator's current configuration.
9. After the **Configure** button has been activated, the user will be prompted to confirm changes to the actuator are to be applied. Click **Yes** to proceed with the changes, or click **No** to return to the configuration screen (Figure 6-4).

   When proceeding to make changes, the selected settings will be sent to the actuator and stored there. The main screen will change the status of this device to **Configuring** to indicate that new settings are being sent to the actuator. The status icon is yellow while the configuration data is changing.

10. When the configuration process is complete, a pop-up dialog box will display the results. Normally, the dialog box will show that the changes were successfully sent to the device (Figure 6-5). However, if the configuration process was unable to communicate with the actuator for any reason, a failure message will appear.

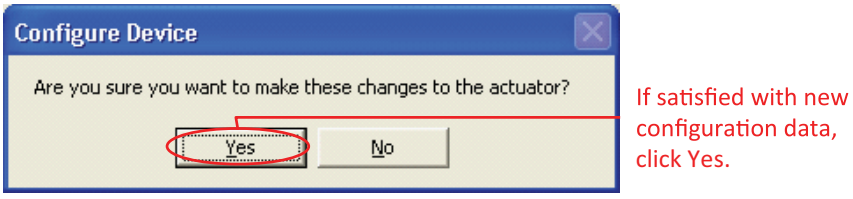
Configure Device
Are you sure you want to make these changes to the actuator?
Yes
No
If satisfied with new configuration data, click Yes.

Figure 6-4. Choosing to Continue with Configuration Changes to the Device.

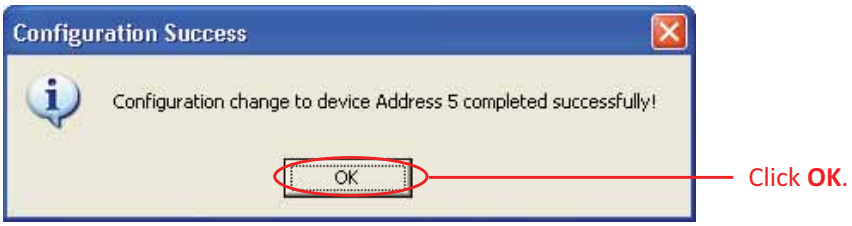

Figure 6-5. Confirmation of Configuration Changes to Device.

If this occurs, ensure that all cables and connectors to the actuator are properly connected, and that the system is still properly powered up. Also, verify that the actuator is present in the **Device Information** list, and that it does not have a status reading of **Not Reporting**. A status of **Not Reporting** indicates that connectivity to the actuator has been lost. After verifying that each of these items are correct, repeat the configuration process.

11. Click **OK** (Figure 6-4) to dismiss the pop-up dialog box. The main screen will display the results of the device configuration.
12. Note that not all of the items that were configured are displayed on the main screen. To verify that each of the items configured were set correctly, select the device in the **Device Information** list and click **Edit Selected** to review each item (Figure 6-1). Click the **Cancel** button on the **Device Configuration** screen when finished with verification.

This page intentionally left blank.

Section 7
Changing the Electrical Downtilt on a Single Antenna

The electrical downtilt may be adjusted on any device that is addressed, configured, and whose current state does not prevent antenna movement. Examples where movement is prevented include devices that are not responding to commands from the program, devices that are in the middle of a move or configuration change, and devices that are experiencing a mechanical malfunction.

> Note: Some Teletilt® actuators might switch to Safety Mode if they are moved repeatedly from maximum to minimum position without a pause. That safety feature ensures that the actuator is not damaged from overheating. If the actuator goes into Safety Mode, then the operator should wait about 60 to 90 seconds while the actuator cools so it is free to move again.

1. Switch to RET Device view by selecting 'Show RETs' from the drop down list below the **Device Information** list.
2. From the **Device Information** list, click on the device to be moved (Figure 7-1).
3. Click **Move Selected** at the bottom of the screen (Figure 7-1).

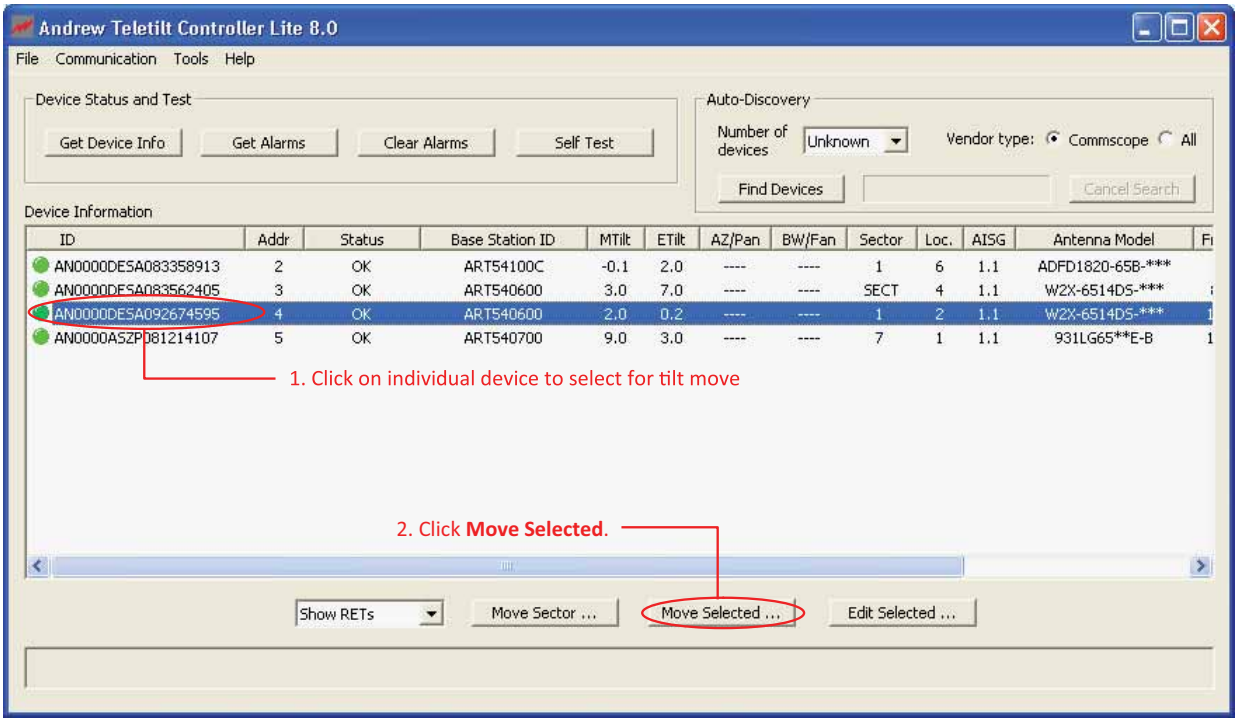
Andrew Teletilt Controller Lite 8.0
File Communication Tools Help
Device Status and Test
Get Device Info
Get Alarms
Clear Alarms
Self Test
Auto-Discovery
Number of devices
Unknown
Vendor type: Commscope All
Find Devices
Cancel Search
Device Information
ID Addr Status Base Station ID MTilt ETilt AZ/Pan BW/Fan Sector Loc. AISG Antenna Model
AN0000DESA083358913 2 OK ART54100C -0.1 2.0 ---- ---- 1 6 1.1 ADFD1820-65B-***
AN0000DESA083562405 3 OK ART540600 3.0 7.0 ---- ---- SECT 4 1.1 W2X-6514DS-***
AN0000DESA092674595 4 OK ART540600 2.0 0.2 ---- ---- 1 2 1.1 W2X-6514DS-***
AN0000ASZP081214107 5 OK ART540700 9.0 3.0 ---- ---- 7 1 1.1 931LG65**E-B
1. Click on individual device to select for tilt move
2. Click Move Selected.
Show RETs
Move Sector ...
Move Selected ...
Edit Selected ...

Figure 7-1. Selecting Device for Electrical Downtilt Adjustment.

4. The **Set Actuator Position** screen will appear (Figure 7-2).

   Note all parameters that can be configured are displayed on this screen. This information may be used as a reference to help determine the new tilt setting. However, configuration items cannot be changed from this screen. All changes to configuration items must be done with the Configuration screen as discussed in Section 6.

5. Enter the new angle in the **New Tilt** text entry field to change the electrical downtilt. Note that the allowed range of angle values is displayed in the **Min Electrical Tilt** and **Max Electrical Tilt** fields in the top part of the screen. Any downtilt angle within this range may be entered. Downtilt is controllable with a precision of 0.1 degree. Other axes may use whole degree precision (Figure 7-2).

   Examples: Five degrees downtilt may be entered as **5** or **5.0**. A downtilt of five and one-half degrees would be entered as **5.5**.

6. Click the **Activate** button (Figure 7-2) to apply changes to the electrical downtilt for this antenna. Alternately, to exit the screen without sending any changes, click on the **Close** button. Antenna movement will begin after the **Activate** button is applied.

   A progress indicator bar (located to the left of **Current Tilt**) will continually update for as long as the move is in progress.

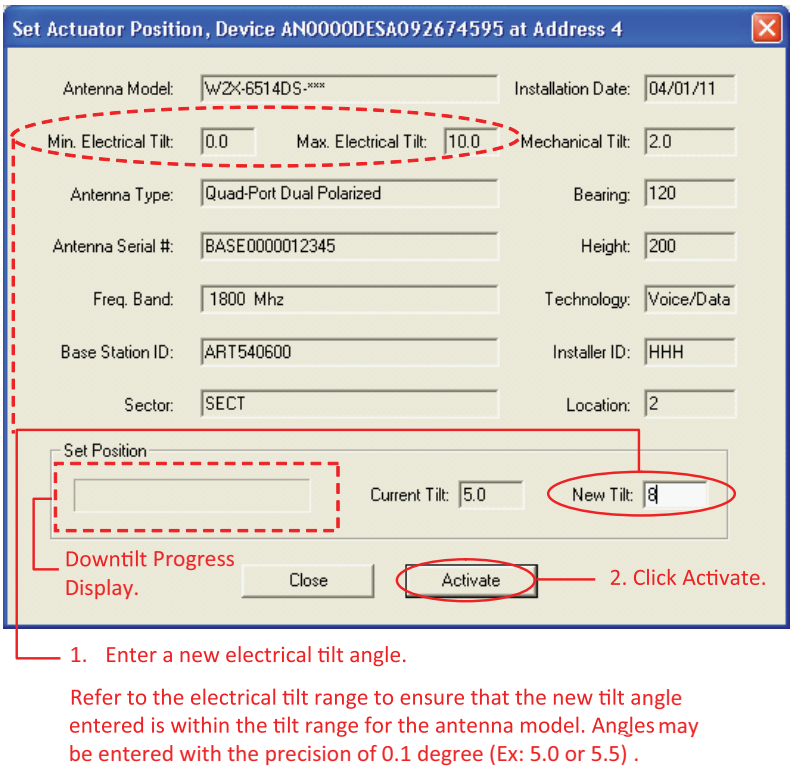

Figure 7-2. Configuring New Electrical Downtilt Setting.

7. You will be notified when movement is complete (Figure 7-3).

   If for any reason the move failed to reach the new tilt angle specified, you will be notified of the failure.

8. At the successful completion of an antenna movement, the **Current Tilt** field will update to show the new tilt angle and the **New Tilt** text entry box will be cleared in preparation for the next move (Figure 7-4). At this point, you may click on the **Close** button to exit this screen and return to the main screen. Alternately, this process may be repeated to further adjust the tilt position or to reapply changes where movement had previously failed, such as a temporary mechanical jam.

9. After closing the **Set Actuator Position** screen, the main screen will show the new actuator position setting in the **Device Information** list.

   After all movements have been made and you are ready to end the program session, a report can be saved to a file for future reference. Settings can be stored to a file for future reference using the Site Reports function. See Section 18.

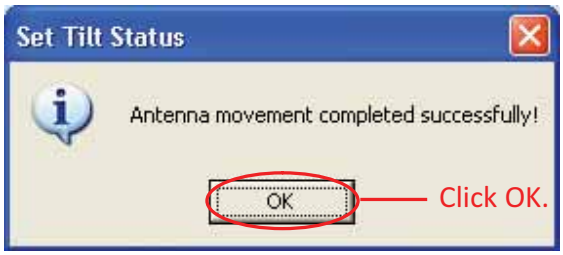

Figure 7-3. Electrical Tilt Adjustment Complete.

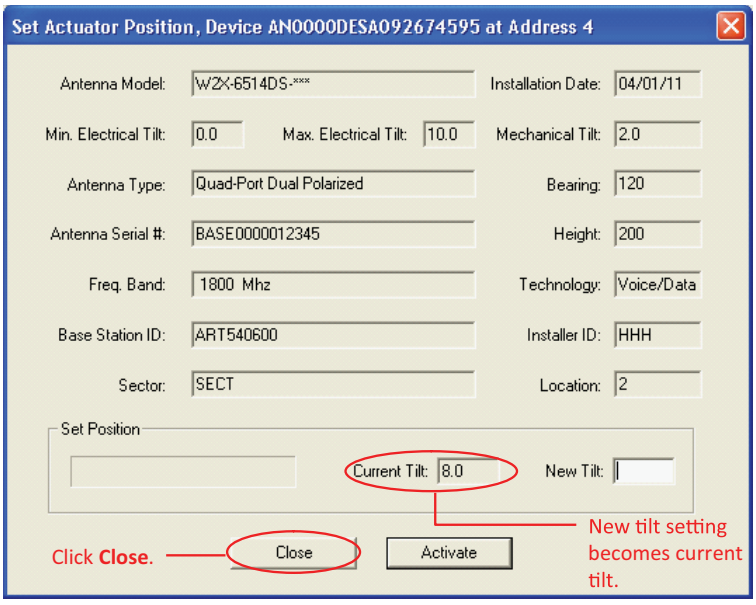

Figure 7-4. New Electrical Tilt Displays in ***Current Tilt*** *Field.*

This page intentionally left blank.

Section 8
Changing the Electrical Downtilt on a Group of Antennas

In addition to changing the downtilt of a single antenna, changes may also be applied to a group of antennas. The list of antennas that make up the group is defined by three configuration parameters – Sector ID, Minimum Electrical Tilt, and Maximum Electrical Tilt. Only antennas that are identical in all three parameters are candidates for a given group move.

1. Switch to RET Device view by selecting 'Show RETs' from the drop down list below the **Device Information** list.
2. Select a device from the **Device Information** list that contains the Sector ID and tilt range representing the group to be moved (Figure 8-1).
3. Click **Move Sector** (Figure 8-1).

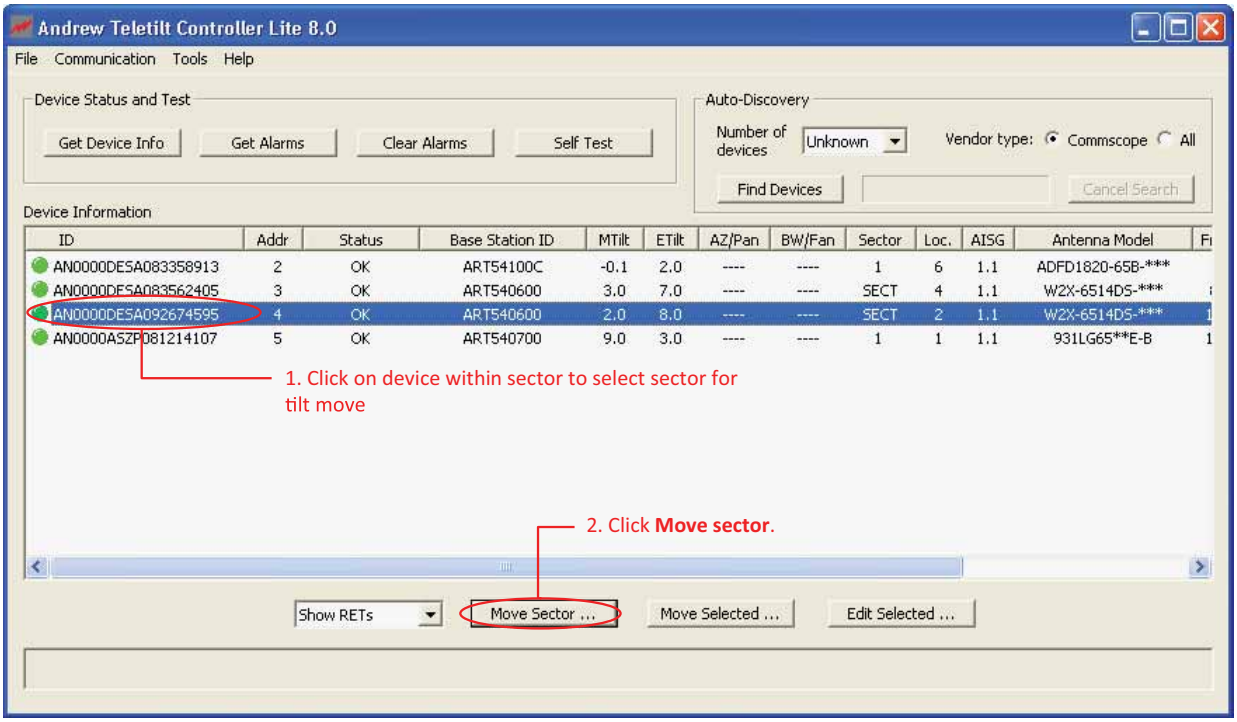
Andrew Teletilt Controller Lite 8.0
File Communication Tools Help
Device Status and Test
Get Device Info
Get Alarms
Clear Alarms
Self Test
Auto-Discovery
Number of devices
Unknown
Vendor type: Commscope All
Find Devices
Cancel Search
Device Information
ID Addr Status Base Station ID MTilt ETilt AZ/Pan BW/Fan Sector Loc. AISG Antenna Model
AN0000DESA083358913 2 OK ART54100C -0.1 2.0 ---- ---- 1 6 1.1 ADFD1820-65B-***
AN0000DESA083562405 3 OK ART540600 3.0 7.0 ---- ---- SECT 4 1.1 W2X-6514DS-***
AN0000DESA092674595 4 OK ART540600 2.0 8.0 ---- ---- SECT 2 1.1 W2X-6514DS-***
AN0000A5ZP081214107 5 OK ART540700 9.0 3.0 ---- ---- 1 1 1.1 931LG65**E-B
1. Click on device within sector to select sector for tilt move
2. Click Move sector.
Show RETs
Move Sector ...
Move Selected ...
Edit Selected ...

Figure 8-1. Selecting an Antenna Within a Sector.

4. From the **Set Electrical Tilt for Sector** screen, notice that the selected device is highlighted and displayed in the box labeled **Antennas Included In Move**. This box displays a list of all devices that will be included in the sector move. Initially, this box contains only the antenna that was selected from the main screen. All of the current configuration settings for this device, including its current tilt, are displayed on this screen (Figure 8-2).

   Other devices that have the same sector ID, minimum tilt, and maximum tilt are listed in the box labeled **Additional Compatible Antennas**. The devices in this box may be included in the move by moving one or more of them from this box to the box on the left.

5. To help determine if additional antennas could be included in the group move, click on each model to be considered to display their individual settings. Each time a device is selected, its settings will be displayed on the screen.

6. After the settings have been examined for each candidate, the devices determined to be included in the move may be added to the group in either of the following methods.

   - Select the device and click **Add**.
   - Double click on the device to immediately move it to the **Antennas Included In Move** box (Figure 8-2).

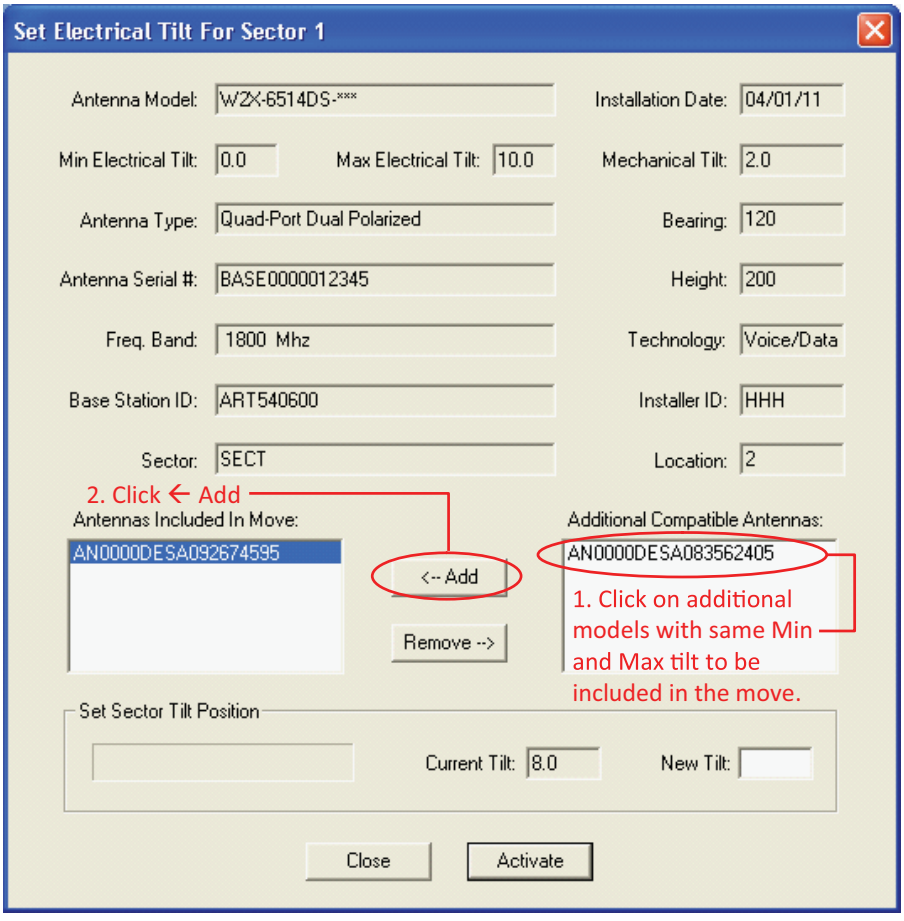

Figure 8-2. Adding Devices to be Included in the Sector Move.

7. After the devices are moved to the **Antennas Included In Move** box, examine the group to ensure that the group does not include any antennas that are not desired for this move.
8. To remove one or more antennas from the group move, either click on that antenna and then click **Remove**, or double click on that antenna to move it back to the right hand box.
9. When satisfied with the list of antennas that will be included in the group move, enter a new downtilt angle and click **Activate** to start the move (Figure 8-3). Progress for each antenna movement in the group will be displayed separately.

   A progress indicator bar (located to the left of **Current Tilt**) will continually update for as long as the move is in progress.

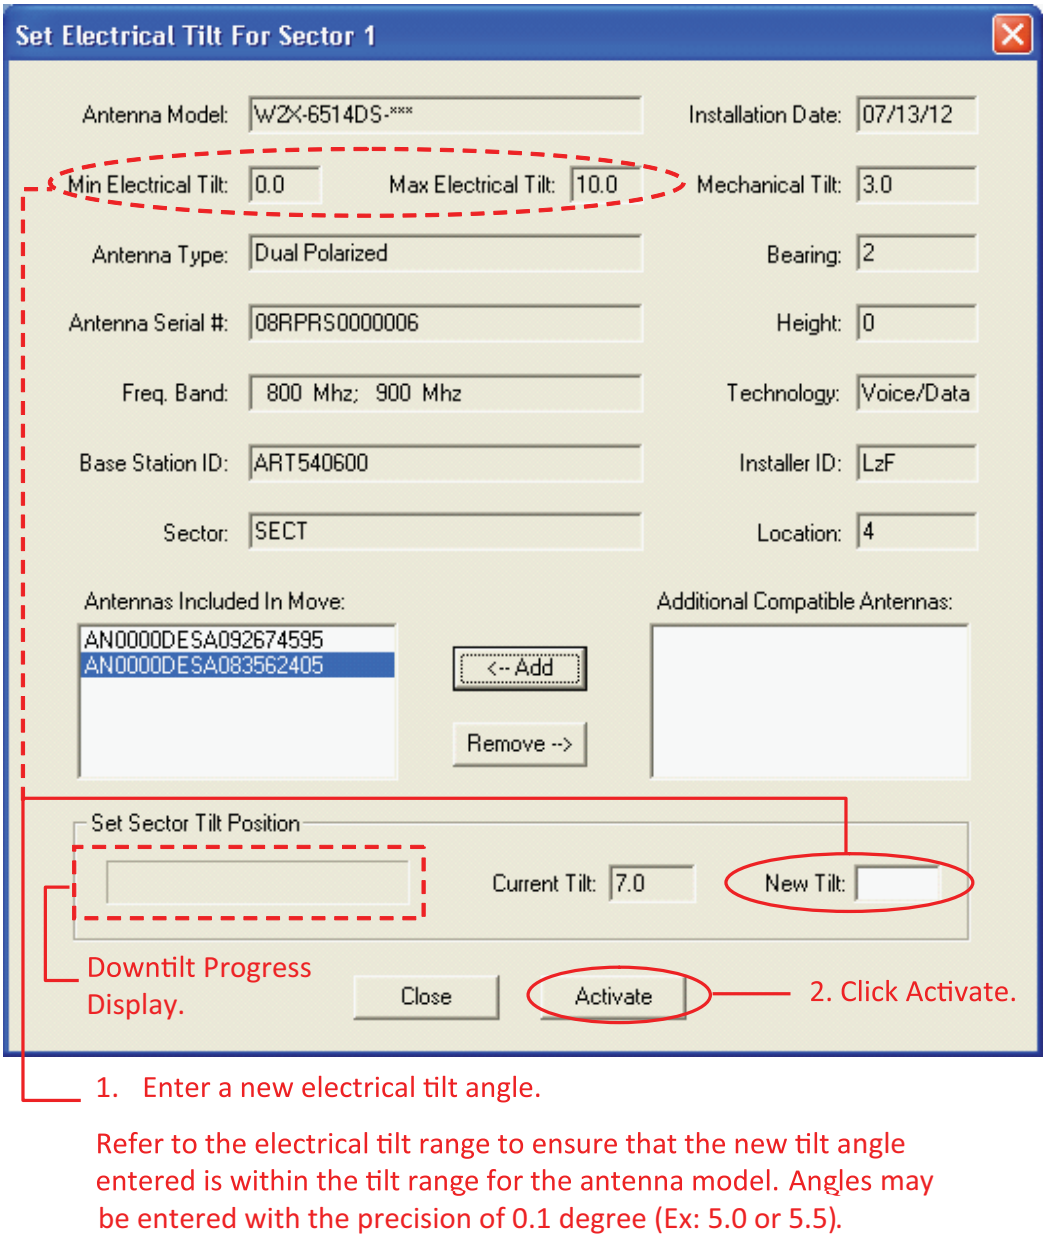

Figure 8-3. Entering New Electrical Tilt Setting for Sector Move.

10. You will be notified when all antennas have successfully reached the new tilt angle. Click **OK** (Figure 8-4).
11. The **Set Electrical Tilt for Sector** screen will display the new electrical tilt setting in the **Current Tilt** field. At this point, either additional tilt angles may be applied or you may return to the main screen. To return to the main screen, click **Close** (Figure 8-5).
12. After all electrical tilt adjustments are made, a report can be saved to a file for future reference (see Section 18).

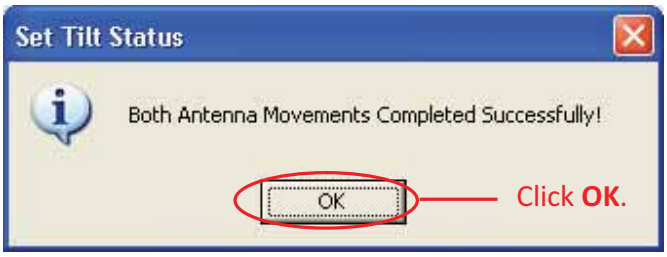

Figure 8-4. Movement Complete.

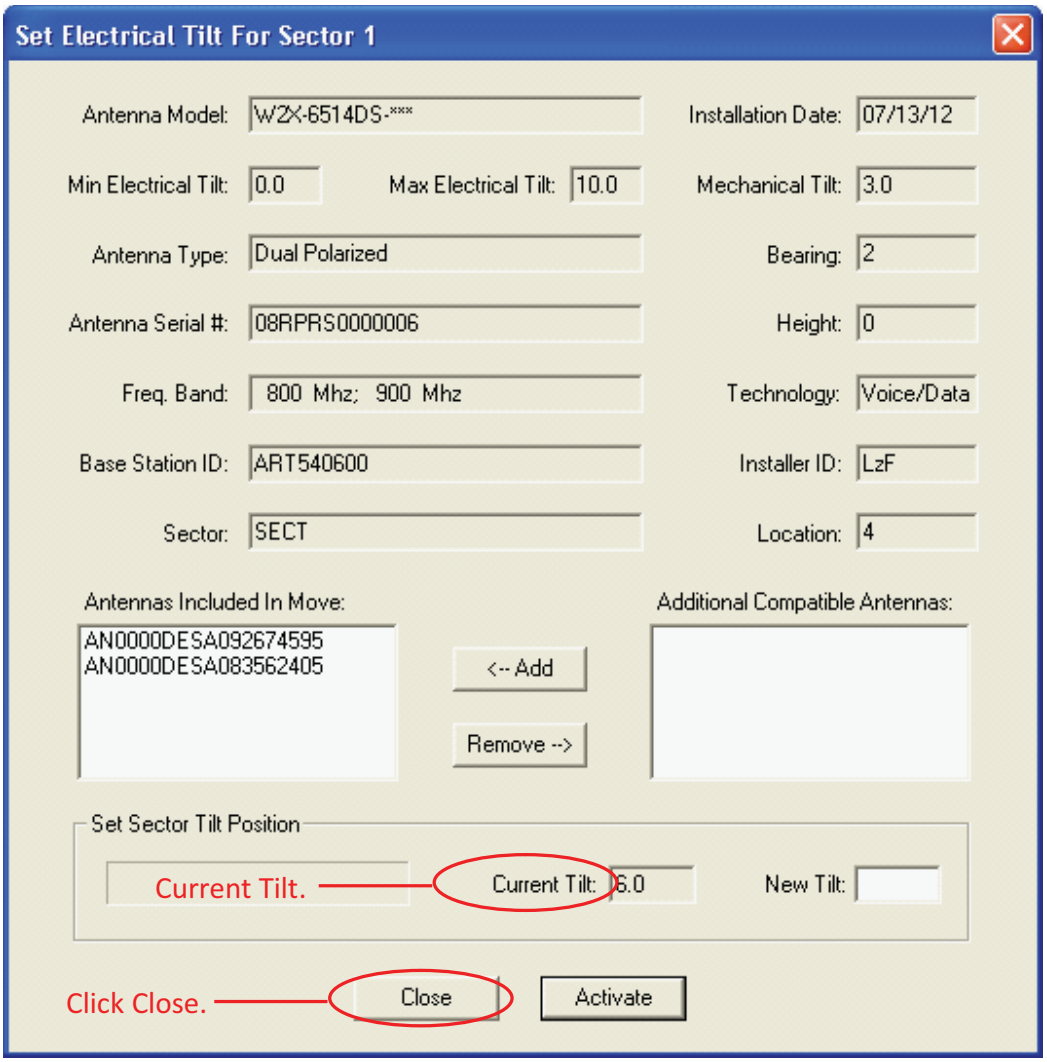

Figure 8-5. Closing Sector Move Screen.

Part 5

Operating Instructions for Antennas with Multiple Integrated Actuators

This page intentionally left blank.

Section 9
Switching Operating Modes for Multiple Integrated Actuators

Andrew specific Multiple Integrated Actuators named Andrew Integrated Tilt Master (AITM) can be in one of two operating modes – Multiple Single-RET mode or Multi-RET mode. The ATC Lite program provides the capability to switch AITMs between these modes. See Section 19.1 for instructions on determining the Product Number of a device.

In Multiple Single-RET mode, an AITM will behave as multiple single actuator devices, with one bus address assigned to each tilt. The 19-character ID of each tilt will end with “t1”, “t2”, etc., and the bus address of each tilt will be a whole number.

In Multi-RET mode, an AITM is assigned one bus address, and each tilt of the device is a subunit of the master actuator. The ID of each tilt will have a suffix such as “.t1”, “.t2”, etc., and the bus address will be x.y where x is the master bus address and y is the subunit number of the tilt.

To switch the operating mode of an AITM, select the AITM from the device list. Click on **Tools→Switch Protocol Mode→AITM…**, and then select the new operating mode. Click Ok to perform the switch. All tilts of the AITM in the list will lose communication. To verify the AITM is operating in the new mode, select “Find Devices” again.

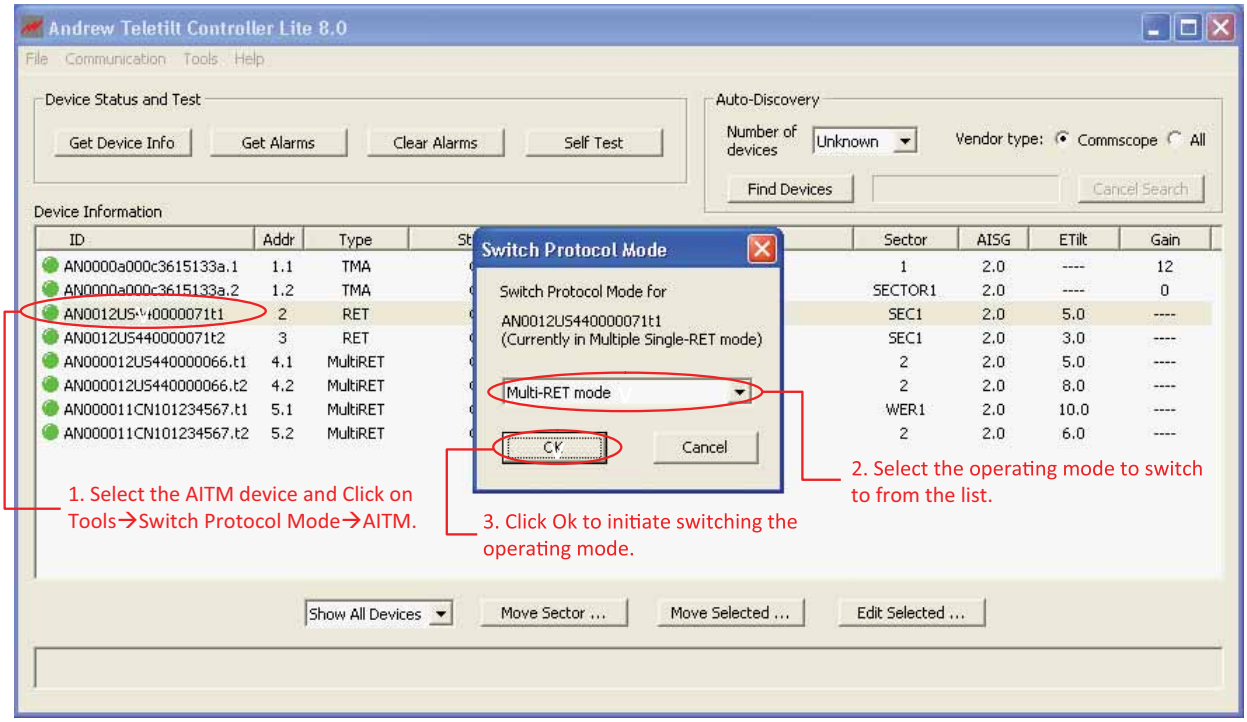
Andrew Teletilt Controller Lite 8.0
File Communication Tools Help
Device Status and Test
Get Device Info
Get Alarms
Clear Alarms
Self Test
Auto-Discovery
Number of devices
Unknown
Vendor type: Commscope All
Find Devices
Cancel Search
Device Information
ID Addr Type Sector AISG ETilt Gain
AN0000a000c3615133a.1 1.1 TMA 1 2.0 ---- 12
AN0000a000c3615133a.2 1.2 TMA SECTOR1 2.0 ---- 0
AN0012US440000071t1 2 RET SEC1 2.0 5.0 ----
AN0012US440000071t2 3 RET SEC1 2.0 3.0 ----
AN000012US440000066.t1 4.1 MultiRET 2 2.0 5.0 ----
AN000012US440000066.t2 4.2 MultiRET 2 2.0 8.0 ----
AN000011CN101234567.t1 5.1 MultiRET WER1 2.0 10.0 ----
AN000011CN101234567.t2 5.2 MultiRET 2 2.0 6.0 ----
Switch Protocol Mode
Switch Protocol Mode for
AN0012US440000071t1
(Currently in Multiple Single-RET mode)
Multi-RET mode
OK
Cancel
Show All Devices
Move Sector ...
Move Selected ...
Edit Selected ...
1. Select the AITM device and Click on Tools→Switch Protocol Mode→AITM.
2. Select the operating mode to switch to from the list.
3. Click Ok to initiate switching the operating mode.

Figure 9-1. Switch Operating mode for AITM actuators.

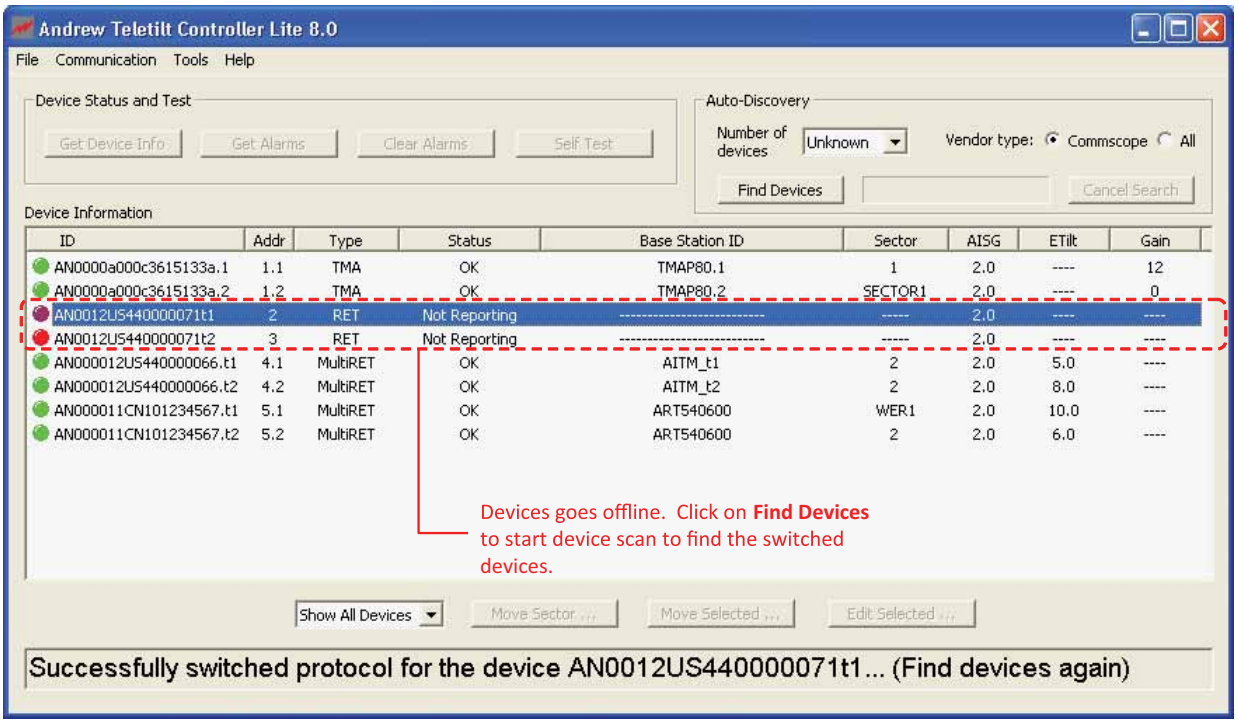
Andrew Teletilt Controller Lite 8.0
File Communication Tools Help
Device Status and Test
Get Device Info
Get Alarms
Clear Alarms
Self Test
Auto-Discovery
Number of devices
Unknown
Vendor type: Commscope All
Find Devices
Cancel Search
Device Information
ID Addr Type Status Base Station ID Sector AISG ETilt Gain
AN0000a000c3615133a.1 1.1 TMA OK TMAP80.1 1 2.0 ---- 12
AN0000a000c3615133a.2 1.2 TMA OK TMAP80.2 SECTOR1 2.0 ---- 0
AN0012US440000071t1 2 RET Not Reporting ---------- ----- 2.0 ---- ----
AN0012US440000071t2 3 RET Not Reporting ---------- ----- 2.0 ---- ----
AN000012US440000066.t1 4.1 MultiRET OK AITM_t1 2 2.0 5.0 ----
AN000012US440000066.t2 4.2 MultiRET OK AITM_t2 2 2.0 8.0 ----
AN000011CN101234567.t1 5.1 MultiRET OK ART540600 WER1 2.0 10.0 ----
AN000011CN101234567.t2 5.2 MultiRET OK ART540600 2 2.0 6.0 ----
Devices goes offline. Click on Find Devices to start device scan to find the switched devices.
Show All Devices
Move Sector ...
Move Selected ...
Edit Selected ...
Successfully switched protocol for the device AN0012US440000071t1... (Find devices again)

Figure 9-2. Switch Operating Mode for AITM completed.

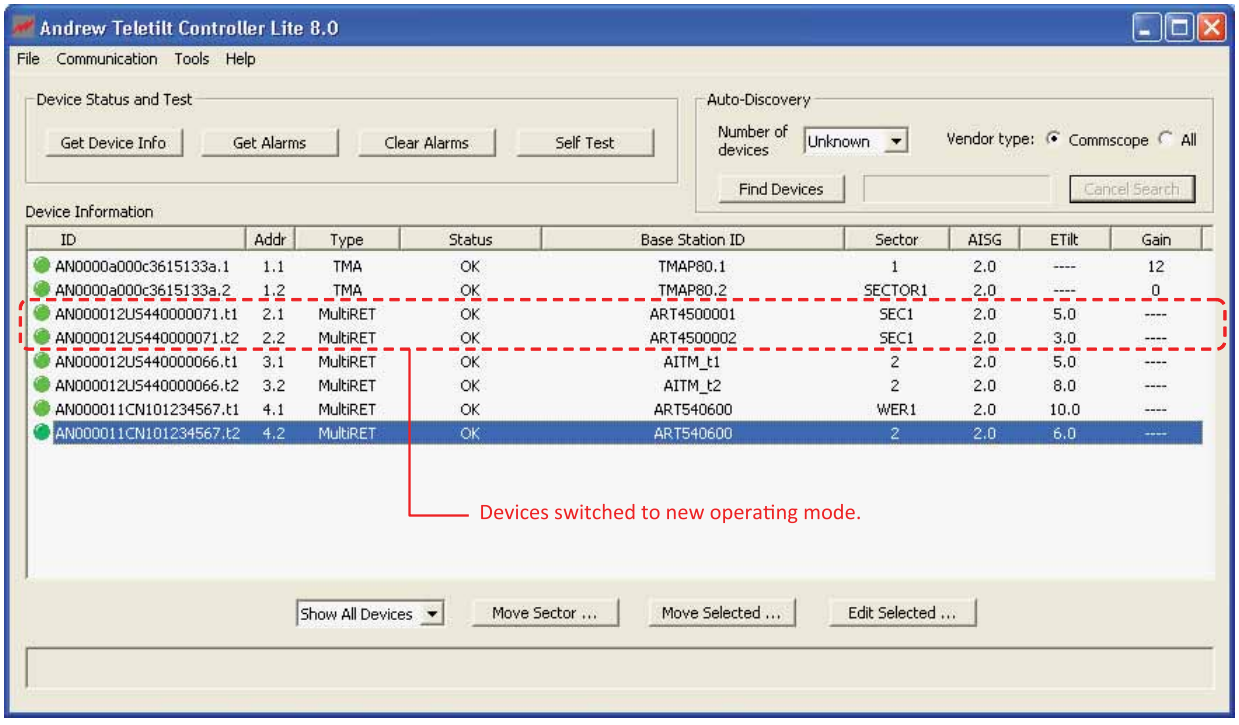
Andrew Teletilt Controller Lite 8.0
File Communication Tools Help
Device Status and Test
Get Device Info
Get Alarms
Clear Alarms
Self Test
Auto-Discovery
Number of devices
Unknown
Vendor type: Commscope All
Find Devices
Cancel Search
Device Information
ID Addr Type Status Base Station ID Sector AISG ETilt Gain
AN0000a000c3615133a.1 1.1 TMA OK TMAP80.1 1 2.0 ---- 12
AN0000a000c3615133a.2 1.2 TMA OK TMAP80.2 SECTOR1 2.0 ---- 0
AN000012US440000071.t1 2.1 MultiRET OK ART4500001 SEC1 2.0 5.0 ----
AN000012US440000071.t2 2.2 MultiRET OK ART4500002 SEC1 2.0 3.0 ----
AN000012US440000066.t1 3.1 MultiRET OK AITM_t1 2 2.0 5.0 ----
AN000012US440000066.t2 3.2 MultiRET OK AITM_t2 2 2.0 8.0 ----
AN000011CN101234567.t1 4.1 MultiRET OK ART540600 WER1 2.0 10.0 ----
AN000011CN101234567.t2 4.2 MultiRET OK ART540600 2 2.0 6.0 ----
Devices switched to new operating mode.
Show All Devices
Move Sector ...
Move Selected ...
Edit Selected ...

Figure 9-3. Switched AITM actuators in selected Operating Mode.

This page intentionally left blank.

Section 10
Device Configuration for Antennas with Multiple Integrated Actuators

After new devices are found and addressed in the ATC Lite program, each device is ready to be configured. All Multiple Integrated Actuators are factory configured, so configuration data is readily available and the relevant information is displayed in the **Device Information** list.

1. Switch to RET Device view by selecting 'Show RETs' from the drop down list below the **Device Information** list.
2. To begin device configuration, click on the device to be configured (Figure 10-1).
3. Click on **Edit Selected** to open the **Configuring Device** screen (Figures 10-1 and 10-2).

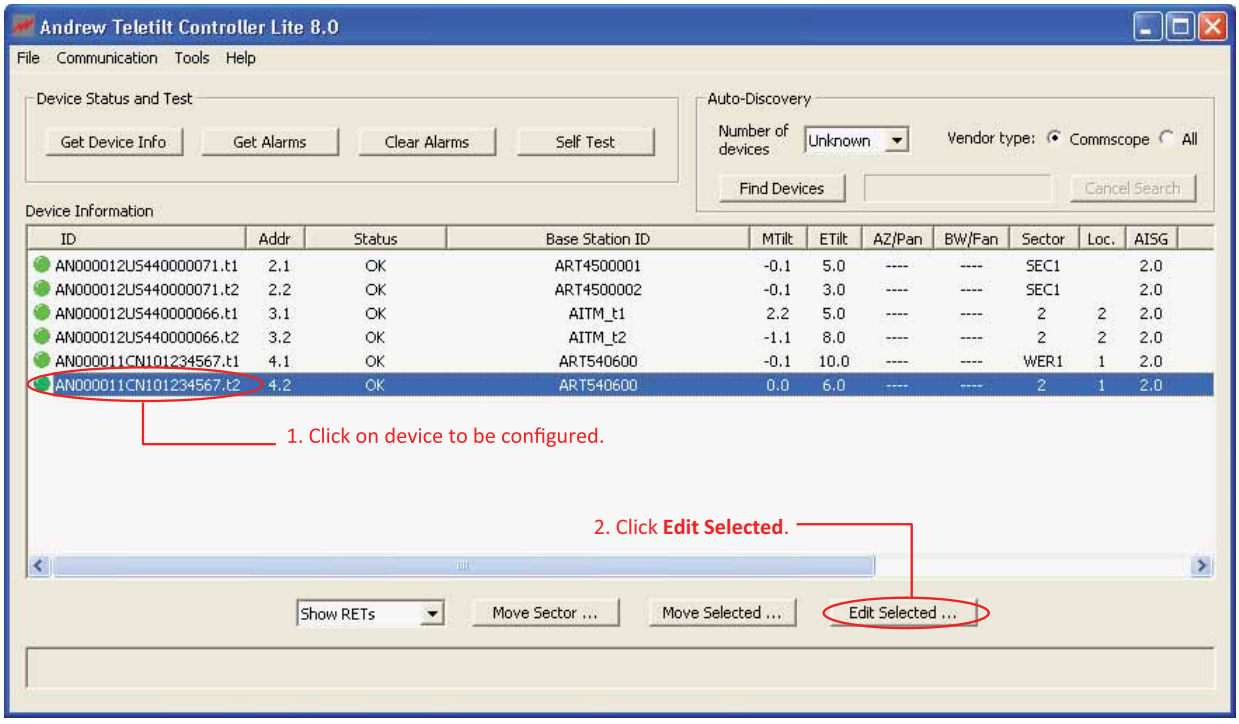
Andrew Teletilt Controller Lite 8.0
File Communication Tools Help
Device Status and Test
Get Device Info
Get Alarms
Clear Alarms
Self Test
Auto-Discovery
Number of devices
Unknown
Vendor type: Commscope All
Find Devices
Cancel Search
Device Information
ID Addr Status Base Station ID MTilt ETilt AZ/Pan BW/Pan Sector Loc. AISG
AN000012US440000071.t1 2.1 OK ART4500001 -0.1 5.0 ---- ---- SEC1 2.0
AN000012US440000071.t2 2.2 OK ART4500002 -0.1 3.0 ---- ---- SEC1 2.0
AN000012US440000066.t1 3.1 OK AITM_t1 2.2 5.0 ---- ---- 2 2 2.0
AN000012US440000066.t2 3.2 OK AITM_t2 -1.1 8.0 ---- ---- 2 2 2.0
AN000011CN101234567.t1 4.1 OK ART540600 -0.1 10.0 ---- ---- WER1 1 2.0
AN000011CN101234567.t2 4.2 OK ART540600 0.0 6.0 ---- ---- 2 1 2.0
1. Click on device to be configured.
2. Click Edit Selected.
Show RETs
Move Sector ...
Move Selected ...
Edit Selected ...

Figure 10-1. Selecting Device to be Configured.

Note the following in Figure 10-2:

- The ID of the device to be configured is displayed in the title bar of the dialog box.
- Devices that have never been configured before will display blank fields for most parameters.
- Actuators that have been factory installed on an antenna are pre-configured to include the antenna model number, antenna type, and antenna serial number. The remaining fields such as Installation Date, Mechanical Tilt, Bearing, Height, Sector, Location, Oper. Band (for AISG 2.0 actuators) or Freq. Band (for AISG 1.1 actuators), Technology, Station ID, and Installer ID will need to be configured.
- Configuration items marked with an asterisk are required; saving a new configuration will be disabled if any of these fields are blank.
- The **Installation Date** field is handled differently from all other configuration items. Although this field is not required, if no installation date has been saved on the actuator, the program will suggest the current date as the default.
- AISG 2.0 Protocol Mode allows a 32 character Station ID.

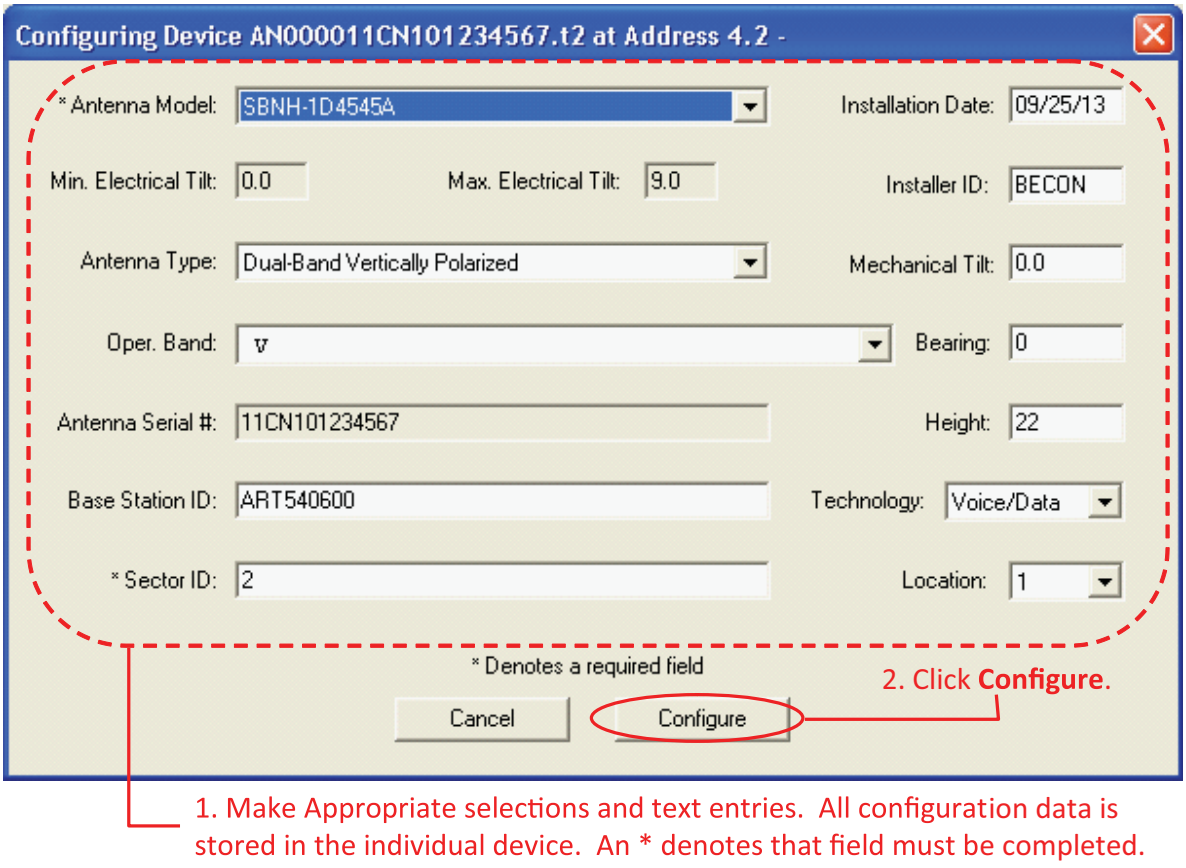

Figure 10-2. Device Configuration Screen.

4. Multiple integrated actuator-equipped antennas do not change the assigned **Antenna Model**.

   For the most current listing of antenna models designed for use with the ATC200-LITE-USB Teletilt system, see the Products tab on the CommScope website.

5. Use the **Antenna Type** drop down list to select the antenna type that is correct for the antenna model selected (Figure 10-2). Note that this value is used for reference only and has no direct affect upon the Actuator/Antenna that is being configured.

6. The serial number of multiple-actuator-equipped antennas is pre-set and cannot be changed. (Figure 10-2).

7. Using the drop down lists and entry fields, specify the parameters for the remaining fields (Operating/Frequency Band, Technology, Base Station ID, Installer ID, Install Date, Mechanical Tilt, Bearing, Height, Sector, and Location). Note the following:

   - A positive mechanical tilt angle means that the antenna beam is directed below the horizontal plane. A negative mechanical tilt angle means that the antenna beam is directed above the horizontal plane.
   - The bearing is the installed compass orientation for this antenna.
   - The height of the antenna on the tower must be entered in the range of 1 to 999. No specific unit of length, such as feet or meters, is associated with this field. However, you should enter a value that conforms to the units of length customarily used by your company for antenna installations.
   - If in AISG 1.1 mode, the ID for the base station associated with this antenna must be 1 to 12 characters in length, and it may contain any combination of numbers and letters. When the actuator is in AISG 2.0 protocol mode, the longer station ID consists of 32 characters.
   - The Installation Date field is handled differently from all other configuration items. Although this field is not required, if no installation date has been saved on the actuator the program will suggest the current date as the default. If the current date is used, it will be saved on the actuator when the **Configure** button is activated. Alternately, the suggested date may be erased and a new date entered, or the field may be left blank. When a date is entered, it must be formatted as MM/DD/YY as shown in Figure 10-2 (A **forward slash** character placed between the month and day and a **forward slash** character placed between the day and year) i.e., July 7, 2008 would be typed as 07/07/08.
   - The installer's ID must be 1 to 5 characters in length with any combination of letters and numbers.
   - Values specified for the frequency band, sector, technology, location, and mechanical tilt are used for reference only and have no direct affect upon the actuator/antenna that is being configured.

- Frequency band (AISG 1.1)/Operating Band (AISG 2.0) value can have multiple values set. Click on the drop down arrow in the list to open the multi selection list. Make selection by clicking on the check box for the relevant frequency. Click outside the list or press ESC key to close the list (Figure 10-3).

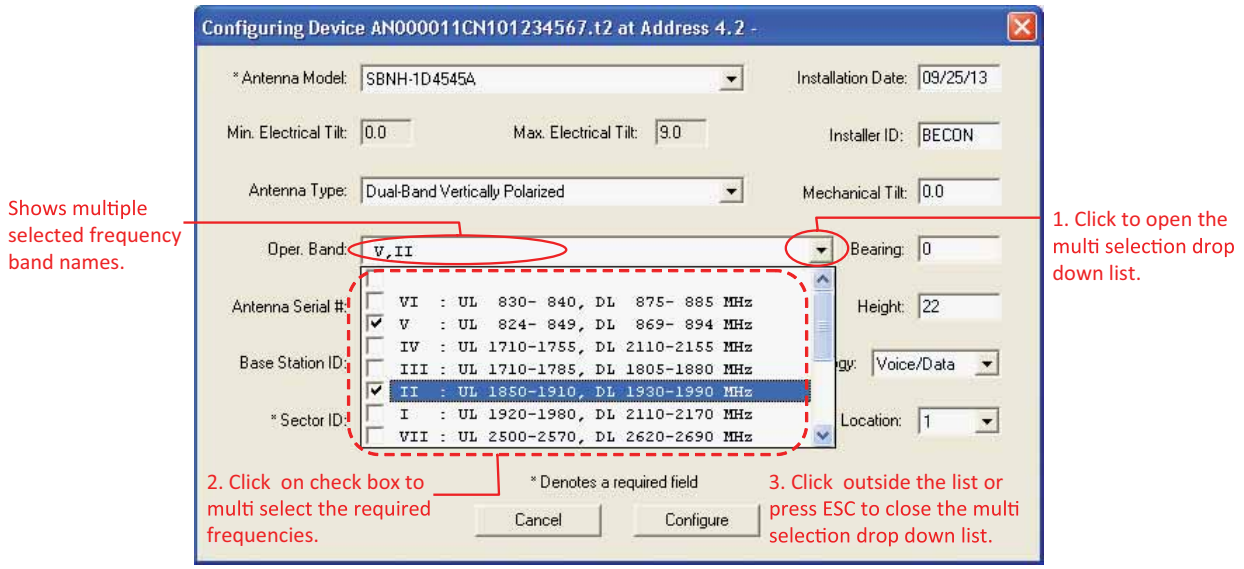
Configuring Device AN000011CN101234567.t2 at Address 4.2 -
* Antenna Model: SBNH-1D4545A
Installation Date: 09/25/13
Min. Electrical Tilt: 0.0
Max. Electrical Tilt: 9.0
Installer ID: BECON
Antenna Type: Dual-Band Vertically Polarized
Mechanical Tilt: 0.0
Oper. Band: V,II
Bearing: 0
Antenna Serial #:
Height: 22
Base Station ID:
Voice/Data
* Sector ID:
Location: 1
VI : UL 830- 840, DL 875- 885 MHz
V : UL 824- 849, DL 869- 894 MHz
IV : UL 1710-1755, DL 2110-2155 MHz
III : UL 1710-1785, DL 1805-1880 MHz
II : UL 1850-1910, DL 1930-1990 MHz
I : UL 1920-1980, DL 2110-2170 MHz
VII : UL 2500-2570, DL 2620-2690 MHz
* Denotes a required field
Cancel
Configure
Shows multiple selected frequency band names.
1. Click to open the multi selection drop down list.
2. Click on check box to multi select the required frequencies.
3. Click outside the list or press ESC to close the multi selection drop down list.

Figure 10-3. Multiple Frequency/Operating Band Selection

8. After verifying the accuracy of all fields, click **Configure**. Alternately, the user may go back and edit/change any of the selections made or click the **Cancel** button to quit this process without making any changes to the actuator's current configuration.
9. After the **Configure** button has been activated, the user will be prompted to confirm changes to the actuator are to be applied. Click **Yes** to proceed with the changes, or click **No** to return to the configuration screen (Figure 10-4).

   When proceeding to make changes, the selected settings will be sent to the actuator and stored there. The main screen will change the status of this device to **Configuring** to indicate that new settings are being sent to the actuator.
10. When the configuration process is complete, a pop-up dialog box will display the results. Normally, the dialog box will show that the changes were successfully sent to the device (Figure 10-5). However, if the configuration process was unable to communicate with the actuator for any reason, a failure message will appear.

    If this occurs, ensure that all cables and connectors to the actuator are properly connected, and that the system is still properly powered up. Also, verify that the actuator is present in the **Device Information** list, and that it does not have a status reading of **Not Reporting**. A status of **Not Reporting** indicates that connectivity to the actuator has been lost. After verifying that each of these items are correct, repeat the configuration process.
11. Click **OK** (Figure 10-5) to dismiss the pop-up dialog box. The main screen will display the results of the device configuration.
12. Note that not all of the items that were configured are displayed on the main screen. To verify that each of the items configured were set correctly, select the device in the **Device Information** list and click **Edit Selected** to review each item (Figure 10-1). Click the **Cancel** button on the **Device Configuration** screen when finished with verification.

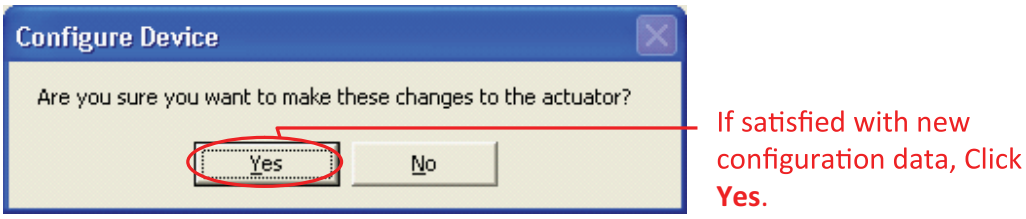
Configure Device
Are you sure you want to make these changes to the actuator?
Yes
No
If satisfied with new configuration data, Click **Yes**.

Figure 10-4. Choosing to Continue with Configuration Changes to the Device.

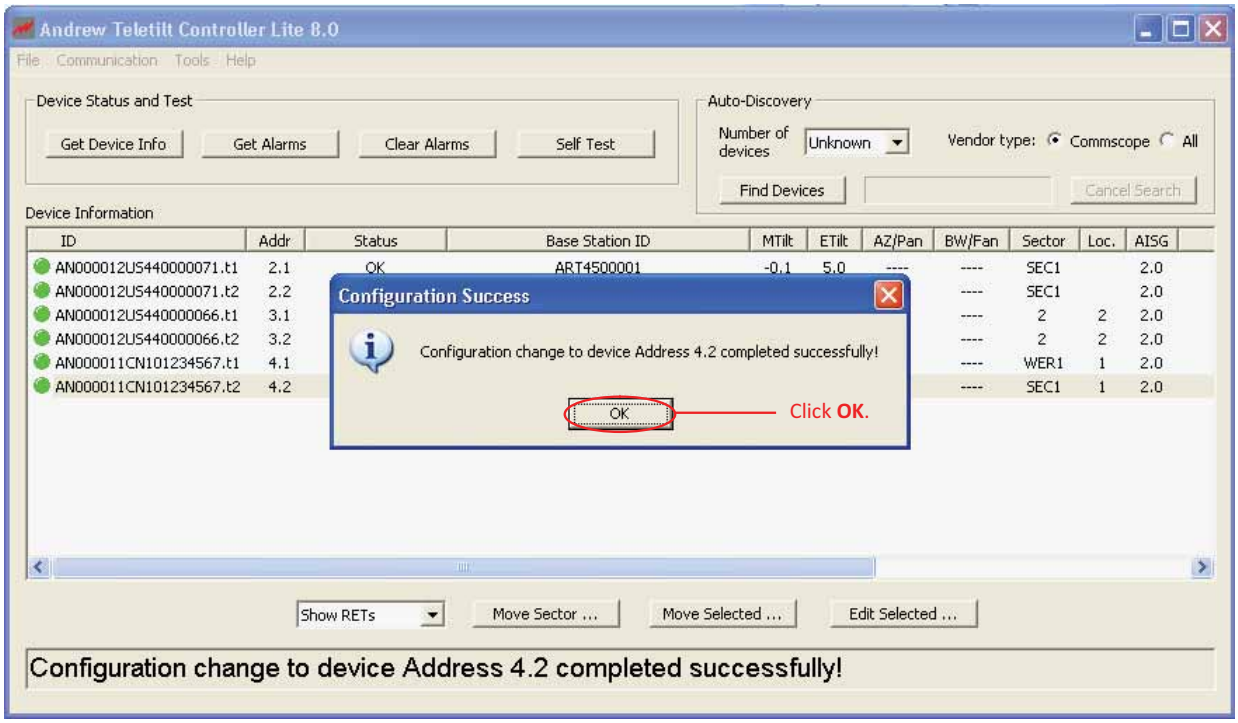
Andrew Teletilt Controller Lite 8.0
File Communication Tools Help
Device Status and Test
Get Device Info
Get Alarms
Clear Alarms
Self Test
Auto-Discovery
Number of devices
Unknown
Vendor type: Commscope All
Find Devices
Cancel Search
Device Information
ID Addr Status Base Station ID MTilt ETilt AZ/Pan BW/Fan Sector Loc. AISG
AN000012US440000071.t1 2.1 OK ART4500001 -0.1 5.0 ---- ---- SEC1 2.0
AN000012US440000071.t2 2.2 ---- SEC1 2.0
AN000012US440000066.t1 3.1 ---- 2 2 2.0
AN000012US440000066.t2 3.2 ---- 2 2 2.0
AN000011CN101234567.t1 4.1 ---- WER1 1 2.0
AN000011CN101234567.t2 4.2 ---- SEC1 1 2.0
Configuration Success
Configuration change to device Address 4.2 completed successfully!
OK
Click **OK**.
Show RETs
Move Sector ...
Move Selected ...
Edit Selected ...
Configuration change to device Address 4.2 completed successfully!

Figure 10-5. Confirmation of Configuration Changes to Device.

This page intentionally left blank.

Section 11
Adjusting the Electrical Downtilt on a Single Antenna Equipped with Multiple Integrated Actuators

The electrical downtilt may be adjusted on any device that is addressed, configured, and whose current state does not prevent antenna movement. Examples where movement is prevented include devices that are not responding to commands from the program, devices that are in the middle of a move or configuration change, and devices that are experiencing a mechanical malfunction.

Each antenna with multiple integrated actuators has several tilt actuators that are denoted by the suffixes ‘t1’, ‘t2’, etc.

1. Switch to RET Device view by selecting ‘Show RETs’ from the drop down list below the **Device Information** list.
2. From the **Device Information** list, click on the device to be moved (Figure 11-1).
3. Click **Move Selected** at the bottom of the screen (Figure 11-1).

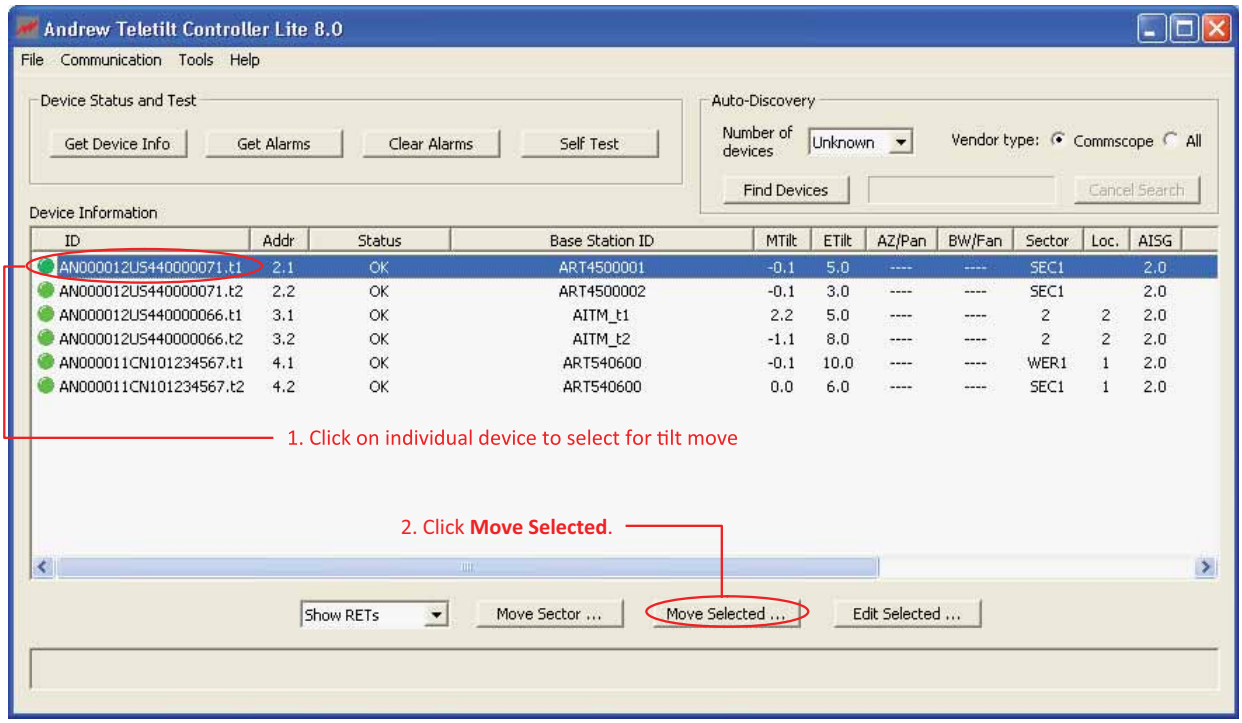
Andrew Teletilt Controller Lite 8.0
File Communication Tools Help
Device Status and Test
Get Device Info
Get Alarms
Clear Alarms
Self Test
Auto-Discovery
Number of devices
Unknown
Vendor type: Commscope All
Find Devices
Cancel Search
Device Information
ID Addr Status Base Station ID MTilt ETilt AZ/Pan BW/Fan Sector Loc. AISG
AN000012U5440000071.t1 2.1 OK ART4500001 -0.1 5.0 ---- ---- SEC1 2.0
AN000012U5440000071.t2 2.2 OK ART4500002 -0.1 3.0 ---- ---- SEC1 2.0
AN000012U5440000066.t1 3.1 OK AITM_t1 2.2 5.0 ---- ---- 2 2 2.0
AN000012U5440000066.t2 3.2 OK AITM_t2 -1.1 8.0 ---- ---- 2 2 2.0
AN000011CN101234567.t1 4.1 OK ART540600 -0.1 10.0 ---- ---- WER1 1 2.0
AN000011CN101234567.t2 4.2 OK ART540600 0.0 6.0 ---- ---- SEC1 1 2.0
1. Click on individual device to select for tilt move
2. Click Move Selected.
Show RETs
Move Sector ...
Move Selected ...
Edit Selected ...

Figure 11-1. Selecting Device for Electrical Downtilt Adjustment.

4. The **Set Actuator Position** screen will appear (Figure 11-2).

   Note, all parameters that can be configured are displayed on this screen. This information may be used as a reference to help determine the new tilt setting. However, configuration items cannot be changed from this screen. All changes to configuration items must be done with the Configuration screen as discussed in Section 6.

5. Enter the new angle in the **New Tilt** text entry field to change the electrical downtilt. Note that the allowed range of angle values is displayed in the **Min Electrical Tilt** and **Max Electrical Tilt** fields in the top part of the screen. Any downtilt angle within this range may be entered. Downtilt is controllable with a precision of 0.1 degree. Other axes may use whole degree precision (Figure 11-2).

   Examples: Five degrees downtilt may be entered as **5** or **5.0**. A downtilt of five and one-half degrees would be entered as **5.5**.

6. Click the **Activate** button (Figure 11-2) to apply changes to the electrical downtilt for this antenna. Alternately, to exit the screen without sending any changes, click on the **Close** button. Antenna movement will begin after the **Activate** button is applied.

   A progress indicator bar (located to the left of **Current Tilt**) will continually update for as long as the move is in progress.

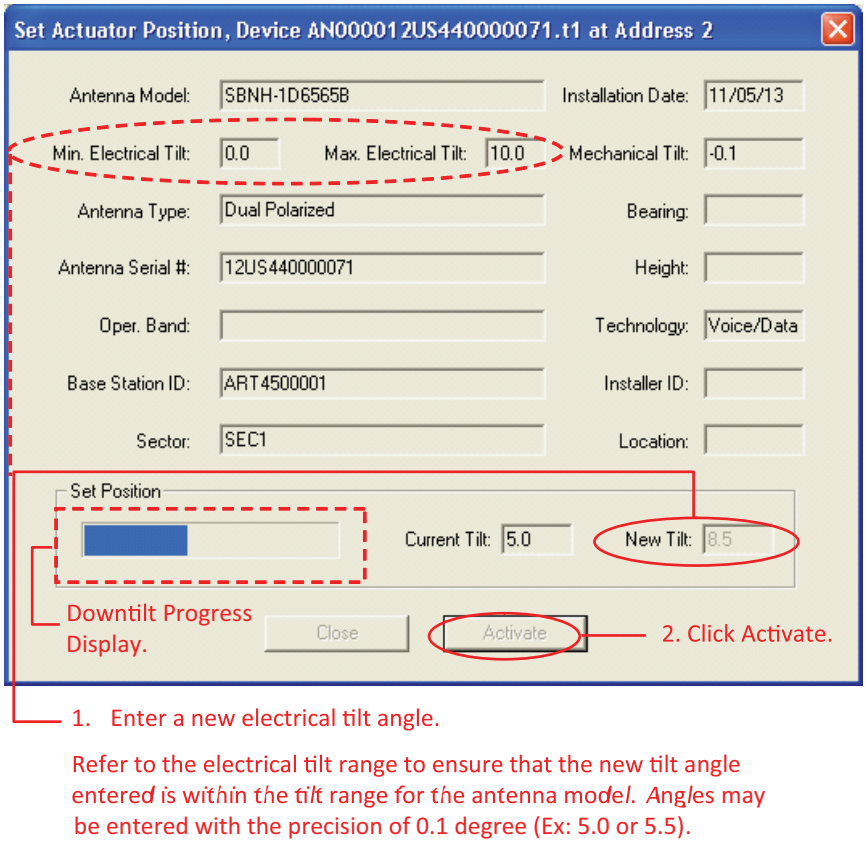

Figure 11-2. Configuring New Electrical Downtilt Setting.

7. You will be notified when movement is complete (Figure 11-3).

   If for any reason the move failed to reach the new tilt angle specified, you will be notified of the failure.

8. At the successful completion of an antenna movement, the **Current Tilt** field will update to show the new tilt angle and the **New Tilt** text entry box will be cleared in preparation for the next move (Figure 11-4). At this point, you may click on the **Close** button to exit this screen and return to the main screen. Alternately, this process may be repeated to further adjust the downtilt or to reapply changes where movement had previously failed, such as a temporary mechanical jam.

9. After closing the **Set Actuator Position** screen, the main screen will show the new electrical downtilt setting in the **Device Information** list.

   After all electrical tilt adjustments are made and you are ready to end the program session, a report can be saved to a file for future reference using the site reports function (see Section 18).

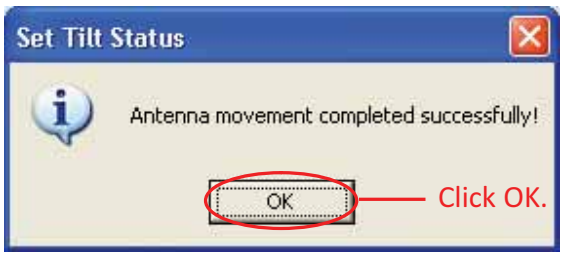

Figure 11-3. Electrical Tilt Adjustment Complete.

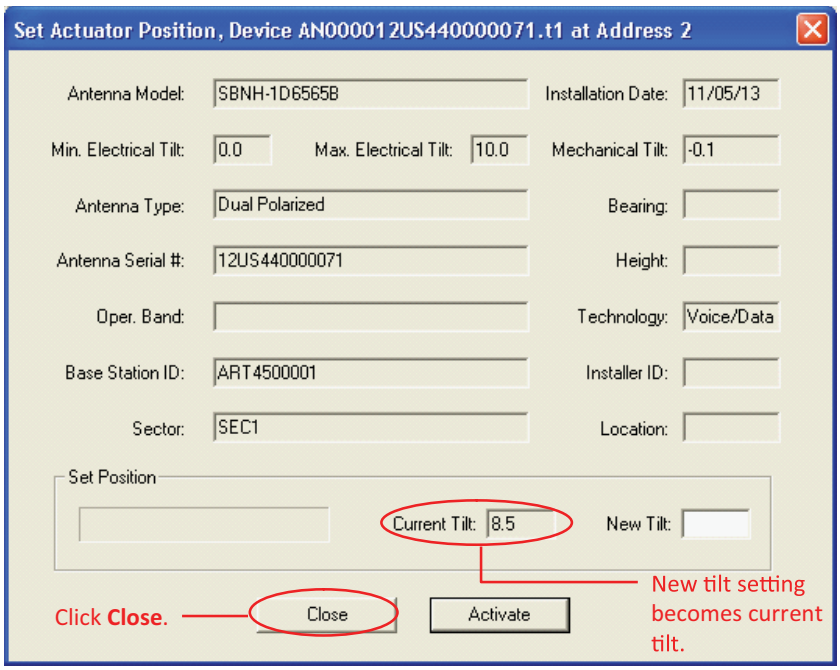

Figure 11-4. New Electrical Tilt Displays in ***Current Tilt*** *Field.*

This page intentionally left blank.

Section 12
Adjusting the Electrical Downtilt on a Group of Antennas Equipped with Multiple Integrated Actuators

In addition to changing the downtilt of a single antenna, changes may also be applied to a group of antennas. The list of antennas that make up the group is defined by three configuration parameters – Sector ID, Minimum Electrical Tilt, and Maximum Electrical Tilt. Only antennas that are identical in all three parameters are candidates for a given group move.

1. Switch to RET Device view by selecting 'Show RETs' from the drop down list below the **Device Information** list.
2. Select a device from the **Device Information** list that contains the Sector ID and tilt range representing the group to be moved (Figure 12-1).
3. Click **Move Sector** (Figure 12-1).
4. From the **Set Electrical Tilt for Sector** screen, notice that the selected device is highlighted and displayed in the box labeled **Antennas Included In Move**. This box displays a list of all devices that will be included in the sector move. Initially, this box contains only the antenna that was selected from the main screen. All of the current configuration settings for this device, including its current tilt, are displayed on this screen (Figure 12-2).

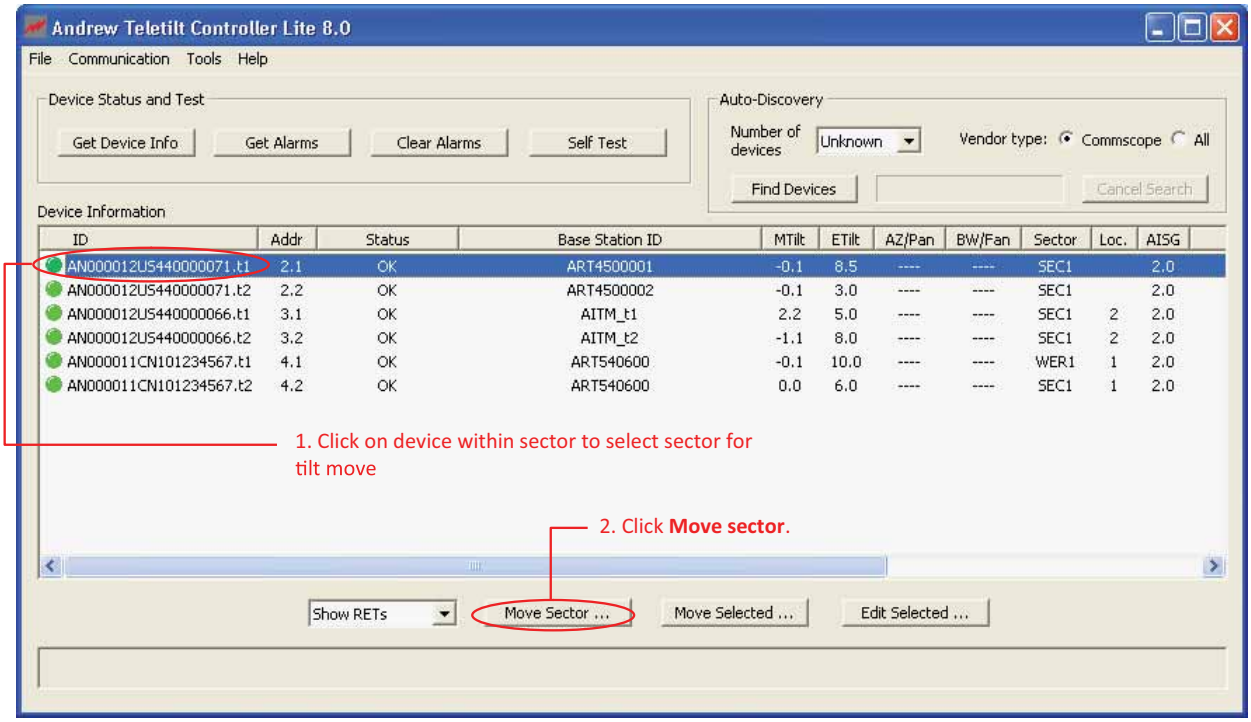
Andrew Teletilt Controller Lite 8.0
File Communication Tools Help
Device Status and Test
Get Device Info
Get Alarms
Clear Alarms
Self Test
Auto-Discovery
Number of devices
Unknown
Vendor type: Commscope All
Find Devices
Cancel Search
Device Information
ID Addr Status Base Station ID MTilt ETilt AZ/Pan BW/Fan Sector Loc. AISG
AN000012US440000071.t1 2.1 OK ART4500001 -0.1 8.5 ---- ---- SEC1 2.0
AN000012US440000071.t2 2.2 OK ART4500002 -0.1 3.0 ---- ---- SEC1 2.0
AN000012US440000066.t1 3.1 OK AITM_t1 2.2 5.0 ---- ---- SEC1 2 2.0
AN000012US440000066.t2 3.2 OK AITM_t2 -1.1 8.0 ---- ---- SEC1 2 2.0
AN000011CN101234567.t1 4.1 OK ART540600 -0.1 10.0 ---- ---- WER1 1 2.0
AN000011CN101234567.t2 4.2 OK ART540600 0.0 6.0 ---- ---- SEC1 1 2.0
1. Click on device within sector to select sector for tilt move
2. Click Move sector.
Show RETs
Move Sector ...
Move Selected ...
Edit Selected ...

Figure 12-1. Selecting an Antenna Within a Sector.

Other devices that have the same sector ID, minimum tilt, and maximum tilt are listed in the box labeled **Additional Compatible Antennas**. The devices in this box may be included in the move by moving one or more of them from this box to the box on the left.

5. To help determine if additional antennas could be included in the group move, click on each model to be considered to display their individual settings. Each time a device is selected, its settings will be displayed on the screen.
6. After the settings have been examined for each candidate, the devices determined to be included in the move may be added to the group in either of the following methods.
   - Select the device and click **Add**.
   - Double click on the device to immediately move it to the **Antennas Included In Move** box (Figure 12-2).

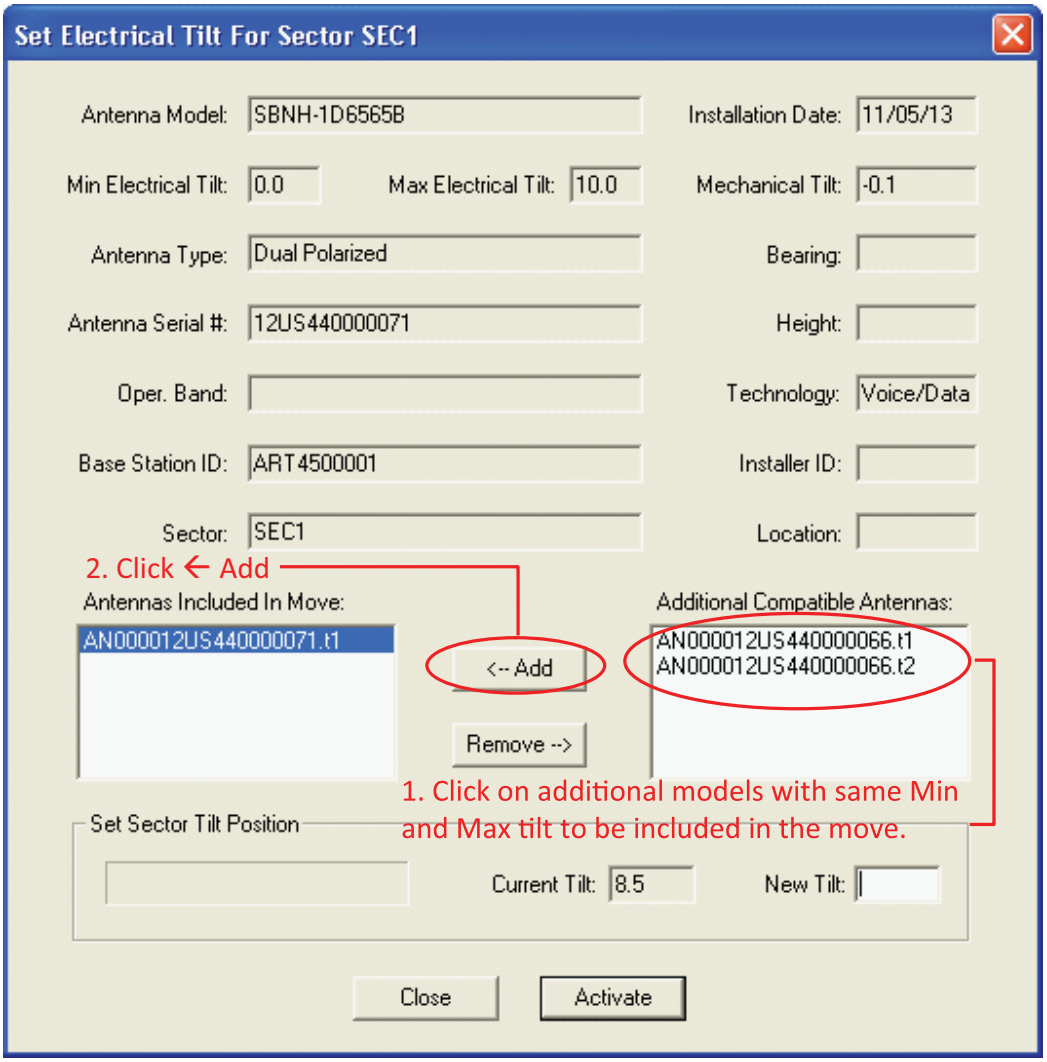

Figure 12-2. Adding Devices to be Included in the Sector Move.

7. After the devices are moved to the **Antennas Included In Move** box, examine the group to ensure that the group does not include any antennas that are not desired for this move.
8. To remove one or more antennas from the group move, either click on that antenna and then click **Remove**, or double click on that antenna to move it back to the right hand box.
9. When satisfied with the list of antennas that will be included in the group move, enter a new downtilt angle and click **Activate** to start the move (Figure 12-3). Progress for each antenna movement in the group will be displayed separately.

   A progress indicator bar (located to the left of **Current Tilt**) will continually update for as long as the move is in progress.

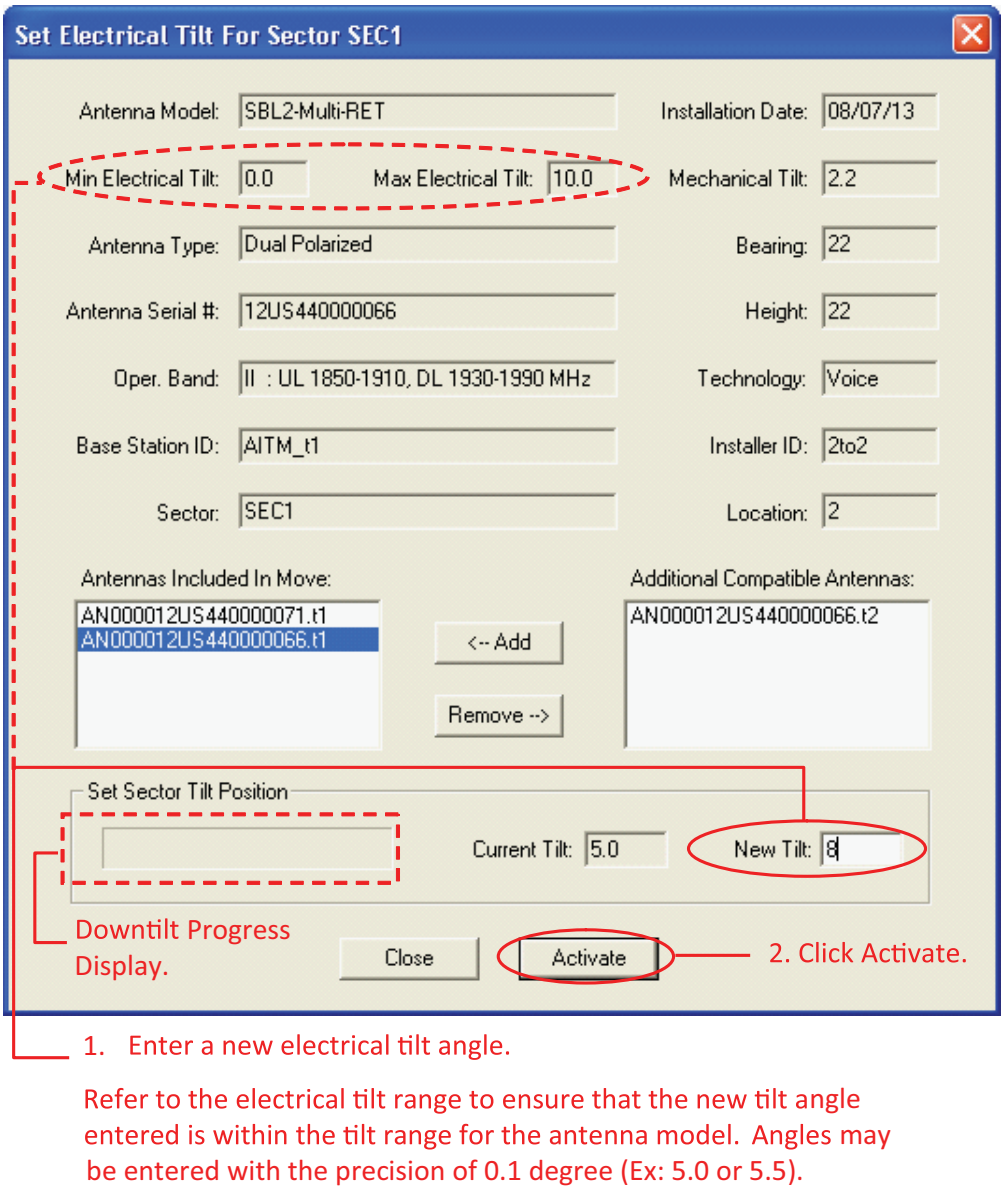
Set Electrical Tilt For Sector SEC1
Antenna Model: SBL2-Multi-RET
Installation Date: 08/07/13
Min Electrical Tilt: 0.0
Max Electrical Tilt: 10.0
Mechanical Tilt: 2.2
Antenna Type: Dual Polarized
Bearing: 22
Antenna Serial #: 12US440000066
Height: 22
Oper. Band: II : UL 1850-1910, DL 1930-1990 MHz
Technology: Voice
Base Station ID: AITM_t1
Installer ID: 2to2
Sector: SEC1
Location: 2
Antennas Included In Move:
AN000012US440000071.t1
AN000012US440000066.t1
<-- Add
Remove -->
Additional Compatible Antennas:
AN000012US440000066.t2
Set Sector Tilt Position
Current Tilt: 5.0
New Tilt: 8
Downtilt Progress Display.
Close
Activate
2. Click Activate.
1. Enter a new electrical tilt angle.
Refer to the electrical tilt range to ensure that the new tilt angle entered is within the tilt range for the antenna model. Angles may be entered with the precision of 0.1 degree (Ex: 5.0 or 5.5).

Figure 12-3. Entering New Electrical Tilt Setting for Sector Move.

10. You will be notified when all antennas have successfully reached the new tilt angle. Click **OK** (Figure 12-4).
11. The **Set Electrical Tilt for Sector** screen will display the new electrical tilt setting in the **Current Tilt** field. At this point, either additional tilt angles may be applied or you may return to the main screen. To return to the main screen, click **Close** (Figure 12-5).
12. After all electrical tilt adjustments are made, a report can be saved to a file for future reference (see Section 18).

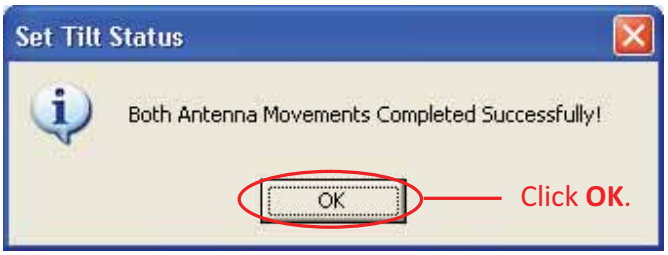

Figure 12-4. Movement Complete.

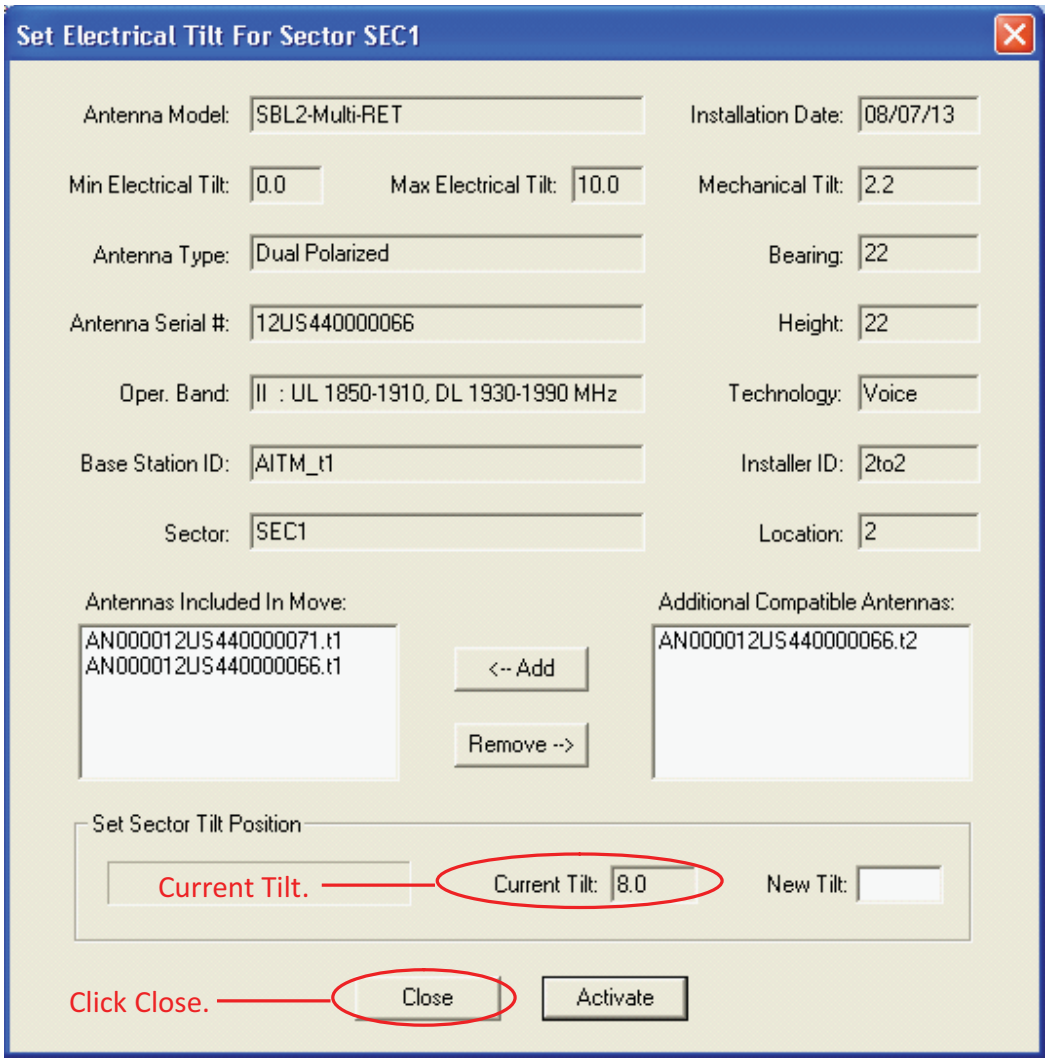

Figure 12-5. Closing Sector Move Screen.

Part 6

Operating Instructions for SmartBeam™ Antennas

This page intentionally left blank.

Section 13
Device Configuration with SmartBeam™ Antennas

After new devices are found and addressed in the ATC Lite program, each device is ready to be configured. New devices, that have never been configured before, will display the status as Not Configured in the **Device Information** list.

1. Switch to RET Device view by selecting 'Show RETs' from the drop down list below the **Device Information** list.
2. To begin device configuration, click on the device to be configured (Figure 13-1).
3. Click on **Edit Selected** to open the **Configuring Device** screen (Figures 13-1 and 13-2).

> Note that the SmartBeam antennas shown in Figure 13-1 can have up to three internal devices. Each device on a SmartBeam antenna will share the same site settings and serial number.

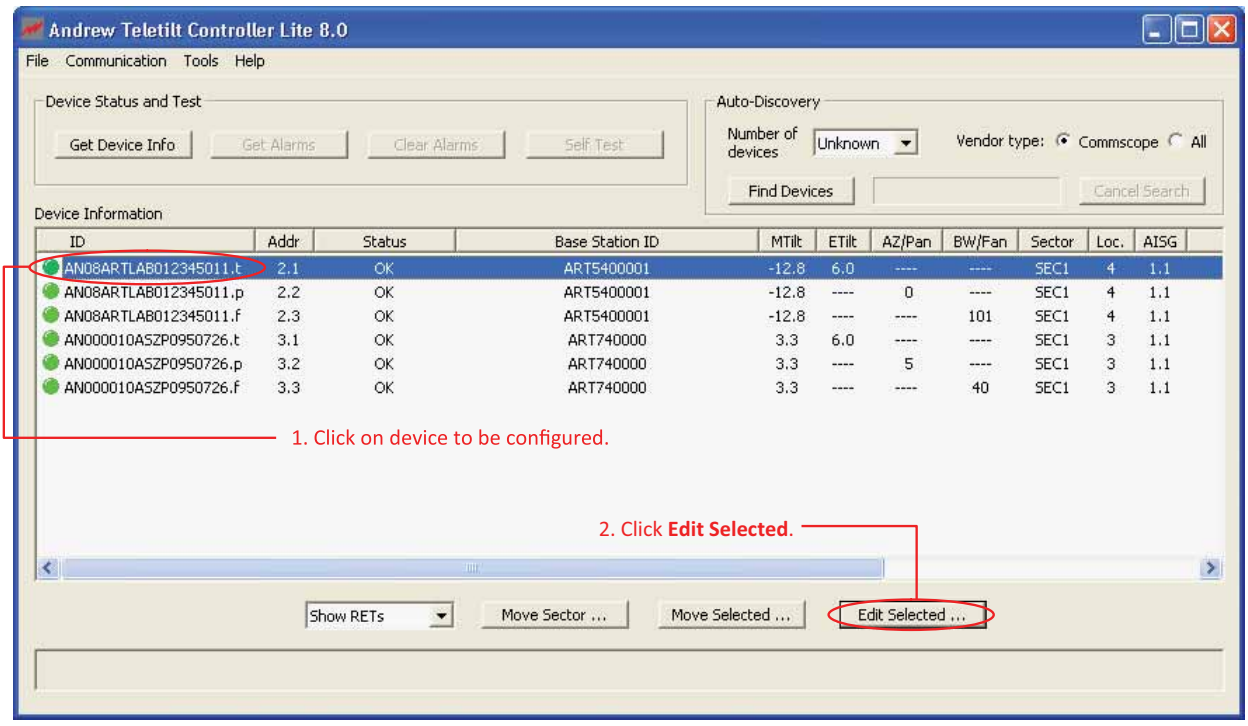
Andrew Teletilt Controller Lite 8.0
File Communication Tools Help
Device Status and Test
Get Device Info
Get Alarms
Clear Alarms
Self Test
Auto-Discovery
Number of devices
Unknown
Vendor type: Commscope All
Find Devices
Cancel Search
Device Information
ID Addr Status Base Station ID MTilt ETilt AZ/Pan BW/Fan Sector Loc. AISG
AN08ARTLAB012345011.t 2.1 OK ART5400001 -12.8 6.0 ---- ---- SEC1 4 1.1
AN08ARTLAB012345011.p 2.2 OK ART5400001 -12.8 ---- 0 ---- SEC1 4 1.1
AN08ARTLAB012345011.f 2.3 OK ART5400001 -12.8 ---- ---- 101 SEC1 4 1.1
AN000010ASZP0950726.t 3.1 OK ART740000 3.3 6.0 ---- ---- SEC1 3 1.1
AN000010ASZP0950726.p 3.2 OK ART740000 3.3 ---- 5 ---- SEC1 3 1.1
AN000010ASZP0950726.f 3.3 OK ART740000 3.3 ---- ---- 40 SEC1 3 1.1
1. Click on device to be configured.
2. Click Edit Selected.
Show RETs
Move Sector ...
Move Selected ...
Edit Selected ...

Figure 13-1. Selecting Device to be Configured.

Note the following in Figure 13-2:

- The ID of the device to be configured is displayed in the title bar of the dialog box.
- Devices that have never been configured before will display blank fields for most parameters.
- Actuators that have been factory installed on an antenna are pre-configured to include the antenna model number, antenna type, and antenna serial number. The remaining fields such as Installation Date, Mechanical Tilt, Bearing, Height, Sector, Location, Oper. Band (for AISG 2.0 actuators) or Freq. Band (for AISG 1.1 actuators), Technology, Station ID, and Installer ID will need to be configured.
- Configuration items marked with an asterisk are required; saving a new configuration will be disabled if any of these fields are blank.
- The **Installation Date** field is handled differently from all other configuration items. Although this field is not required, if no installation date has been saved on the actuator, the program will suggest the current date as the default.
- AISG 2.0 Protocol Mode allows a 32 character Station ID.

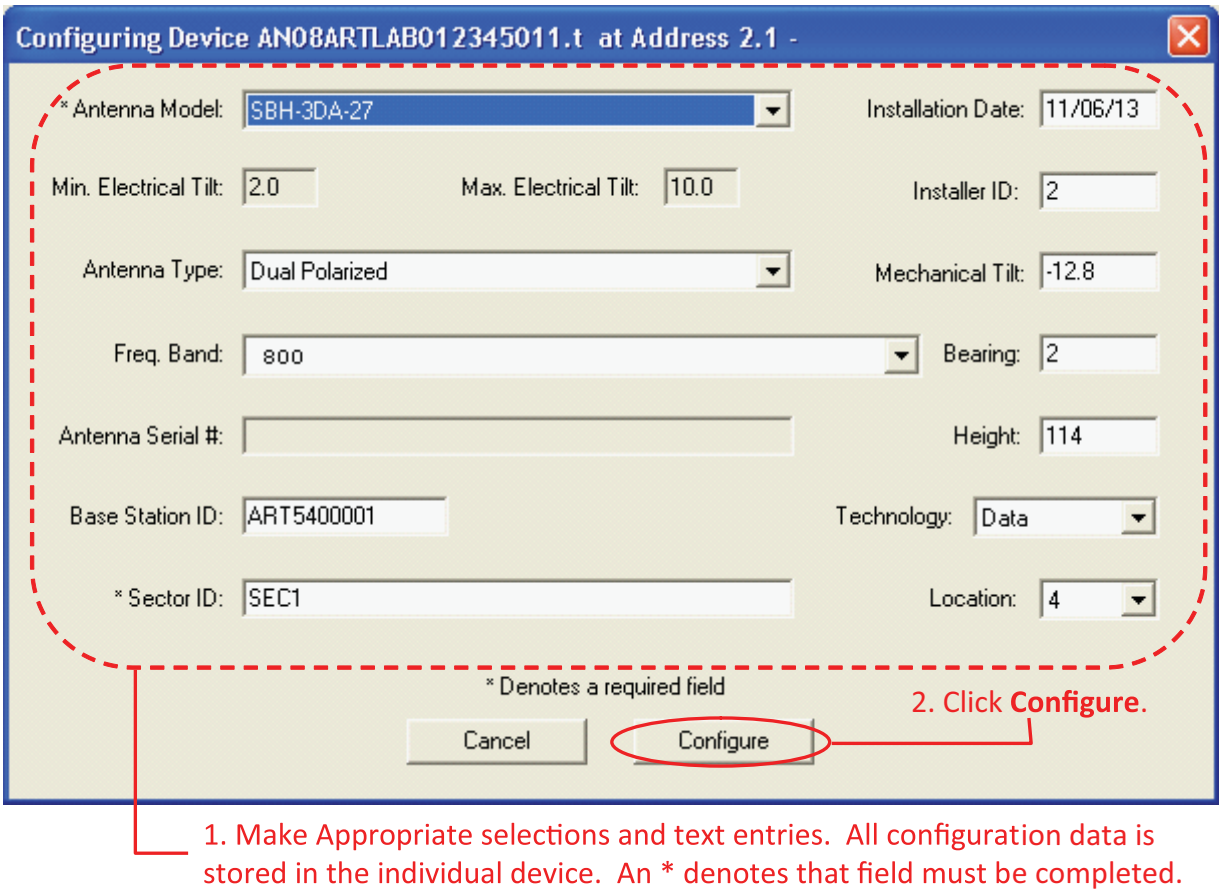

Figure 13-2. Device Configuration Screen.

4. SmartBeam antennas do not change the assigned **Antenna Model**.

   For the most current listing of antenna models designed for use with the ATC200-LITE-USB Teletilt system, see the Products tab on the CommScope website.

5. Use the **Antenna Type** drop down list to select the antenna type that is correct for the antenna model selected (Figure 13-2). Note that this value is used for reference only and has no direct affect upon the Actuator/Antenna that is being configured.

6. The serial number of SmartBeam antennas is pre-set and cannot be changed.(Figure 13-2).

7. Using the drop down lists and entry fields, specify the parameters for the remaining fields (Operating/Frequency Band, Technology, Base Station ID, Installer ID, Install Date, Mechanical Tilt, Bearing, Height, Sector, and Location). Note the following:

   - A positive mechanical tilt angle means that the antenna beam is directed below the horizontal plane. A negative mechanical tilt angle means that the antenna beam is directed above the horizontal plane.
   - The bearing is the installed compass orientation for this antenna.
   - The height of the antenna on the tower must be entered in the range of 1 to 999. No specific unit of length, such as feet or meters, is associated with this field. However, you should enter a value that conforms to the units of length customarily used by your company for antenna installations.
   - If in AISG 1.1 mode, the ID for the base station associated with this antenna must be 1 to 12 characters in length, and it may contain any combination of numbers and letters. When the actuator is in AISG 2.0 protocol mode, the longer station ID consists of 32 characters.
   - The Installation Date field is handled differently from all other configuration items. Although this field is not required, if no installation date has been saved on the actuator the program will suggest the current date as the default. If the current date is used, it will be saved on the actuator when the **Configure** button is activated. Alternately, the suggested date may be erased and a new date entered, or the field may be left blank. When a date is entered, it must be formatted as MM/DD/YY as shown in Figure 13-2 (A **forward slash** character placed between the month and day and a **forward slash** character placed between the day and year) i.e., July 7, 2008 would be typed as 07/07/08.
   - The installer's ID must be 1 to 5 characters in length with any combination of letters and numbers.
   - Values specified for the frequency band, sector, technology, location, and mechanical tilt are used for reference only and have no direct affect upon the actuator/antenna that is being configured.

- Frequency band (AISG 1.1)/Operating Band (AISG 2.0) value can have multiple values set. Click on the drop down arrow in the list to open the multi selection list. Make selection by clicking on the check box for the relevant frequency. Click outside the list or press ESC key to close the list (Figure 13-3).

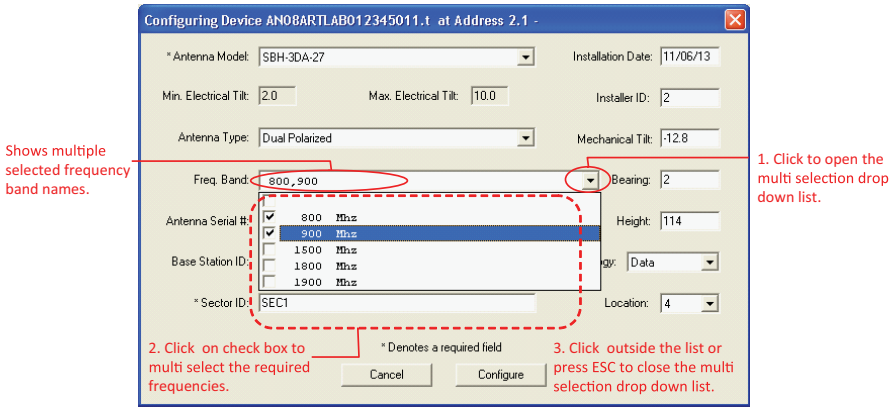
Configuring Device AN08ARTLAB012345011.t at Address 2.1 -
* Antenna Model: SBH-3DA-27
Installation Date: 11/06/13
Min. Electrical Tilt: 2.0
Max. Electrical Tilt: 10.0
Installer ID: 2
Antenna Type: Dual Polarized
Mechanical Tilt: -12.8
Freq. Band: 800,900
Bearing: 2
Antenna Serial #:
800 Mhz
900 Mhz
1500 Mhz
1800 Mhz
1900 Mhz
Height: 114
Base Station ID:
Data
* Sector ID: SEC1
Location: 4
* Denotes a required field
Cancel
Configure
Shows multiple selected frequency band names.
1. Click to open the multi selection drop down list.
2. Click on check box to multi select the required frequencies.
3. Click outside the list or press ESC to close the multi selection drop down list.

Figure 13-3. Multiple Frequency/Operating Band Selection

8. After verifying the accuracy of all fields, click **Configure**. Alternately, the user may go back and edit/change any of the selections made or click the **Cancel** button to quit this process without making any changes to the actuator's current configuration.

9. After the **Configure** button has been activated, the user will be prompted to confirm changes to the actuator are to be applied. Click **Yes** to proceed with the changes, or click **No** to return to the configuration screen (Figure 13-4).

   When proceeding to make changes, the selected settings will be sent to the actuator and stored there. The main screen will change the status of this device to **Configuring** to indicate that new settings are being sent to the actuator.

10. When the configuration process is complete, a pop-up dialog box will display the results. Normally, the dialog box will show that the changes were successfully sent to the device (Figure 13-5). However, if the configuration process was unable to communicate with the actuator for any reason, a failure message will appear.

    If this occurs, ensure that all cables and connectors to the actuator are properly connected, and that the system is still properly powered up. Also, verify that the actuator is present in the **Device Information** list, and that it does not have a status reading of **Not Reporting**. A status of **Not Reporting** indicates that connectivity to the actuator has been lost. After verifying that each of these items are correct, repeat the configuration process.

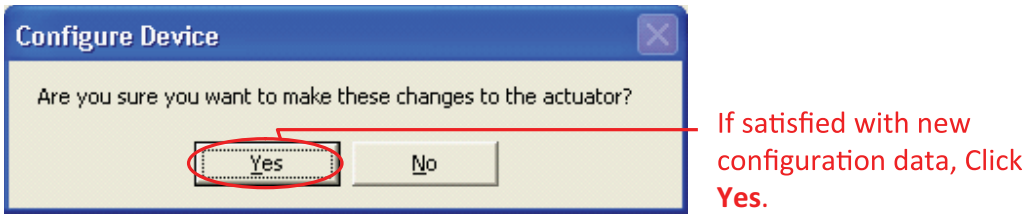
Configure Device
Are you sure you want to make these changes to the actuator?
Yes
No
If satisfied with new configuration data, Click Yes.

Figure 13-4. Choosing to Continue with Configuration Changes to the Device

Figure 13-5. Confirmation of Configuration Changes to Device.

Section 14
Changing the Electrical Downtilt on a Single SmartBeam™ Antenna

The electrical downtilt may be adjusted on any device that is addressed, configured, and whose current state does not prevent antenna movement. Examples where movement is prevented include devices that are not responding to commands from the program, devices that are in the middle of a move or configuration change, and devices that are experiencing a mechanical malfunction.

1. Switch to RET Device view by selecting 'Show RETs' from the drop down list below the **Device Information** list.
2. From the **Device Information** list, click on the device ending in a 't' to be moved (Figure 14-1).
3. Click **Move Selected** at the bottom of the screen (Figure 14-1).

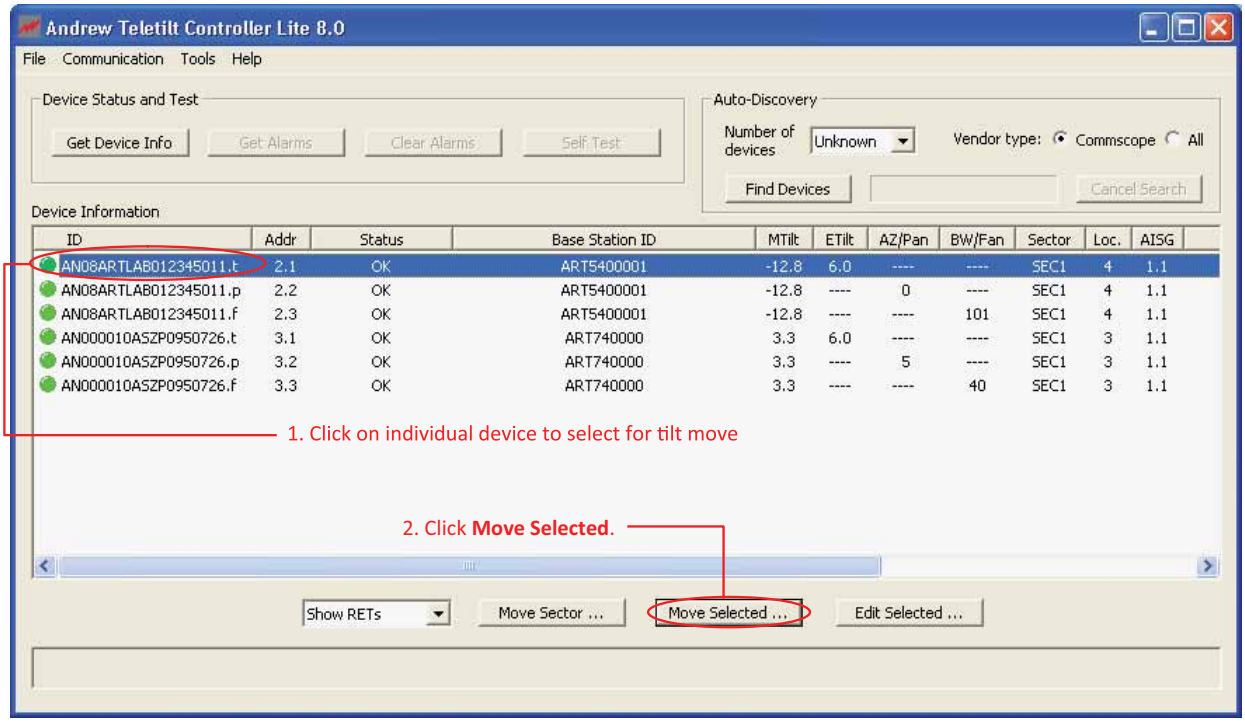
Andrew Teletilt Controller Lite 8.0
File Communication Tools Help
Device Status and Test
Get Device Info
Get Alarms
Clear Alarms
Self Test
Auto-Discovery
Number of devices
Unknown
Vendor type: Commscope All
Find Devices
Cancel Search
Device Information
ID Addr Status Base Station ID MTilt ETilt AZ/Pan BW/Pan Sector Loc. AISG
AN08ARTLAB012345011.t 2.1 OK ART5400001 -12.8 6.0 ---- ---- SEC1 4 1.1
AN08ARTLAB012345011.p 2.2 OK ART5400001 -12.8 ---- 0 ---- SEC1 4 1.1
AN08ARTLAB012345011.f 2.3 OK ART5400001 -12.8 ---- ---- 101 SEC1 4 1.1
AN000010ASZP0950726.t 3.1 OK ART740000 3.3 6.0 ---- ---- SEC1 3 1.1
AN000010ASZP0950726.p 3.2 OK ART740000 3.3 ---- 5 ---- SEC1 3 1.1
AN000010ASZP0950726.f 3.3 OK ART740000 3.3 ---- ---- 40 SEC1 3 1.1
1. Click on individual device to select for tilt move
2. Click Move Selected.
Show RETs
Move Sector ...
Move Selected ...
Edit Selected ...

Figure 14-1. Selecting Device for Electrical Downtilt Adjustment.

4. The **Set Actuator Position** screen will appear (Figure 14-2).

   Note, all parameters that can be configured are displayed on this screen. This information may be used as a reference to help determine the new tilt setting. However, configuration items cannot be changed from this screen. All changes to configuration items must be done with the Configuration screen as discussed in Section 10.

5. Enter the new angle in the **New Tilt** text entry field to change the electrical downtilt. Note that the allowed range of angle values is displayed in the **Min Electrical Tilt** and **Max Electrical Tilt** fields in the top part of the screen. Any downtilt angle within this range may be entered. Downtilt is controllable with a precision of 0.1 degree. Other axes may use whole degree precision (Figure 14-2).

   Examples: Five degrees downtilt may be entered as **5** or **5.0**. A downtilt of five and one-half degrees would be entered as **5.5**.

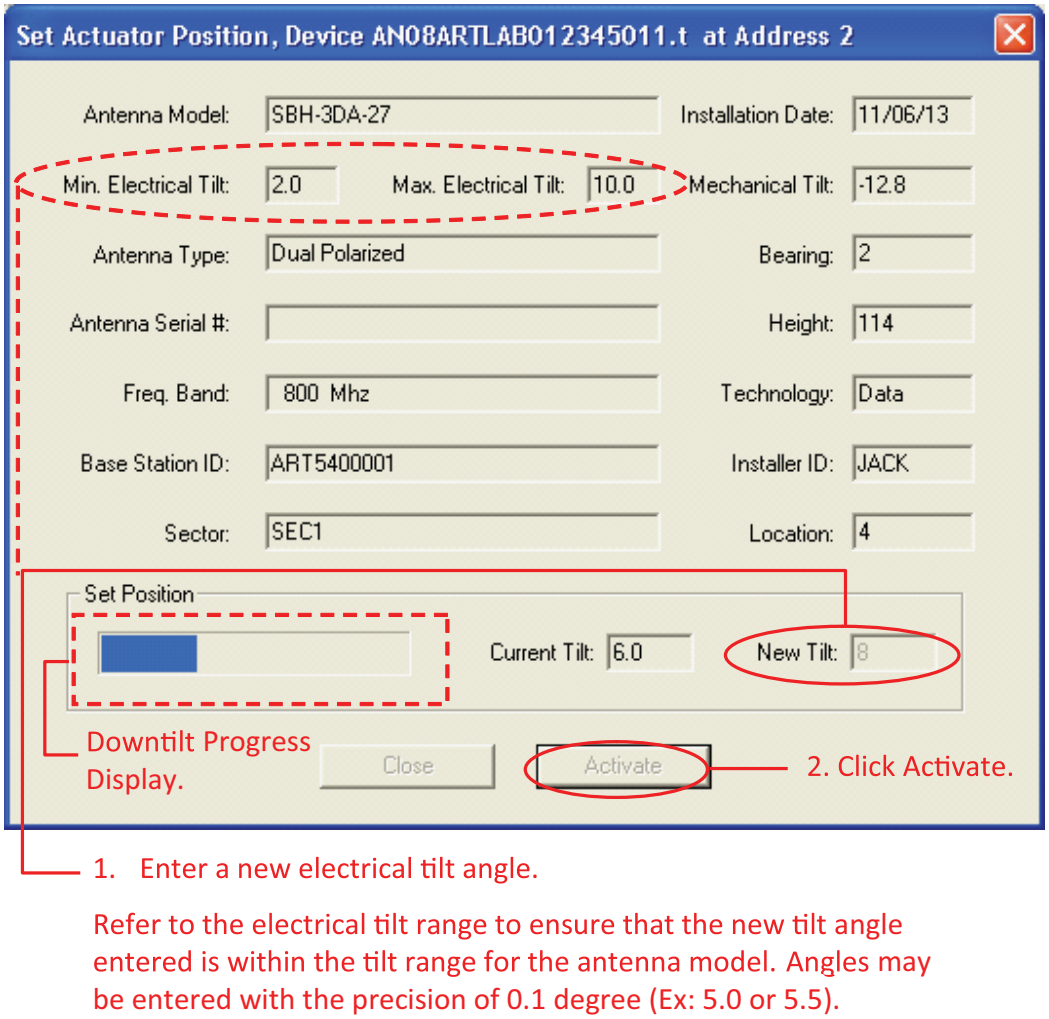
Set Actuator Position, Device AN08ARTLAB012345011.t at Address 2
Antenna Model: SBH-3DA-27
Installation Date: 11/06/13
Min. Electrical Tilt: 2.0
Max. Electrical Tilt: 10.0
Mechanical Tilt: -12.8
Antenna Type: Dual Polarized
Bearing: 2
Antenna Serial #:
Height: 114
Freq. Band: 800 Mhz
Technology: Data
Base Station ID: ART5400001
Installer ID: JACK
Sector: SEC1
Location: 4
Set Position
Current Tilt: 6.0
New Tilt: 8
Downtilt Progress Display.
Close
Activate
2. Click Activate.
1. Enter a new electrical tilt angle.
Refer to the electrical tilt range to ensure that the new tilt angle entered is within the tilt range for the antenna model. Angles may be entered with the precision of 0.1 degree (Ex: 5.0 or 5.5).

Figure 14-2. Configuring New Electrical Downtilt Setting.

6. Click the **Activate** button (Figure 14-2) to apply changes to the electrical downtilt for this antenna. Alternately, to exit the screen without sending any changes, click on the **Close** button. Antenna movement will begin after the **Activate** button is applied.

   A progress indicator bar (located to the left of **Current Tilt**) will continually update for as long as the move is in progress.

7. You will be notified when movement is complete (Figure 14-3).

   If for any reason the move failed to reach the new tilt angle specified, you will be notified of the failure.

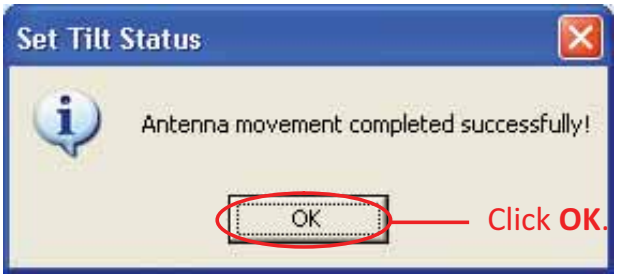

Figure 14-3. Electrical Tilt Adjustment Complete.

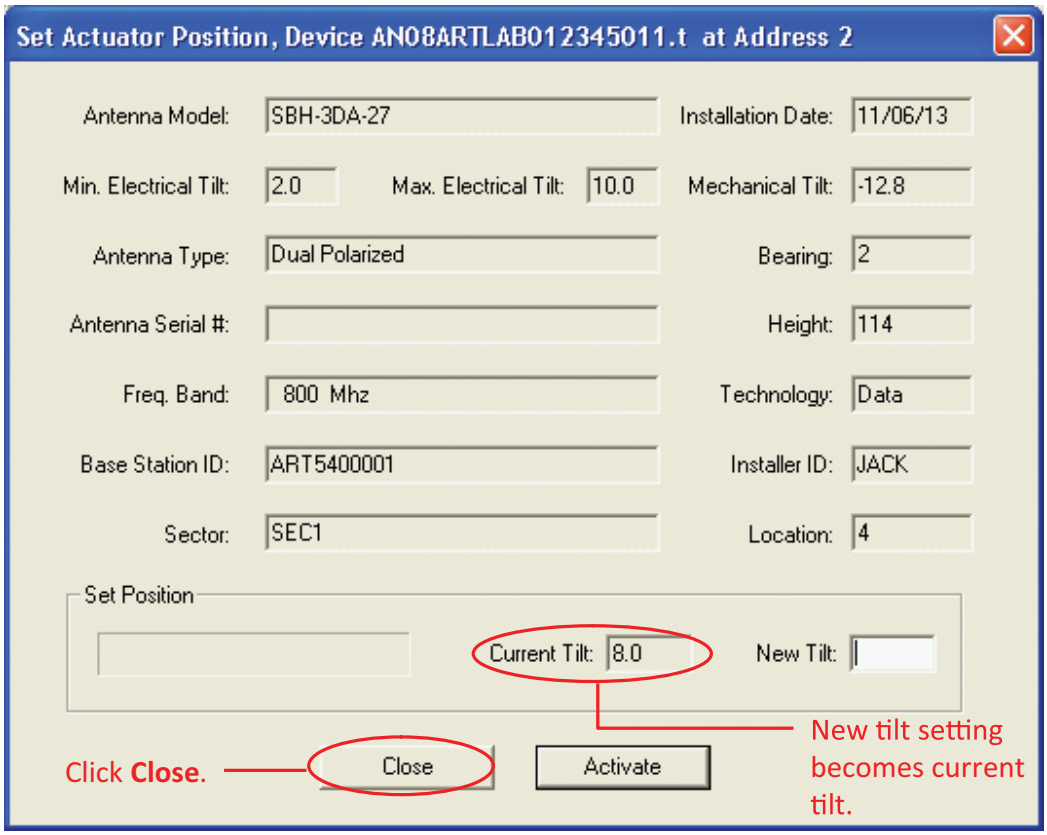

Figure 14-4. New Electrical Tilt Displays in ***Current Tilt*** *Field.*

8. At the successful completion of an antenna movement, the **Current Tilt** field will update to show the new tilt angle and the **New Tilt** text entry box will be cleared in preparation for the next move (Figure 14-4). At this point, you may click on the **Close** button to exit this screen and return to the main screen. Alternately, this process may be repeated to further adjust the downtilt or to reapply changes where movement had previously failed, such as a temporary mechanical jam.
9. After closing the **Set Actuator Position** screen, the main screen will show the new electrical downtilt setting in the **Device Information** list.

   After all electrical tilt adjustments are made and you are ready to end the program session, a report can be saved to a file for future reference using the site reports function (see Section 18).

Section 15
Changing the Boresight (Pan) on a Single SmartBeam™ Antenna

The boresight (pan) may be adjusted on any device that is addressed, configured, and whose current state does not prevent antenna movement. Examples where movement is prevented include devices that are not responding to commands from the program, devices that are in the middle of a move or configuration change, and devices that are experiencing a mechanical malfunction.

1. Switch to RET Device view by selecting 'Show RETs' from the drop down list below the **Device Information** list.
2. From the **Device Information** list, click on the device ending in a 'p' to be moved (Figure 15-1).
3. Click **Move Selected** at the bottom of the screen (Figure 15-1).

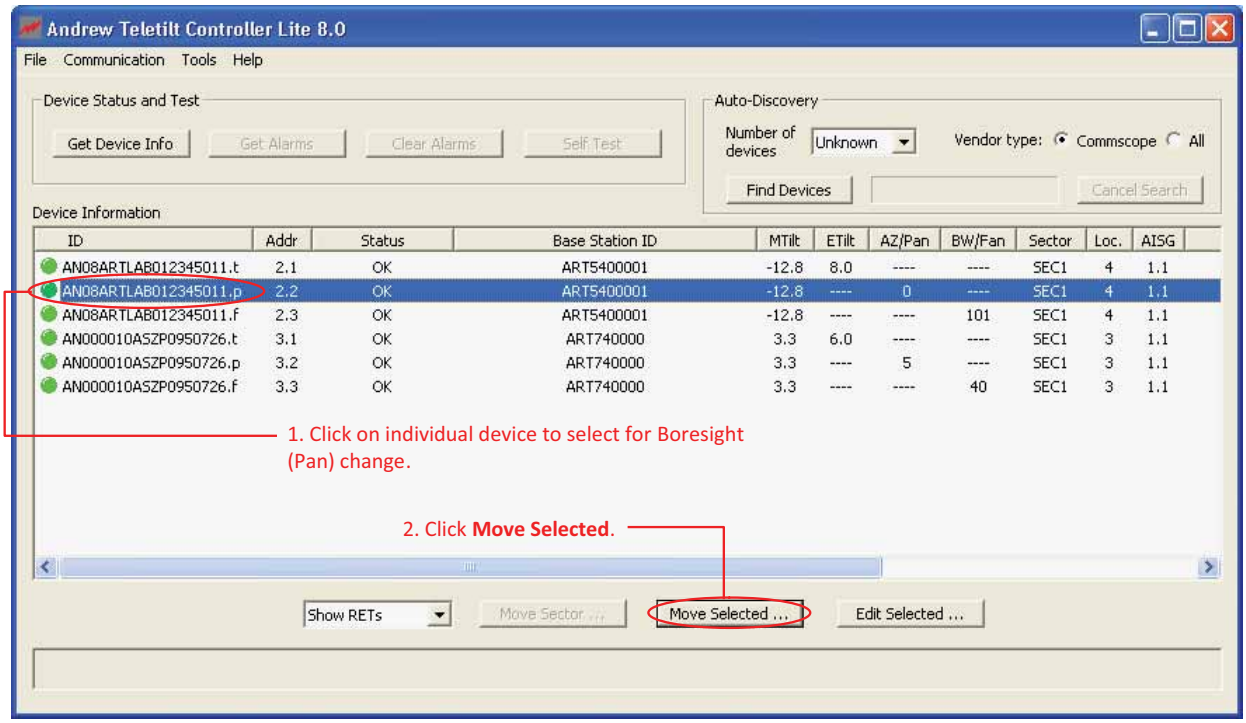
Andrew Teletilt Controller Lite 8.0
File Communication Tools Help
Device Status and Test
Get Device Info
Get Alarms
Clear Alarms
Self Test
Auto-Discovery
Number of devices
Unknown
Vendor type: Commscope All
Find Devices
Cancel Search
Device Information
ID Addr Status Base Station ID MTilt ETilt AZ/Pan BW/Pan Sector Loc. AISG
AN08ARTLAB012345011.t 2.1 OK ART5400001 -12.8 8.0 ---- ---- SEC1 4 1.1
AN08ARTLAB012345011.p 2.2 OK ART5400001 -12.8 ---- 0 ---- SEC1 4 1.1
AN08ARTLAB012345011.f 2.3 OK ART5400001 -12.8 ---- ---- 101 SEC1 4 1.1
AN000010ASZP0950726.t 3.1 OK ART740000 3.3 6.0 ---- ---- SEC1 3 1.1
AN000010ASZP0950726.p 3.2 OK ART740000 3.3 ---- 5 ---- SEC1 3 1.1
AN000010ASZP0950726.f 3.3 OK ART740000 3.3 ---- ---- 40 SEC1 3 1.1
1. Click on individual device to select for Boresight (Pan) change.
2. Click Move Selected.
Show RETs
Move Sector ...
Move Selected ...
Edit Selected ...

Figure 15-1. Selecting Device for Boresight (Pan) Adjustment.

4. The **Set Actuator Position** screen will appear (Figure 15-2).

   Note, all parameters that can be configured are displayed on this screen. This information may be used as a reference to help determine the new boresight (pan) setting. However, configuration items cannot be changed from this screen. All changes to configuration items must be done with the Configuration screen as discussed in Section 10.

5. Enter the new azimuth in the **New AZ/Pan** text entry field to change the boresight (pan). Note that the allowed AZ/Pan range is displayed in the **Min AZ/Pan** and **Max AZ/Pan** fields in the top part of the screen. Any degree of azimuth within this range may be entered. Values may be entered as whole degrees (Figure 15-2).

   Examples: Five degrees boresight (pan) may be entered as **5** or **5.0**.

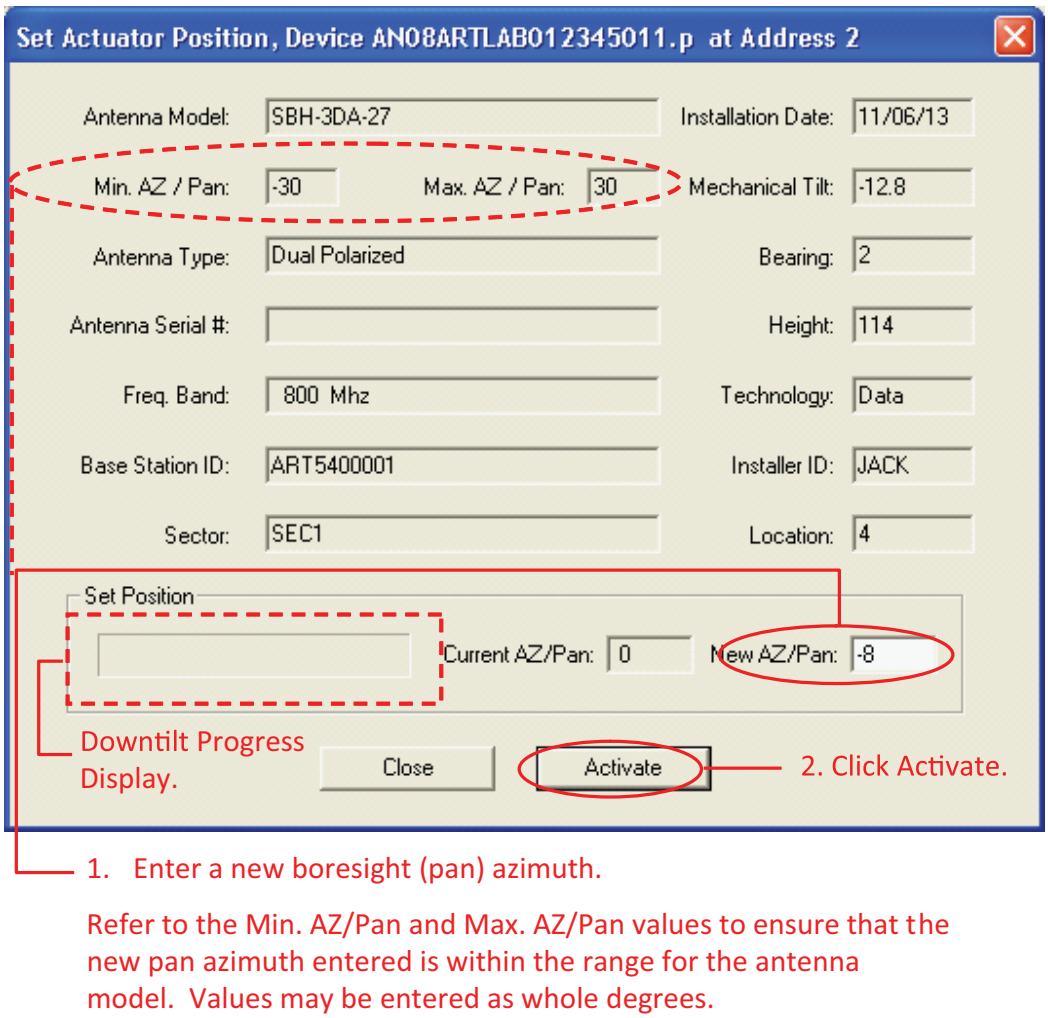
Set Actuator Position, Device AN08ARTLAB012345011.p at Address 2
Antenna Model: SBH-3DA-27
Installation Date: 11/06/13
Min. AZ / Pan: -30
Max. AZ / Pan: 30
Mechanical Tilt: -12.8
Antenna Type: Dual Polarized
Bearing: 2
Antenna Serial #:
Height: 114
Freq. Band: 800 Mhz
Technology: Data
Base Station ID: ART5400001
Installer ID: JACK
Sector: SEC1
Location: 4
Set Position
Current AZ/Pan: 0
New AZ/Pan: -8
Downtilt Progress Display.
Close
Activate
2. Click Activate.
1. Enter a new boresight (pan) azimuth.
Refer to the Min. AZ/Pan and Max. AZ/Pan values to ensure that the new pan azimuth entered is within the range for the antenna model. Values may be entered as whole degrees.

Figure 15-2. Configuring New Boresight (Pan) Setting.

6. Click the **Activate** button (Figure 15-2) to apply changes to the boresight (pan) for this antenna. Alternately, to exit the screen without sending any changes, click on the **Close** button. Antenna movement will begin after the **Activate** button is applied.

   A progress indicator bar (located to the left of **Current AZ/Pan**) will continually update for as long as the move is in progress.

7. You will be notified when movement is complete (Figure 15-3).

   If for any reason the move failed to reach the new boresight (pan) azimuth specified, you will be notified of the failure.

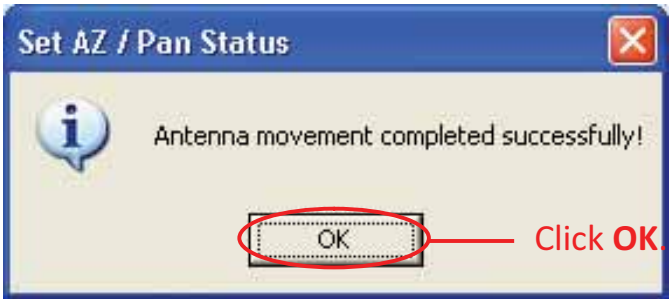

Figure 15-3. Boresight (Pan) Adjustment Complete.

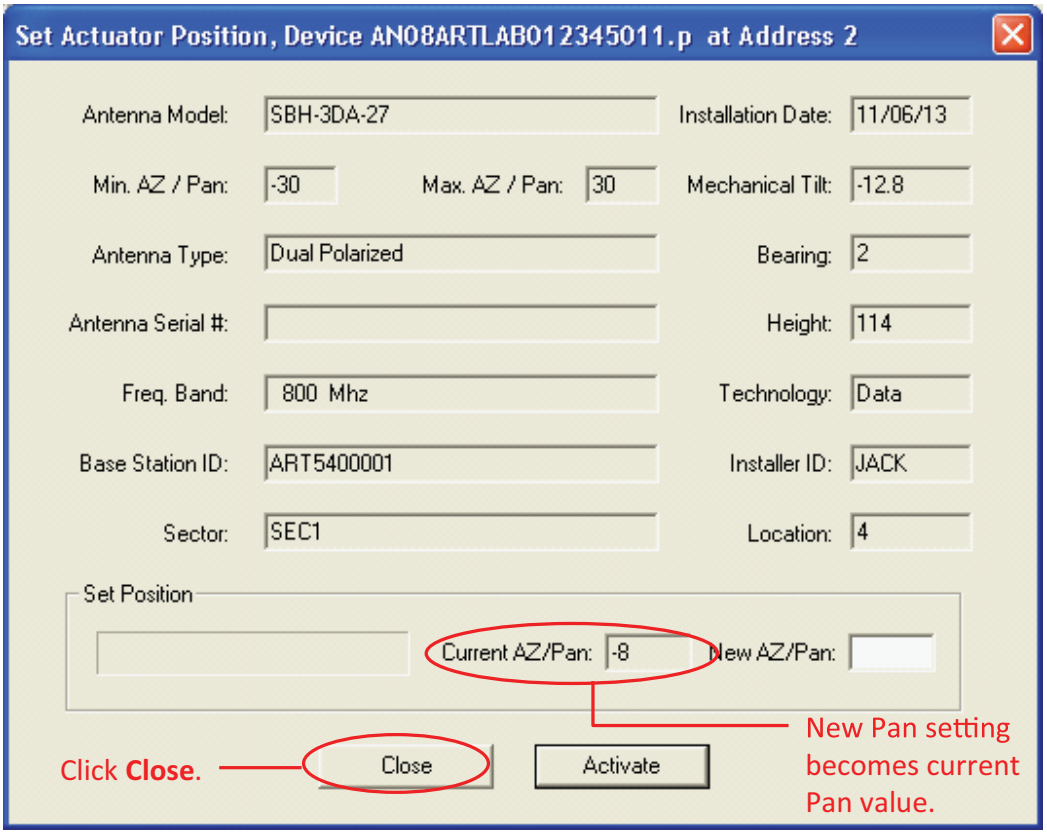

Figure 15-4. New Boresight (Pan) Displays in ***Current AZ/Pan*** *Field.*

8. At the successful completion of an antenna movement, the **Current AZ/Pan** field will update to show the new pan azimuth and the **New AZ/Pan** text entry box will be cleared in preparation for the next move (Figure 15-4). At this point, you may click on the **Close** button to exit this screen and return to the main screen. Alternately, this process may be repeated to further adjust the boresight (pan) or to reapply changes where movement had previously failed, such as a temporary mechanical jam.
9. After closing the **Set Actuator Position** screen, the main screen will show the new boresight (pan) setting in the **Device Information** list.

   After all boresight (pan) adjustments are made and you are ready to end the program session, a report can be saved to a file for future reference (see Section 18).

Section 16
Changing the Beamwidth (Fan) on a Single SmartBeam™ Antenna

The Beamwidth (fan) may be adjusted on any device that is addressed, configured, and whose current state does not prevent antenna movement. Examples where movement is prevented include devices that are not responding to commands from the program, devices that are in the middle of a move or configuration change, and devices that are experiencing a mechanical malfunction.

1. Switch to RET Device view by selecting 'Show RETs' from the drop down list below the **Device Information** list.
2. From the **Device Information** list, click on the device ending in a 'f' to be moved (Figure 16-1).
3. Click **Move Selected** at the bottom of the screen (Figure 16-1).

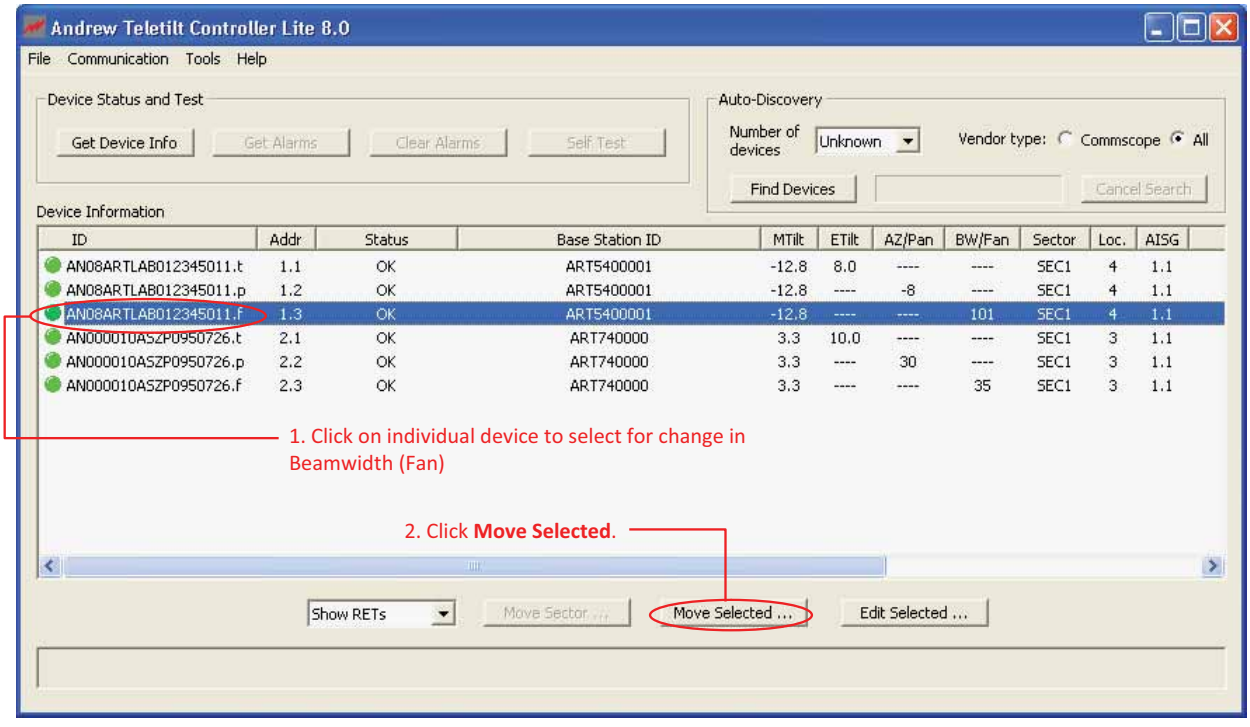
Andrew Teletilt Controller Lite 8.0
File Communication Tools Help
Device Status and Test
Get Device Info
Get Alarms
Clear Alarms
Self Test
Auto-Discovery
Number of devices
Unknown
Vendor type: Commscope All
Find Devices
Cancel Search
Device Information
ID Addr Status Base Station ID MTilt ETilt AZ/Pan BW/Fan Sector Loc. AISG
AN08ARTLAB012345011.t 1.1 OK ART5400001 -12.8 8.0 ---- ---- SEC1 4 1.1
AN08ARTLAB012345011.p 1.2 OK ART5400001 -12.8 ---- -8 ---- SEC1 4 1.1
AN08ARTLAB012345011.F 1.3 OK ART5400001 -12.8 ---- ---- 101 SEC1 4 1.1
AN000010ASZP0950726.t 2.1 OK ART740000 3.3 10.0 ---- ---- SEC1 3 1.1
AN000010ASZP0950726.p 2.2 OK ART740000 3.3 ---- 30 ---- SEC1 3 1.1
AN000010ASZP0950726.f 2.3 OK ART740000 3.3 ---- ---- 35 SEC1 3 1.1
1. Click on individual device to select for change in Beamwidth (Fan)
2. Click Move Selected.
Show RETs
Move Sector ...
Move Selected ...
Edit Selected ...

Figure 16-1. Selecting Device for Beamwidth (Fan) Adjustment.

4. The **Set Actuator Position** screen will appear (Figure 16-2).

   Note, all parameters that can be configured are displayed on this screen. This information may be used as a reference to help determine the new Beamwidth (fan) setting. However, configuration items cannot be changed from this screen. All changes to configuration items must be done with the Configuration screen as discussed in Section 10.

5. Enter the new beamwidth value in the **New BW/Fan** text entry field to change the Beamwidth (fan). Note that the allowed BW/Pan range is displayed in the **Min BW/Fan** and **Max BW/Fan** fields in the top part of the screen. Any degree of beamwidth within this range may be entered. Values may be entered as whole degrees (Figure 16-2).

   Examples: Five degrees Beamwidth (Fan) may be entered as **5** or **5.0**

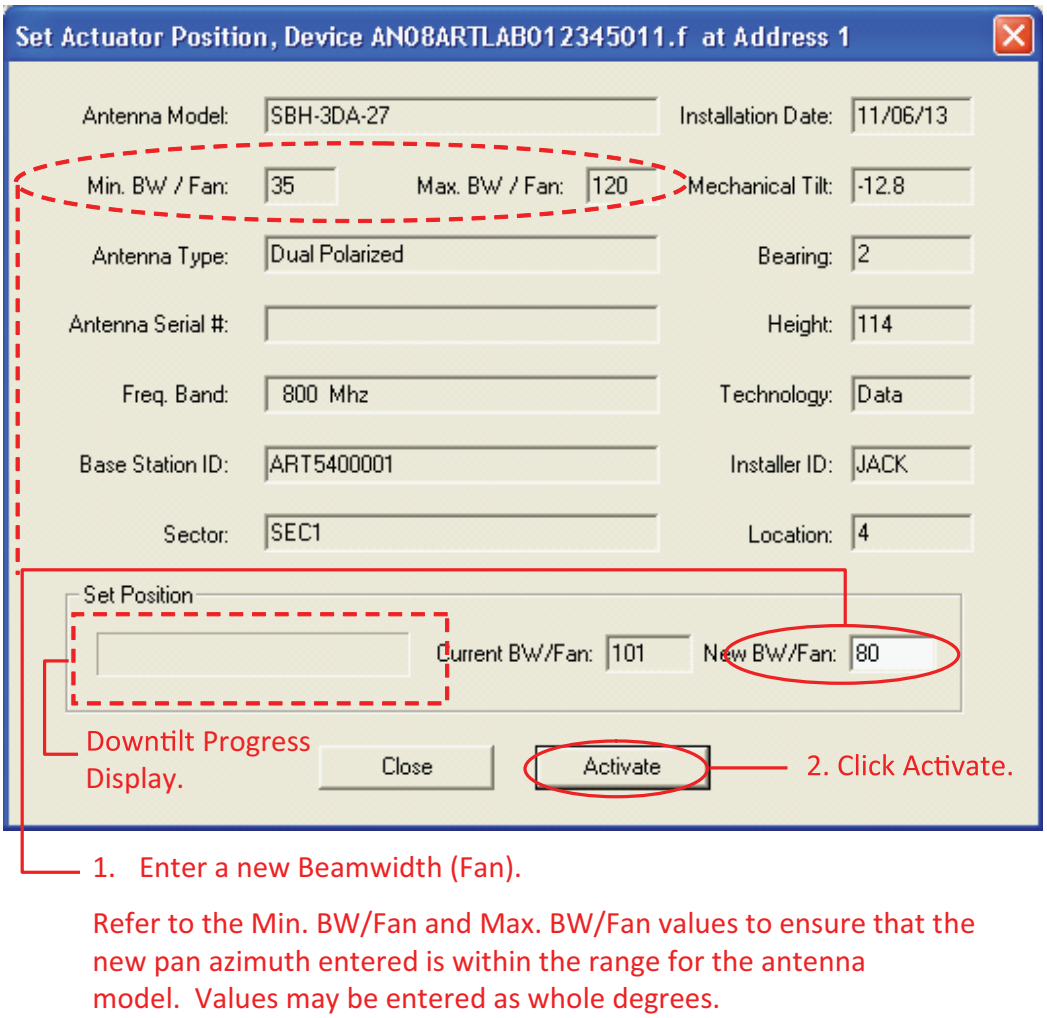
Set Actuator Position, Device AN08ARTLAB012345011.f at Address 1
Antenna Model: SBH-3DA-27
Installation Date: 11/06/13
Min. BW / Fan: 35
Max. BW / Fan: 120
Mechanical Tilt: -12.8
Antenna Type: Dual Polarized
Bearing: 2
Antenna Serial #:
Height: 114
Freq. Band: 800 Mhz
Technology: Data
Base Station ID: ART5400001
Installer ID: JACK
Sector: SEC1
Location: 4
Set Position
Current BW/Fan: 101
New BW/Fan: 80
Downtilt Progress Display.
Close
Activate
2. Click Activate.
1. Enter a new Beamwidth (Fan).
Refer to the Min. BW/Fan and Max. BW/Fan values to ensure that the new pan azimuth entered is within the range for the antenna model. Values may be entered as whole degrees.

Figure 16-2. Configuring New Beamwidth (Fan) Setting

6. Click the **Activate** button (Figure 16-2) to apply changes to the boresight (pan) for this antenna.

   Alternately, to exit the screen without sending any changes, click on the **Close** button. Antenna movement will begin after the **Activate** button is applied.

   A progress indicator bar (located to the left of **Current BW/Fan**) will continually update for as long as the move is in progress.

7. You will be notified when movement is complete (Figure 16-3).

   If for any reason the move failed to reach the new Beamwidth (Fan) value specified, you will be notified of the failure.

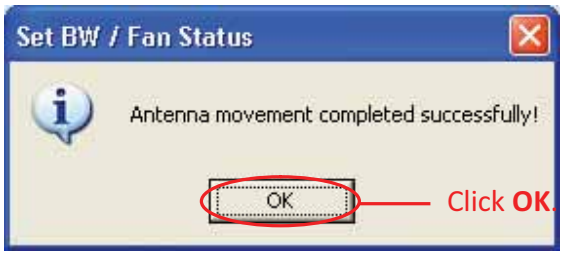

Figure 16-3. Beamwidth (Fan) Adjustment Complete.

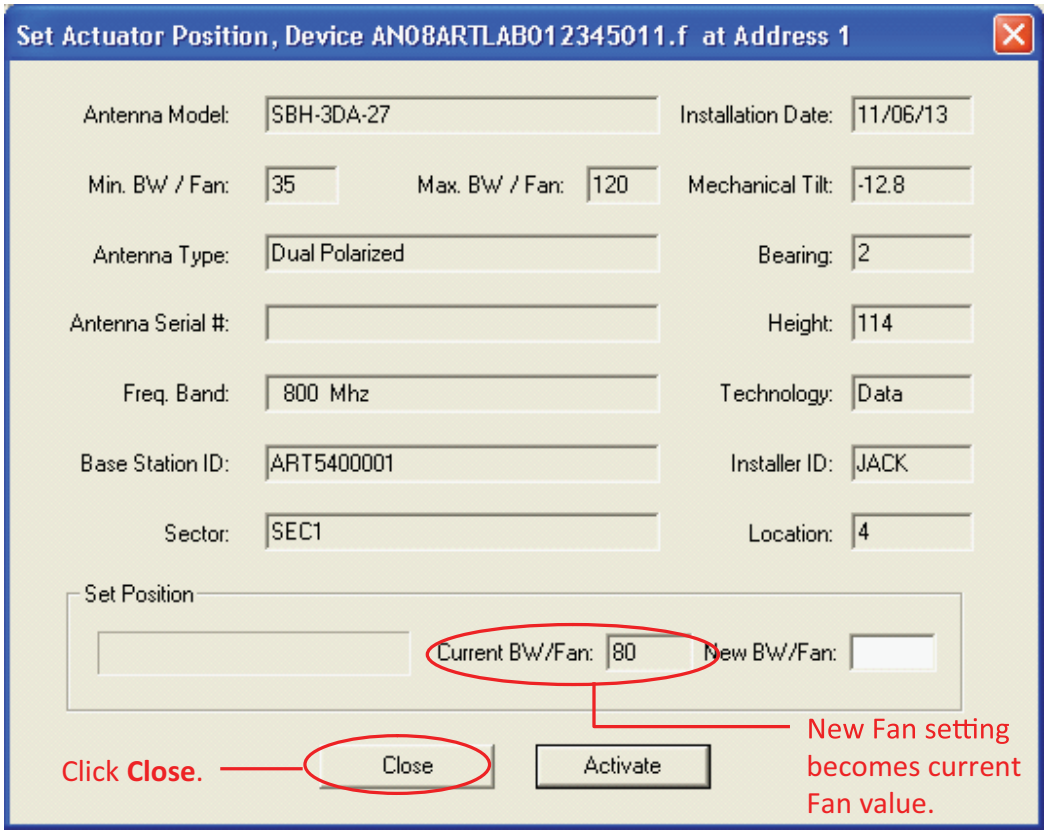

Figure 16-4. New beamwidth(Fan) Displays in Current BW/Fan

8. At the successful completion of an antenna movement, the **Current BW/Fan** field will update to show the new pan azimuth and the **New BW/Fan** text entry box will be cleared in preparation for the next move (Figure 16-4). At this point, you may click on the **Close** button to exit this screen and return to the main screen. Alternately, this process may be repeated to further adjust the bore- sight (pan) or to reapply changes where movement had previously failed, such as a temporary mechanical jam.
9. After closing the **Set Actuator Position** screen, the main screen will show the new Beamwidth (Fan) setting in the **Device Information** list.

   After all Beamwidth (Fan) adjustments are made and you are ready to end the program session, a report can be saved to a file for future reference (see Section 18).

Section 17
Changing the Electrical Downtilt on a Group of SmartBeam™ Antennas

In addition to changing the downtilt of a single antenna, changes may also be applied to a group of antennas. The list of antennas that make up the group is defined by three configuration parameters – Sector ID, Minimum Electrical Tilt, and Maximum Electrical Tilt. Only antennas that are identical in all three parameters are candidates for a given group move.

1. Switch to RET Device view by selecting 'Show RETs' from the drop down list below the **Device Information** list.
2. From the **Device Information** list, select a device ending in the letter 't' that contains the Sector ID representing the group to be moved (Figure 17-1).
3. Click **Move Sector** (Figure 17-1).
4. From the **Set Electrical Tilt for Sector** screen (Figure 17-2), notice that the selected device is highlighted and displayed in the box labeled **Antennas Included In Move**. This box displays a list of all devices that will be included in the sector move. Initially, this box contains only the antenna that was selected from the main screen. All of the current configuration settings for this device, including its current tilt, are displayed on this screen.

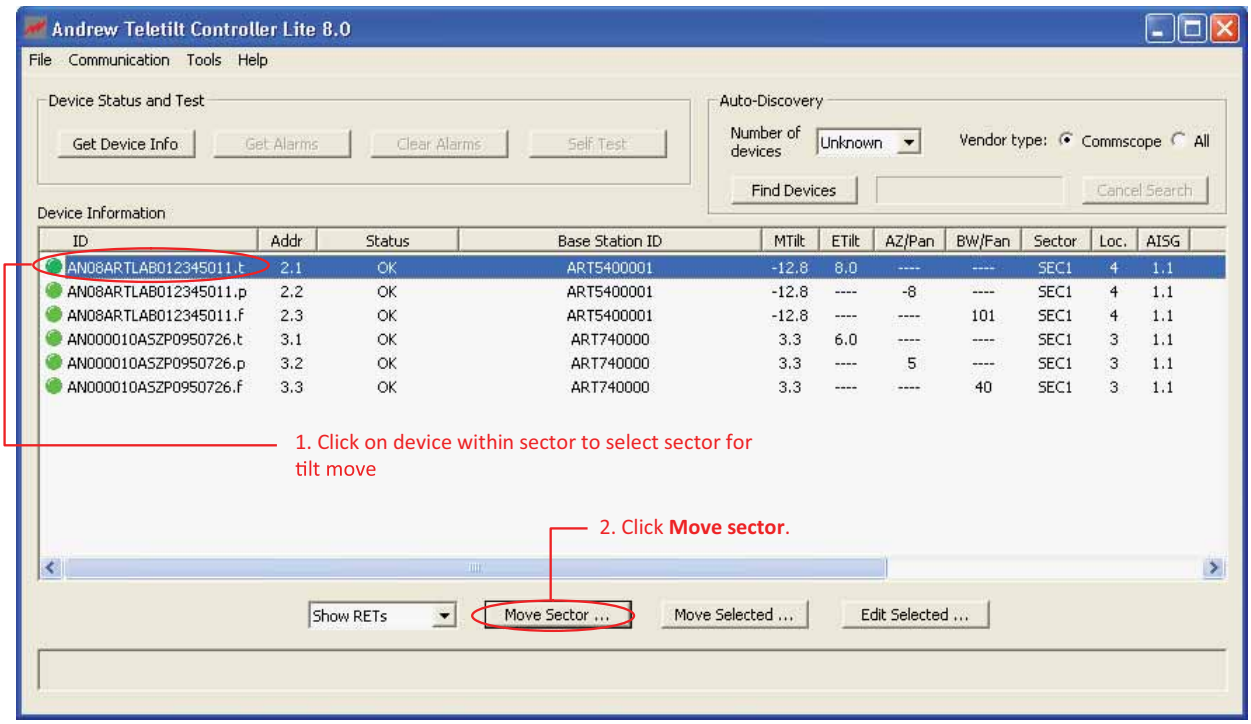
Andrew Teletilt Controller Lite 8.0
File Communication Tools Help
Device Status and Test
Get Device Info
Get Alarms
Clear Alarms
Self Test
Auto-Discovery
Number of devices
Unknown
Vendor type: Commscope All
Find Devices
Cancel Search
Device Information
ID Addr Status Base Station ID MTilt ETilt AZ/Pan BW/Fan Sector Loc. AISG
AN08ARTLAB012345011.t 2.1 OK ART5400001 -12.8 8.0 ---- ---- SEC1 4 1.1
AN08ARTLAB012345011.p 2.2 OK ART5400001 -12.8 ---- -8 ---- SEC1 4 1.1
AN08ARTLAB012345011.f 2.3 OK ART5400001 -12.8 ---- ---- 101 SEC1 4 1.1
AN000010ASZP0950726.t 3.1 OK ART740000 3.3 6.0 ---- ---- SEC1 3 1.1
AN000010ASZP0950726.p 3.2 OK ART740000 3.3 ---- 5 ---- SEC1 3 1.1
AN000010ASZP0950726.f 3.3 OK ART740000 3.3 ---- ---- 40 SEC1 3 1.1
1. Click on device within sector to select sector for tilt move
2. Click Move sector.
Show RETs
Move Sector ...
Move Selected ...
Edit Selected ...

Figure 17-1. Selecting an Antenna Within a Sector.

Other devices that have the same sector ID, minimum tilt, and maximum tilt are listed in the box labeled **Additional Compatible Antennas**. The devices in this box may be included in the move by moving one or more of them from this box to the box on the left.

5. To help determine if additional antennas could be included in the group move, click on each model to be considered to display their individual settings. Each time a device is selected, its settings will be displayed on the screen.
6. After the settings have been examined for each candidate, the devices determined to be included in the move may be added to the group in either of the following methods.
   - Select the device and click **Add**.
   - Double click on the device to immediately move it to the **Antennas Included In Move** box (Figure 17-2).

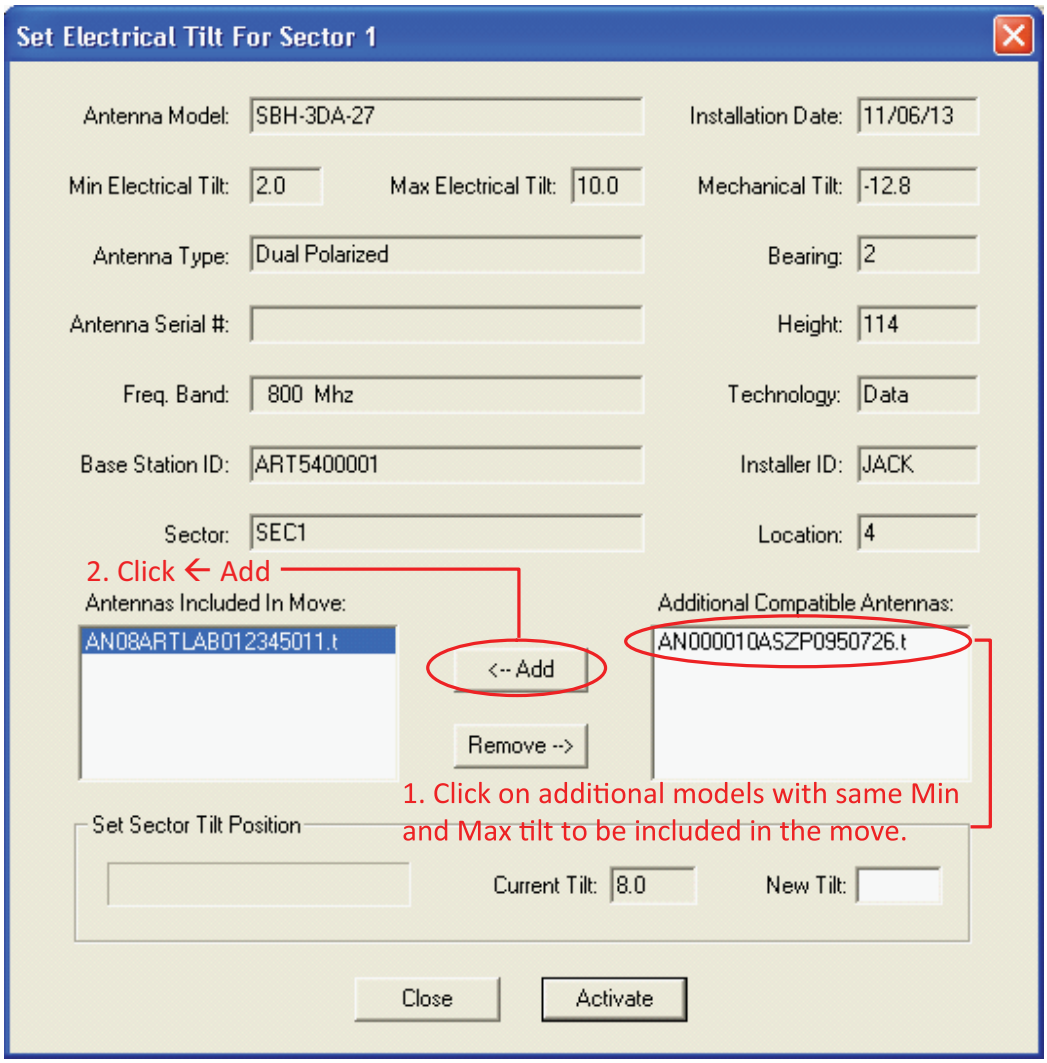

Figure 17-2. Adding Devices to be Included in the Sector Move.

7. After the devices are moved to the **Antennas Included In Move** box, examine the group to ensure that the group does not include any antennas that are not desired for this move.
8. To remove one or more antennas from the group move, either click on that antenna and then click **Remove**, or double click on that antenna to move it back to the right hand box.
9. When satisfied with the list of antennas that will be included in the group move, enter a new downtilt angle and click **Activate** to start the move.

   Progress of each antenna movement in the group will be displayed separately. A progress indicator bar (located to the left of **Current Tilt**) will continually update for as long as the move is in progress (Figure 17-3).

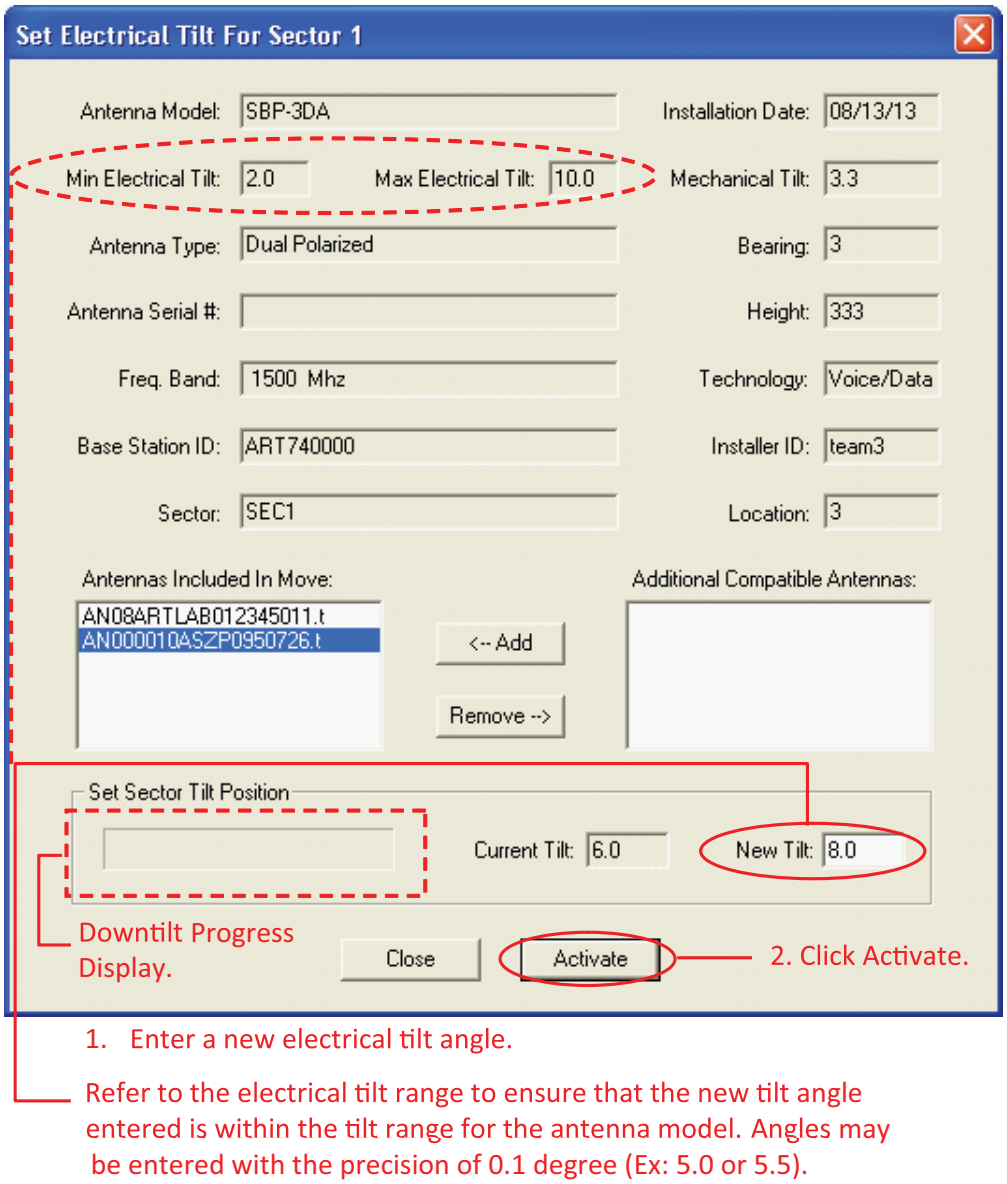
Set Electrical Tilt For Sector 1
Antenna Model: SBP-3DA
Installation Date: 08/13/13
Min Electrical Tilt: 2.0
Max Electrical Tilt: 10.0
Mechanical Tilt: 3.3
Antenna Type: Dual Polarized
Bearing: 3
Antenna Serial #:
Height: 333
Freq. Band: 1500 Mhz
Technology: Voice/Data
Base Station ID: ART740000
Installer ID: team3
Sector: SEC1
Location: 3
Antennas Included In Move:
AN08ARTLAB012345011.t
AN000010ASZP0950726.t
<-- Add
Remove -->
Additional Compatible Antennas:
Set Sector Tilt Position
Current Tilt: 6.0
New Tilt: 8.0
Downtilt Progress Display.
Close
Activate
2. Click Activate.
1. Enter a new electrical tilt angle.
Refer to the electrical tilt range to ensure that the new tilt angle entered is within the tilt range for the antenna model. Angles may be entered with the precision of 0.1 degree (Ex: 5.0 or 5.5).

Figure 17-3. Entering New Electrical Tilt Setting for Sector Move.

10. You will be notified when all antennas have successfully reached the new tilt angle. Click **OK** (Figure 17-4).
11. The **Set Electrical Tilt for Sector** screen will display the new electrical tilt setting in the **Current Tilt** field. At this point, either additional tilt angles may be applied or you may return to the main screen. To return to the main screen, click **Close** (Figure 17-5).
12. After all electrical tilt adjustments are made, a report can be saved to a file for future reference (see Section 18).

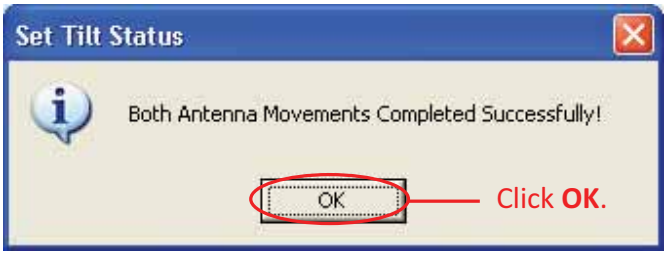

Figure 17-4. Movement Complete.

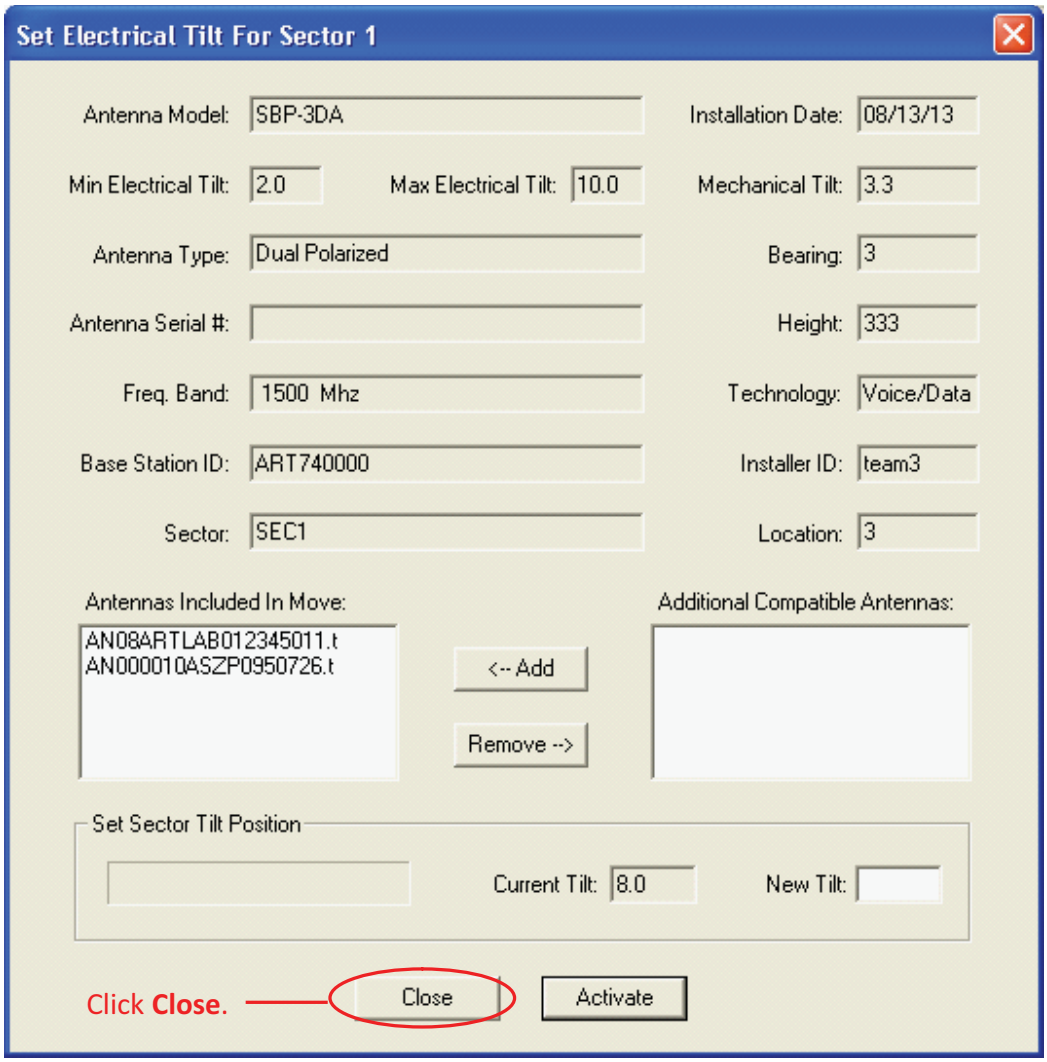

Figure 17-5. Closing Sector Move Screen.

Part 7

Saving Reports and Retrieving Alarm Status

This page intentionally left blank.

Section 18
Saving a Site Report or Site Configurations

Site configuration information can be saved for future reference using either the **File→Save Text Site Report** option or the **File→Save Tabbed Site Report** option from the main program menu.

The **File →Save Text Site Report** option allows site configuration information to be saved into a text file to open in a text file viewer (*.txtrpt for Word). Saved files are stored on the computer hard drive at **C:\ATCLite_Site_Files**. To save the site configuration into a tab limited text file to open in Excel(*.tabrpt for Excel) use **File →Save Tabbed Site Report**… menu.

18.1 Saving/Viewing a Site Report Formatted to Open in Word.

1. To save a report that can be opened in Word, go to **File→save Text Site Report** on the main menu (Figure 18-1).

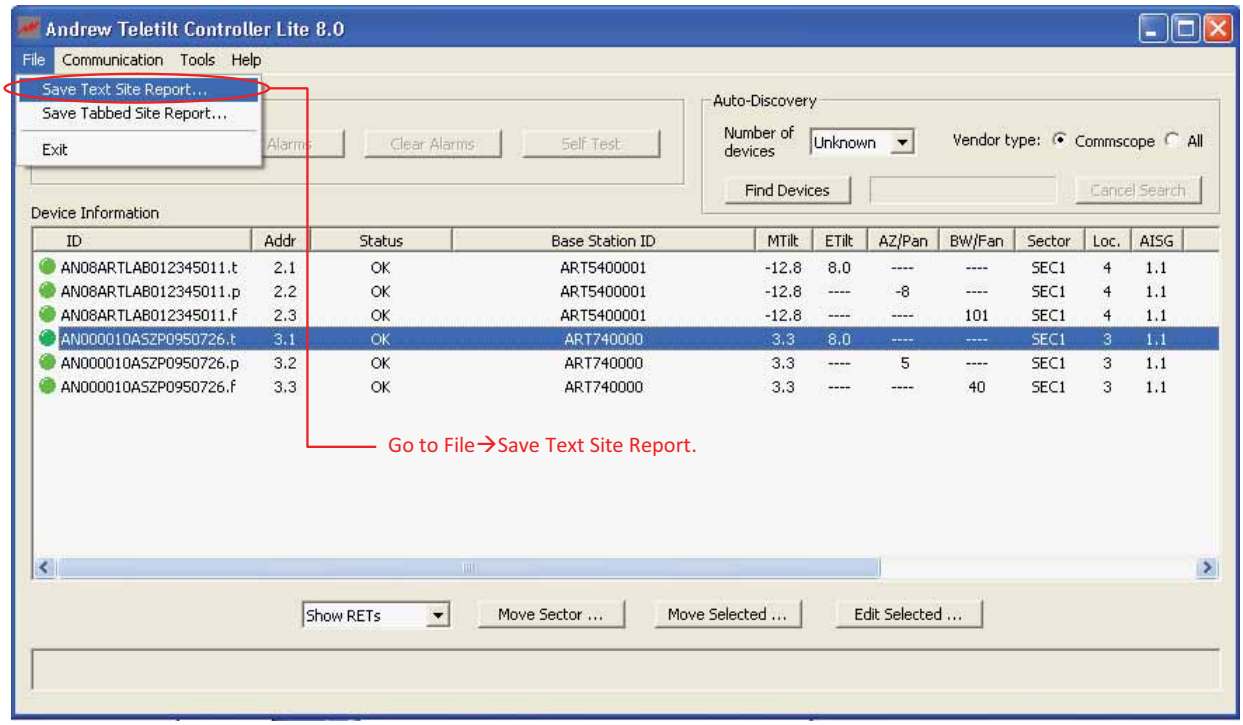

Figure 18-1. Selecting ***Save Site Report*** *from Main Program Menu.*

2. Assign a filename for the report. The default filename consists of the date, time, and the site ID of the first actuator (Figure 18-2).
3. Select **Text Site Report File (*.txtrpt)** from the **Save as type** drop down selection, if not already selected.
4. Click **Save**.

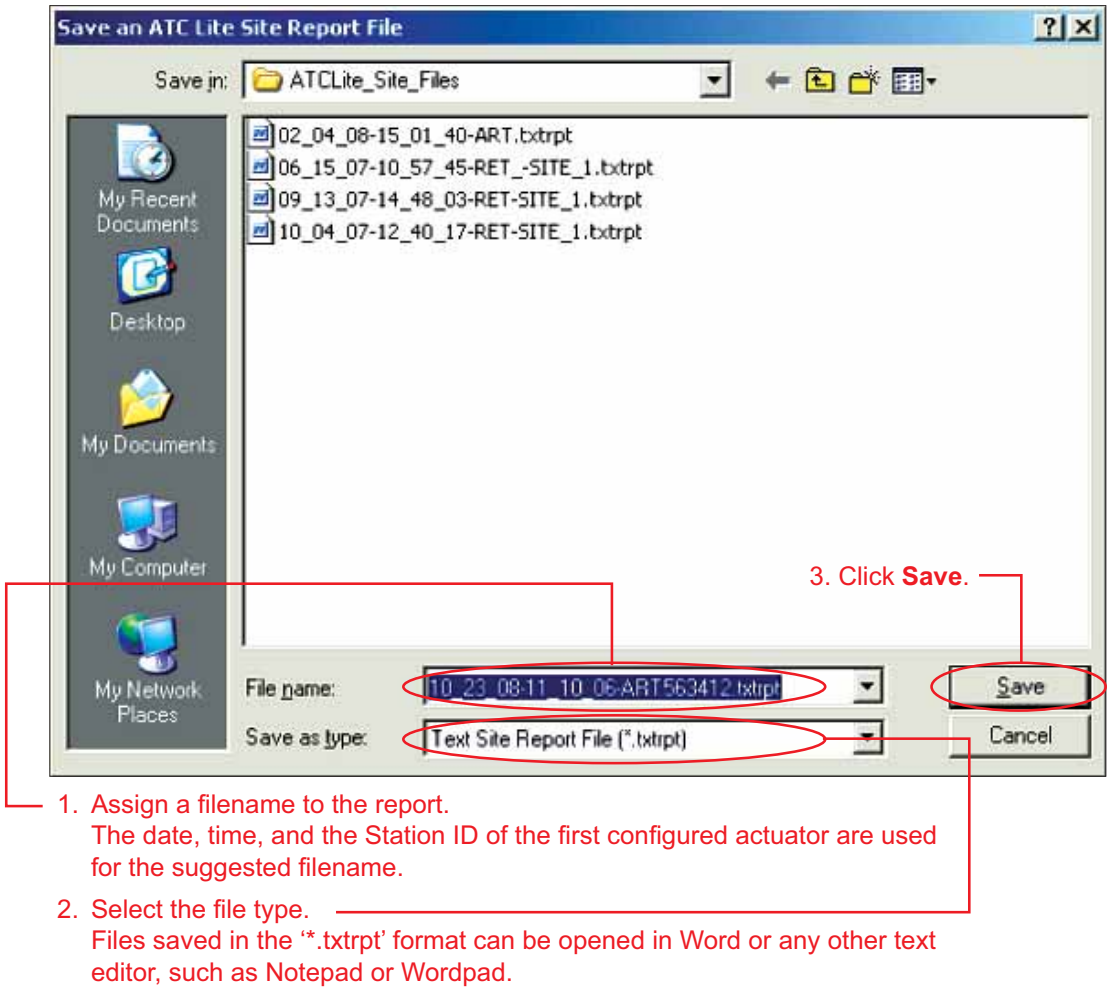
Save an ATC Lite Site Report File
Save in:
ATCLite_Site_Files
02_04_08-15_01_40-ART.txtrpt
06_15_07-10_57_45-RET_-SITE_1.txtrpt
09_13_07-14_48_03-RET-SITE_1.txtrpt
10_04_07-12_40_17-RET-SITE_1.txtrpt
My Recent Documents
Desktop
My Documents
My Computer
My Network Places
File name:
10_23_08-11_10_06-ART563412.txtrpt
Save as type:
Text Site Report File (*.txtrpt)
Save
Cancel
3. Click Save.
1. Assign a filename to the report.
The date, time, and the Station ID of the first configured actuator are used for the suggested filename.
2. Select the file type.
Files saved in the '*.txtrpt' format can be opened in Word or any other text editor, such as Notepad or Wordpad.

Note: All site reports are saved to **C:\ATCLite_Site_Files**. This directory is created if it does not pre-exist on the computer.

Figure 18-2. Selecting the File Format for Word.

5. To view the saved file, launch Word (or any text editor software, such as Notepad or Wordpad) and go to **File→Open** on the main menu. Change the directory to look in **C:\ATCLite_Site_Files**, change the file type to **All Files**, and select the desired 'txtrpt' file from the list of files shown.
   Click **Open** (Figure 18-3).

   The configuration settings for each actuator are displayed in the order of their address.

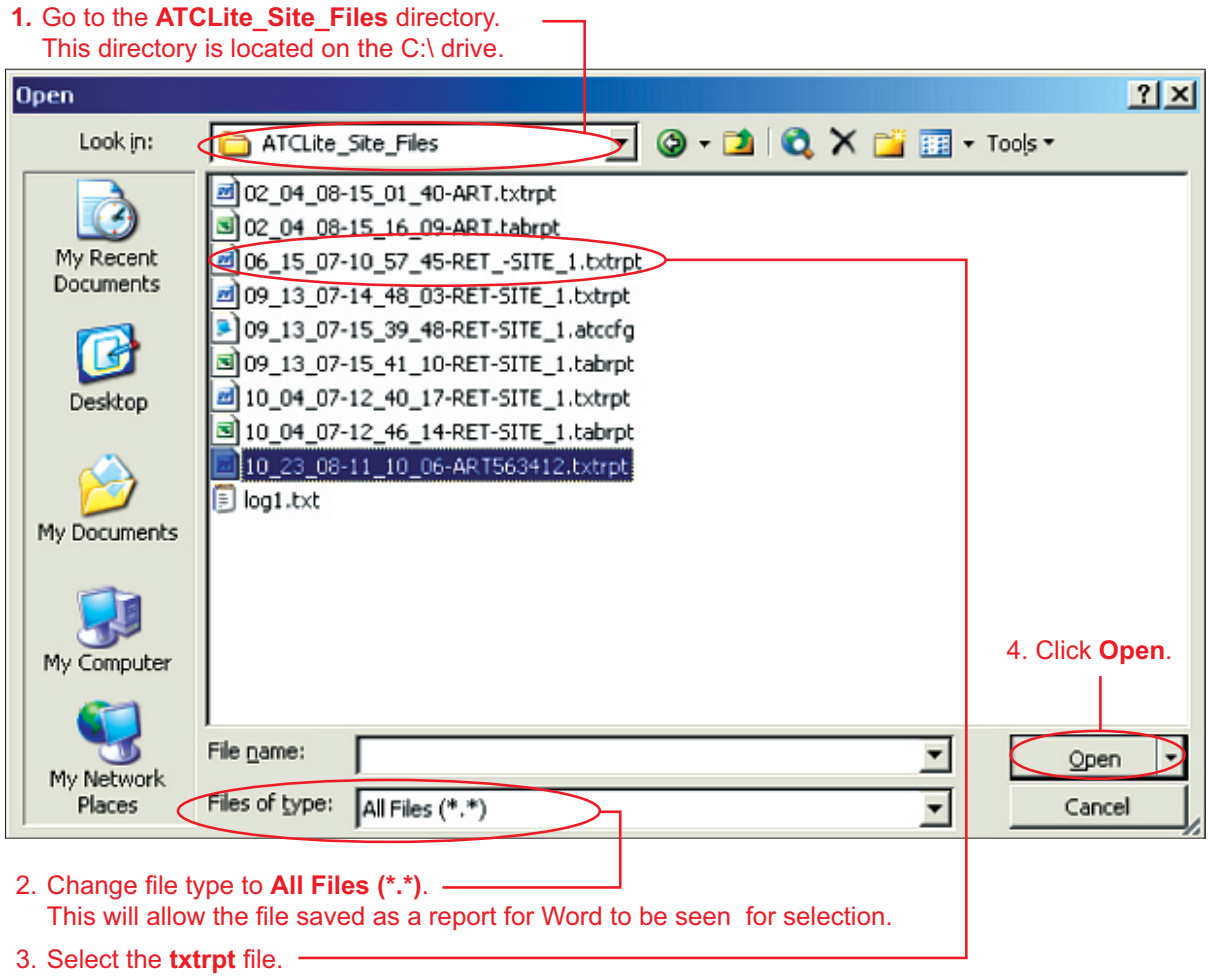

Figure 18-3. Opening the Report in Word.

18.2 Saving/Viewing a Site Report Formatted to Open in Excel.

1. To save a report that can be opened in Excel (or any other spreadsheet software program), go to **File→Save Tabbed Site Report** on the main menu (Figure 18-1).
2. Assign a filename for the report. The default filename consists of the date, time, and the site ID of the first actuator (Figure 18-4).
3. Select **Tabbed Site Report File (*.tabrpt)** from the **Save as type** drop down selection, if not already selected.
4. Click **Save**.

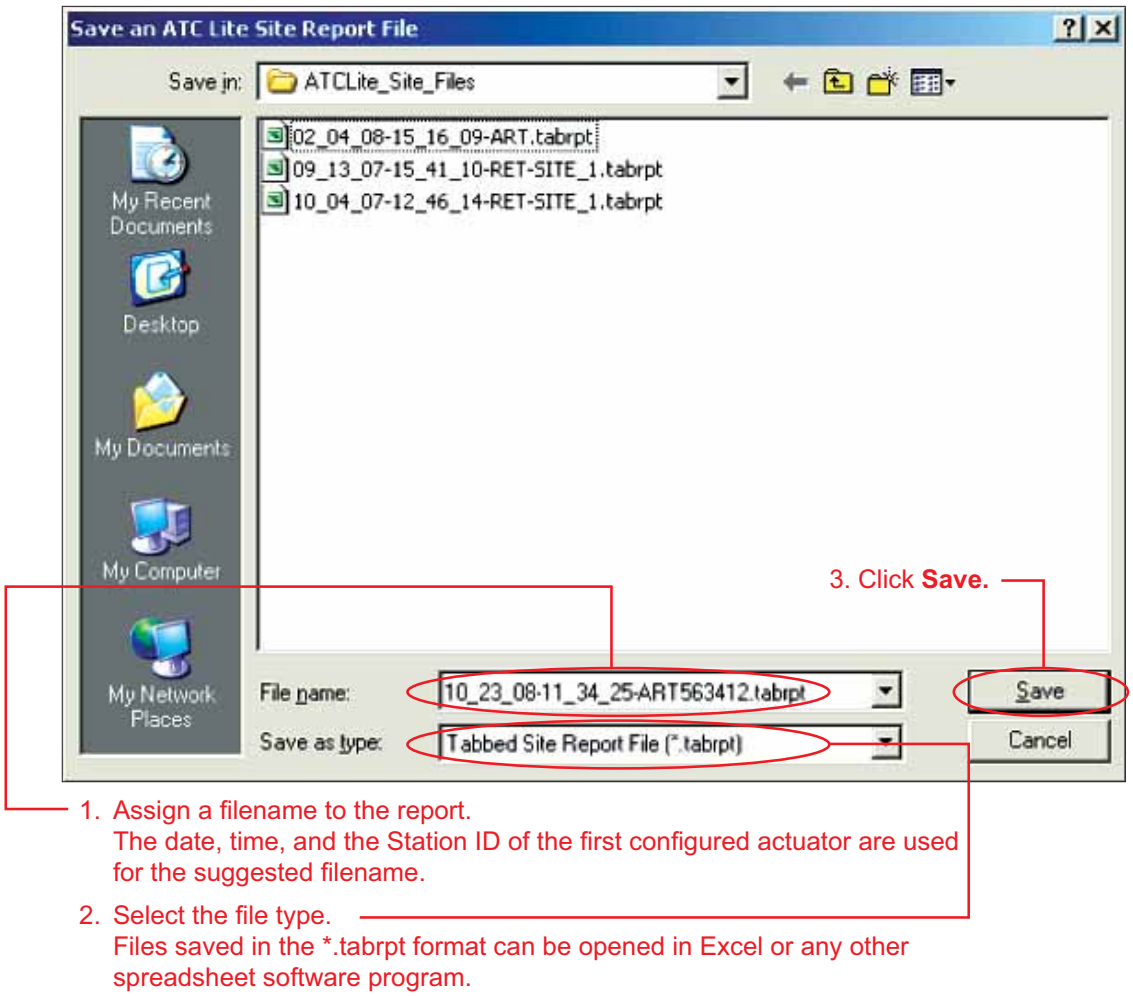
Save an ATC Lite Site Report File
Save in:
ATCLite_Site_Files
02_04_08-15_16_09-ART.tabrpt
09_13_07-15_41_10-RET-SITE_1.tabrpt
10_04_07-12_46_14-RET-SITE_1.tabrpt
My Recent Documents
Desktop
My Documents
My Computer
My Network Places
File name:
10_23_08-11_34_25-ART563412.tabrpt
Save as type:
Tabbed Site Report File (*.tabrpt)
Save
Cancel
3. Click Save.
1. Assign a filename to the report.
The date, time, and the Station ID of the first configured actuator are used for the suggested filename.
2. Select the file type.
Files saved in the *.tabrpt format can be opened in Excel or any other spreadsheet software program.

Figure 18-4. Selecting the File Format for Excel.

Note: All site reports are saved to **C:\ATCLite_Site_Files**.
This directory is created if it does not pre-exist on the computer.

5. To view the saved file, launch Excel (or a similar software application) and go to **File→Open** on the main menu. Change the directory to look in **C:\ATCLite_Site_Files**, change the file type to **All Files**, and select the desired tabrpt file from the list of files shown.
   Click **Open** (Figure 18-5).

   The configuration settings for each actuator are displayed in the order of their address.

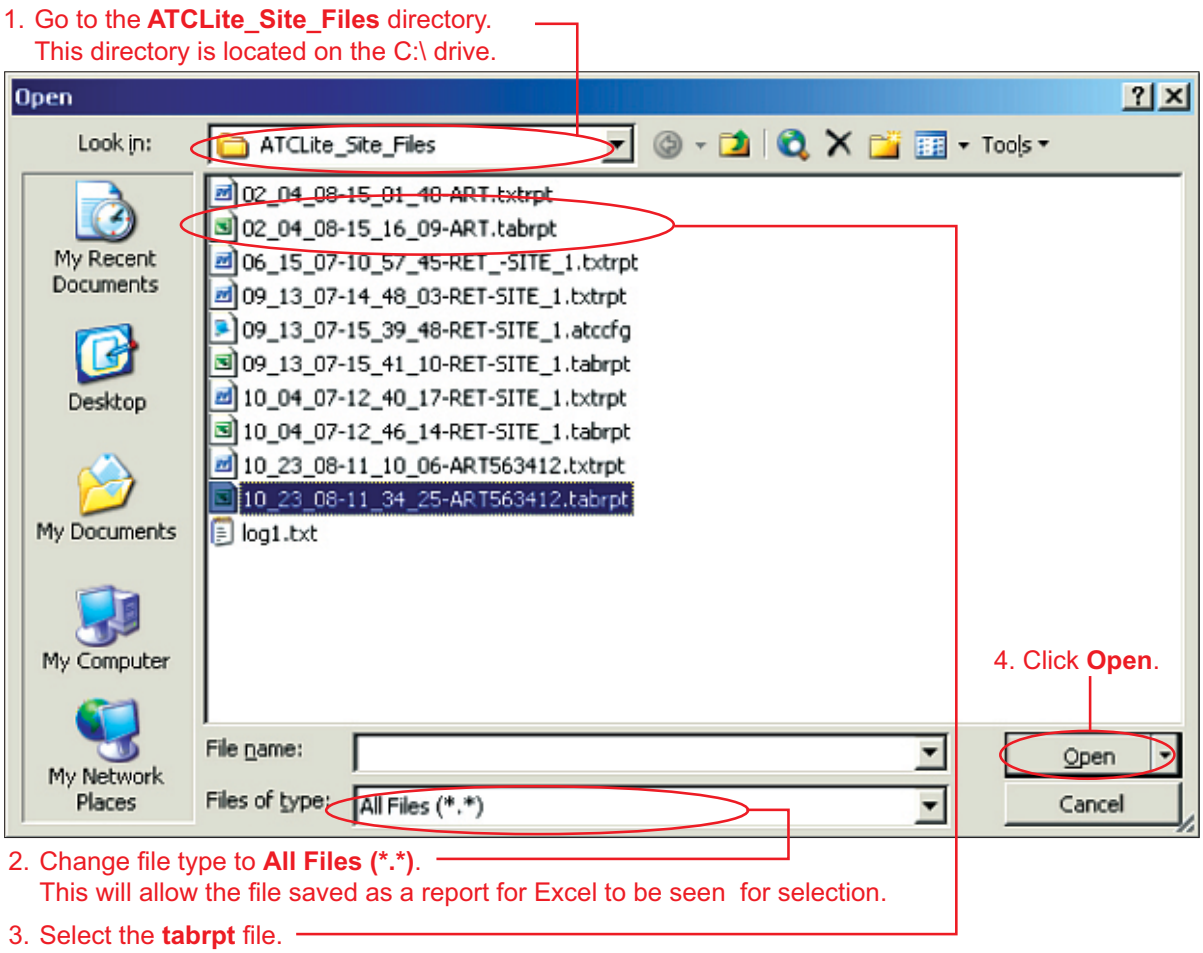

Figure 18-5. Opening the Report in Excel.

This page intentionally left blank.

Section 19
Device Test, Alarm Status, and Device Information

The ATC Lite program allows users to obtain device information (includes hardware and software version), get alarm status or clear alarms for any known device, or run a movement self-test on any addressed device. These options are displayed as four buttons located in the **Device Status and Test** section of the main screen (Figure 19-1).

> Note: Get Alarms, Clear Alarms, and Self Test options are not available for any SmartBeam antenna in AISG 1.1, AICM, AISM or SACM mode.

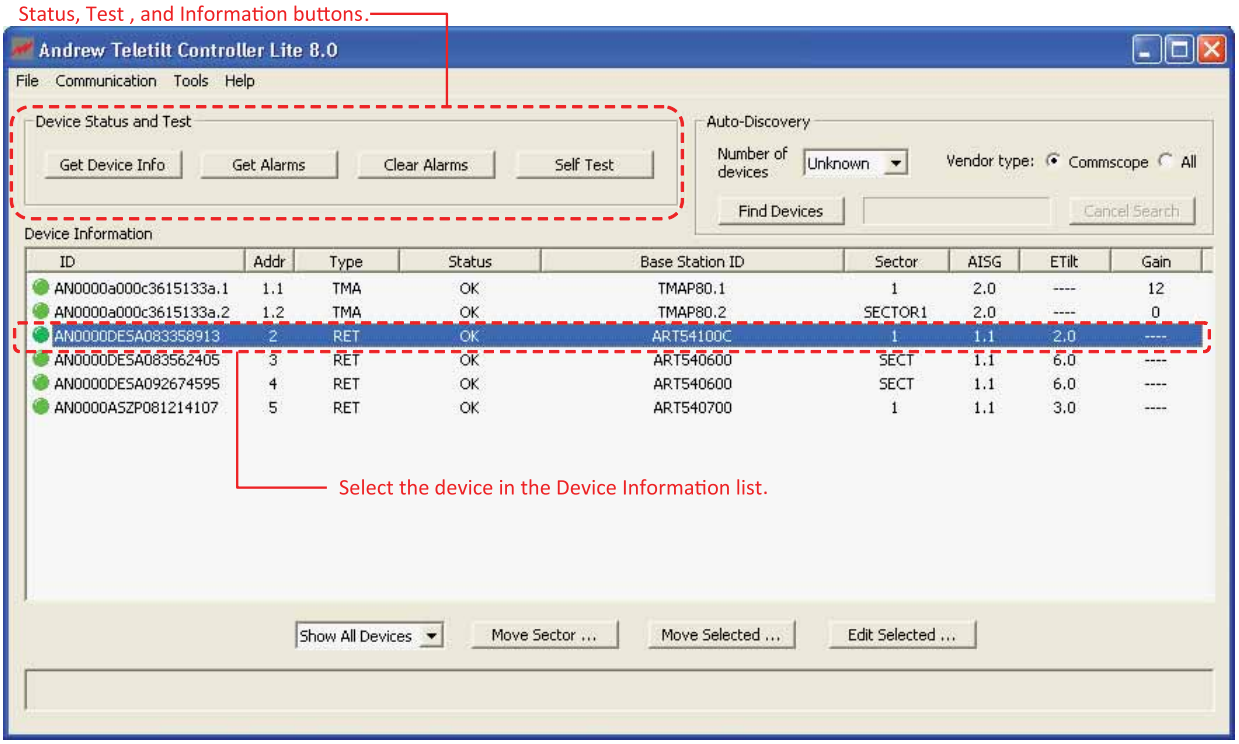
Status, Test , and Information buttons.
Andrew Teletilt Controller Lite 8.0
File Communication Tools Help
Device Status and Test
Get Device Info
Get Alarms
Clear Alarms
Self Test
Auto-Discovery
Number of devices
Unknown
Vendor type:
Commscope
All
Find Devices
Cancel Search
Device Information
ID Addr Type Status Base Station ID Sector AISG ETilt Gain
AN0000a000c3615133a.1 1.1 TMA OK TMAP80.1 1 2.0 ---- 12
AN0000a000c3615133a.2 1.2 TMA OK TMAP80.2 SECTOR1 2.0 ---- 0
AN0000DESA083358913 2 RET OK ART54100C 1 1.1 2.0 ----
AN0000DESA083562405 3 RET OK ART540600 SECT 1.1 6.0 ----
AN0000DESA092674595 4 RET OK ART540600 SECT 1.1 6.0 ----
AN0000ASZP081214107 5 RET OK ART540700 1 1.1 3.0 ----
Select the device in the Device Information list.
Show All Devices
Move Sector ...
Move Selected ...
Edit Selected ...

Figure 19-1. Device Status and Test Options.

19.1 Obtaining Device Information

This option retrieves and displays the serial number for the device, the version for the controller hardware, and the version for the software program that controls the operations performed by the controller (Figure 19-2).

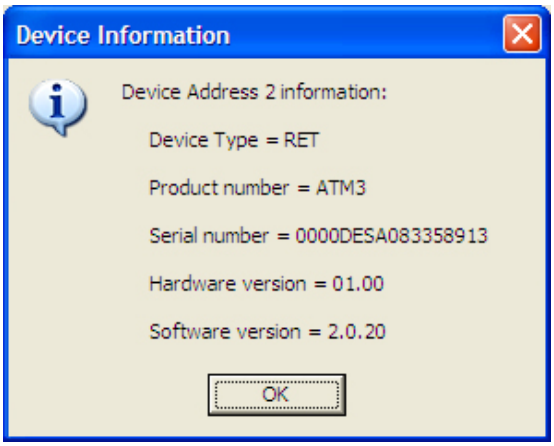

Figure 19-2. Device Information Displayed.

19.2 Retrieving Current Alarm Status

AISG compliant devices report alarms to the program in two ways, one of which is spontaneous and the other of which must be requested by the user. An AISG compliant device, such as an ATM200, spontaneously reports alarms in the **Get Alarms** pop-up notification (Figure 19-3) as they occur. Since they are reported spontaneously by the individual RET devices, no action is required by the user to retrieve these alarms. If desired, you may check to see if any previously reported alarms are still active.

1. To query a device for its alarm status, first click on the device in the **Device Information** list (Figure 19-1).
2. Now that the device has been selected, click **Get Alarms** to retrieve the current alarm status for that device (Figure 19-1).

   Figure 19-3 shows an example where the device reported that no alarms are present.

Figure 19-3. Alarm Status Query Results.

3. Click **OK** to dismiss the **Get Alarms** pop-up notification (Figure 19-3).

19.3 Clearing All Alarms on a Device

After examining the alarms status results, any alarms found may be cleared using the **Clear Alarms** button (Figure 19-1).

1. Click on the device in the **Device Information** list that has an alarm to be cleared.
2. Click on the **Clear Alarms** button to clear any current alarms that have been declared by the device.
3. After all alarms have been cleared for the device, a pop-up notification will display to notify the user that all alarms are clear (Figure 19-4).
4. Click **OK** to dismiss the **Clear Alarms** pop-up notification (Figure 19-4).

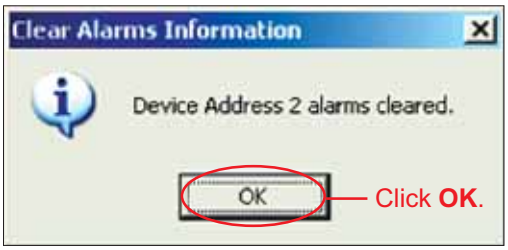

Figure 19-4. Alarms Cleared.

19.4 Executing a Self Test Movement for a Device

Andrew's ATM200 actuators support the AISG self test command. This feature allows the user to periodically perform a test by temporarily making a small tilt angle movement on the device. This test enables the user to verify that the actuator's motor is operational and capable of adjusting electrical tilt on the antenna. The movement executed as part of the self test is designed to be so small as to not disrupt the current data/voice traffic. The movement is +/- 0.2 degrees to either side of the current downtilt angle, with a return to the original downtilt angle at the end of the movement.

Note that if the current downtilt angle on the antenna is sufficiently close to the minimum or maximum possible angle, the actuator may modify the test movement range of motion or ignore the test movement command altogether.

1. To perform a self test on a device, click on the device in the **Device Information** list (Figure 19-1).
2. Click **Self Test** to initiate movement (Figure 19-1).
3. At the completion of the self test, a pop-up notification will appear showing the results of the test (Figure 19-5).
4. Click **OK** to dismiss the self test results pop-up notification (Figure 19-5).

Figure 19-5. Self Test Results.

Section 20
Alarm Status for TMA

TMA devices report alarms to the ATCLite program in two ways, one of which is spontaneous and the other of which must be requested by the user. The Alarms reported from TMA devices are as follows.

- Major TMA Fault
- Minor TMA Fault
- Bypass Mode

If a TMA is in bypass operating mode, it will not report any alarms either spontaneous or requested by user.

20.1 Alarm Reported by TMA

TMA device, spontaneously reports alarms in the pop-up notification dialog box (Figure 20-1) as they occur. Since they are reported spontaneously by the TMA, no action is required by the user to retrieve these alarms. If desired, you may check to see if any previously reported alarms are still active through Get Alarms.

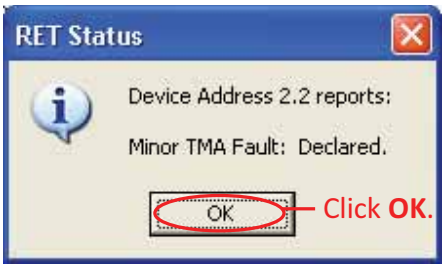

Figure 20-1. Alarm being set is Reported

When any of these alarms are cleared by the TMA, it sends the cleared status for the alarm. This is reported through pop-up dialog box (Figure 20-2).

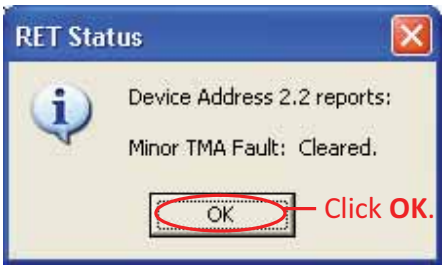

Figure 20-2. Alarm being cleared is Reported

Once the Alarm is received by the program the status of the relevant TMA in the **Device information** list (All Devices or TMA devices view) displays the alarm message in the **Status** column (Figure 20-3).

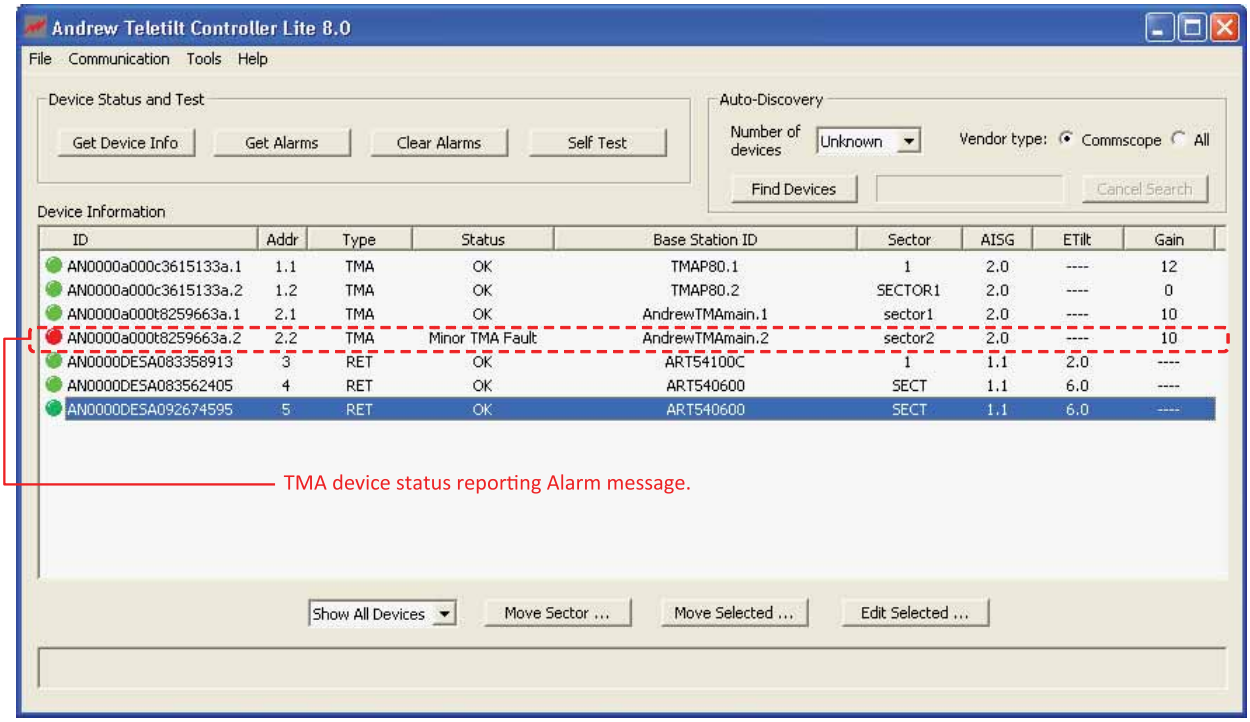
Andrew Teletilt Controller Lite 8.0
File Communication Tools Help
Device Status and Test
Get Device Info
Get Alarms
Clear Alarms
Self Test
Auto-Discovery
Number of devices
Unknown
Vendor type: Commscope All
Find Devices
Cancel Search
Device Information
ID Addr Type Status Base Station ID Sector AISG ETilt Gain
AN0000a000c3615133a.1 1.1 TMA OK TMAP80.1 1 2.0 ---- 12
AN0000a000c3615133a.2 1.2 TMA OK TMAP80.2 SECTOR1 2.0 ---- 0
AN0000a000t8259663a.1 2.1 TMA OK AndrewTMAmain.1 sector1 2.0 ---- 10
AN0000a000t8259663a.2 2.2 TMA Minor TMA Fault AndrewTMAmain.2 sector2 2.0 ---- 10
AN0000DESA083358913 3 RET OK ART54100C 1 1.1 2.0 ----
AN0000DESA083562405 4 RET OK ART540600 SECT 1.1 6.0 ----
AN0000DESA092674595 5 RET OK ART540600 SECT 1.1 6.0 ----
TMA device status reporting Alarm message.
Show All Devices
Move Sector ...
Move Selected ...
Edit Selected ...

Figure 20-3. TMA Status reporting Alarm

20.2 Retrieving Current Alarm from TMA

Alarms from TMA can be retrieved through user on request.

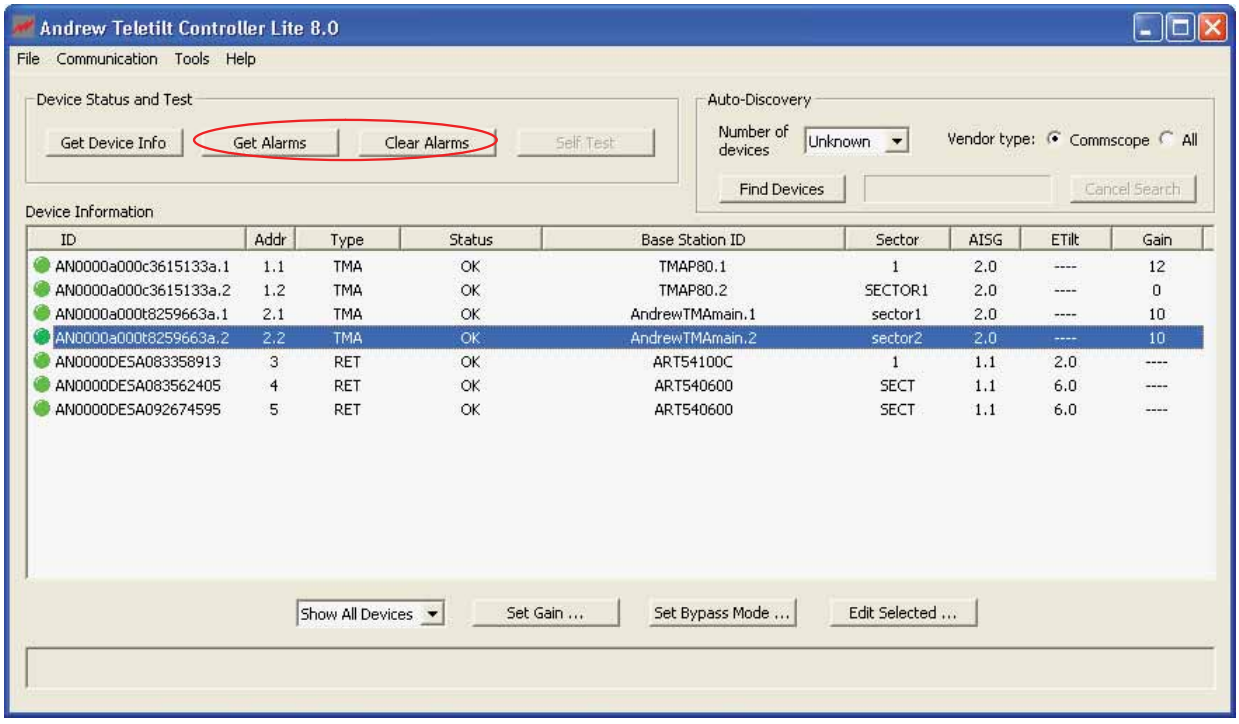
Andrew Teletilt Controller Lite 8.0
File Communication Tools Help
Device Status and Test
Get Device Info
Get Alarms
Clear Alarms
Self Test
Auto-Discovery
Number of devices
Unknown
Vendor type: Commscope All
Find Devices
Cancel Search
Device Information
ID Addr Type Status Base Station ID Sector AISG ETilt Gain
AN0000a000c3615133a.1 1.1 TMA OK TMAP80.1 1 2.0 ---- 12
AN0000a000c3615133a.2 1.2 TMA OK TMAP80.2 SECTOR1 2.0 ---- 0
AN0000a000t8259663a.1 2.1 TMA OK AndrewTMAmain.1 sector1 2.0 ---- 10
AN0000a000t8259663a.2 2.2 TMA OK AndrewTMAmain.2 sector2 2.0 ---- 10
AN0000DESA083358913 3 RET OK ART54100C 1 1.1 2.0 ----
AN0000DESA083562405 4 RET OK ART540600 SECT 1.1 6.0 ----
AN0000DESA092674595 5 RET OK ART540600 SECT 1.1 6.0 ----
Show All Devices
Set Gain ...
Set Bypass Mode ...
Edit Selected ...

Figure 20-4. Select TMA to request for Alarm Status.

1. To query the TMA for its alarm status, first click on the TMA in the **Device Information** list (Figure 20-4).
2. Now the TMA has been selected, Click **Get Alarms** to retrieve the current alarm status (Figure.20-4)
   Figure 20-5 shows an example where the TMA reported that an alarm is present.
   Figure 20-6 shows an example where the TMA reported that no alarms are present.
3. Click OK to dismiss the Get Alarms pop pup notification (Figure 20-5 or 20-6).

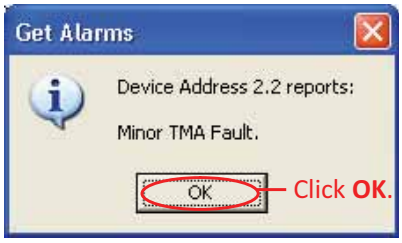

Figure 20-5. An Alarm reported during Get Alarms.

Figure 20-6. No Alarms reported during Get Alarms.

20.3 Clearing All Alarms on TMA

After examining the alarms status results, any alarms found may be cleared using the **Clear Alarms** button (Figure 20-4).

1. Click on the TMA in the **Device Information** list that has an alarm to be cleared. (Figure 20-4)
2. Click on the **Clear Alarms** button to clear any current alarms that have been declared by the TMA.
3. After all alarms have been cleared for the TMA, a pop-up notification will display to notify the user that all alarms are clear (Figure 20-7).
4. Click **OK** to dismiss the **Clear Alarms** pop-up notification (Figure 20-7).

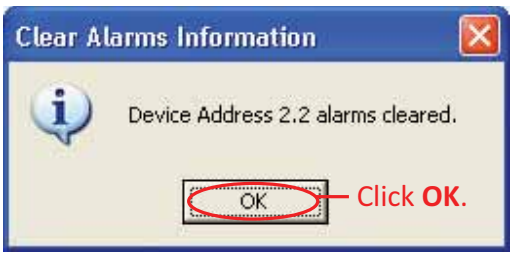

Figure 20-7. Alarms Cleared..

This page intentionally left blank.

Part 8

Operating Instructions for Tower Mounted Amplifiers (TMA)

This page intentionally left blank.

Section 21
Device Configuration with TMA

After TMA devices are found and addressed in the ATC Lite program, each TMA device may optionally be configured.

1. Switch to TMA Devices view by selecting ‘Show TMAs’ from the drop down list below the **Device Information** list.
2. To begin device configuration, click on the TMA to be configured (Figure 21-1).
3. Click on **Edit Selected** to open the **Configuring TMA** screen (Figures 21-1 and 21-2).

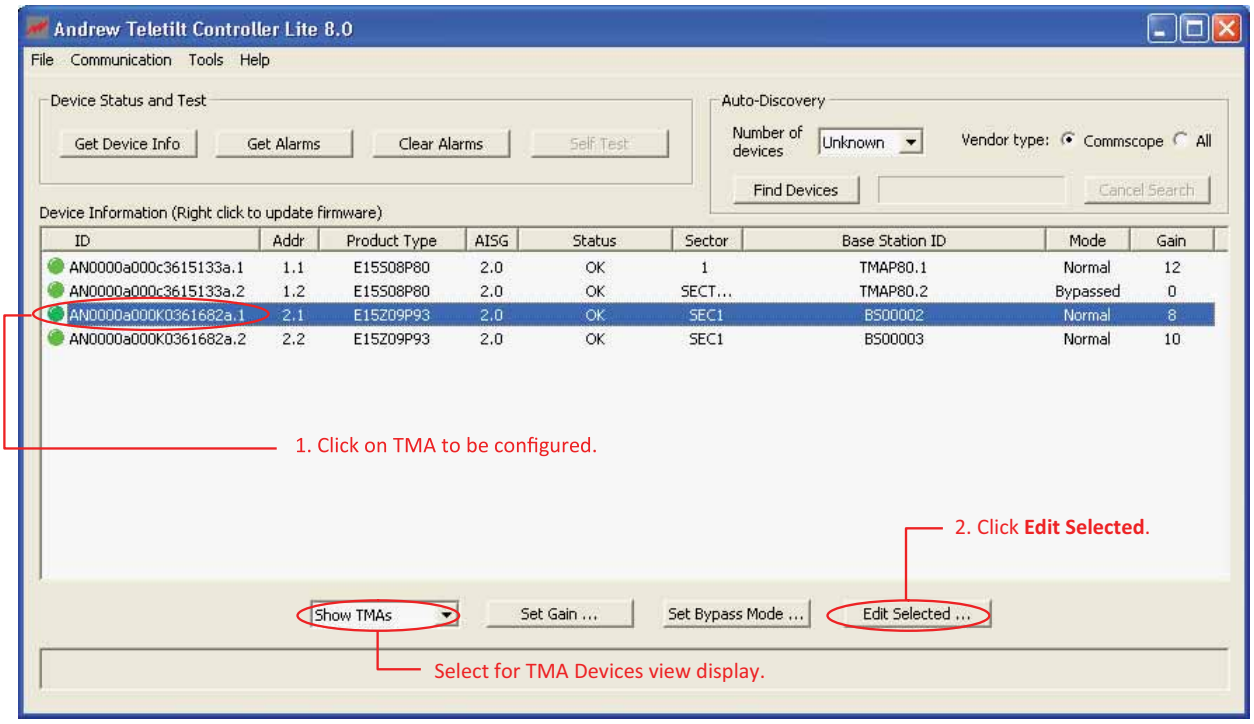
Andrew Teletilt Controller Lite 8.0
File Communication Tools Help
Device Status and Test
Get Device Info
Get Alarms
Clear Alarms
Self Test
Auto-Discovery
Number of devices
Unknown
Vendor type: Commscope All
Find Devices
Cancel Search
Device Information (Right click to update firmware)
ID Addr Product Type AISG Status Sector Base Station ID Mode Gain
AN0000a000c3615133a.1 1.1 E15S08P80 2.0 OK 1 TMAP80.1 Normal 12
AN0000a000c3615133a.2 1.2 E15S08P80 2.0 OK SECT... TMAP80.2 Bypassed 0
AN0000a000K0361682a.1 2.1 E15Z09P93 2.0 OK SEC1 BS00002 Normal 8
AN0000a000K0361682a.2 2.2 E15Z09P93 2.0 OK SEC1 BS00003 Normal 10
1. Click on TMA to be configured.
2. Click Edit Selected.
Show TMAs
Set Gain ...
Set Bypass Mode ...
Edit Selected ...
Select for TMA Devices view display.

Figure 21-1 Selecting TMA to be Configured.

Note the following in Figure 21-2:

- The ID of the TMA to be configured is displayed in the title bar of the dialog box.
- Devices that have never been configured before will display blank fields for most param- eters.
- The **Installation Date** field is handled differently from all other configuration items.
- Although this field is not required, if no installation date has been saved on the TMA, the program will suggest the current date as the default.
- AISG 2.0 Protocol Mode allows a 32 character Station ID.

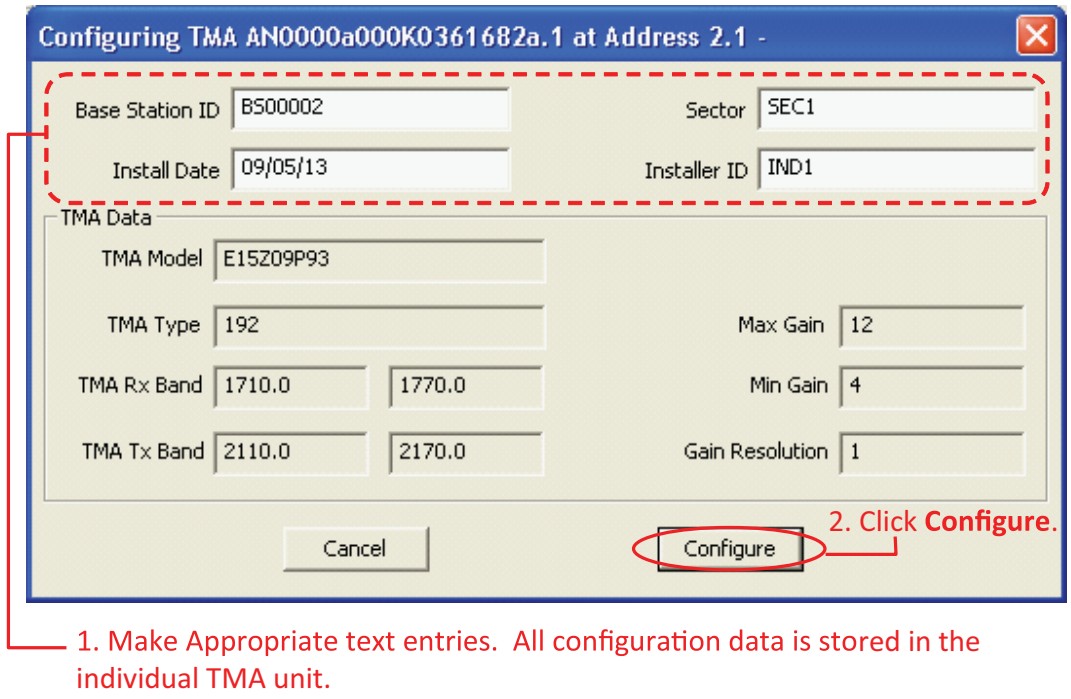

Figure 21-2 TMA Device configuration Screen.

4. Using the entry fields, specify the parameters for the fields that are enabled(Base Station ID, Installer ID, Install Date and Sector). Note the following:

- If in AISG 1.1 mode, the ID for the base station associated with this TMA must be 1 to 12 characters in length, and it may contain any combination of numbers and letters. When the actuator is in AISG 2.0 protocol mode, the longer station ID consists of 32 characters.
- The Installation Date field is handled differently from all other configuration items. Although this field is not required, if no installation date has been saved on the TMA the program will suggest the current date as the default. If the current date is used, it will be saved on the TMA when the **Configure** button is activated. Alternately, the suggested date may be erased and a new date entered, or the field may be left blank. When a date is entered, it must be formatted as MM/DD/YY as shown in Figure 21-2 (A **forward slash** character placed between the month and day and a **forward slash** character placed between the day and year) i.e., July 7, 2008 would be typed as 07/07/08.
- The installer's ID must be 1 to 5 characters in length with any combination of letters and numbers.

- Values specified for the sector are used for reference only and have no direct affect upon the TMA that is being configured. Sector field value is entered as a text.

5. TMA data fields (TMA Model, TMA Type, TMA Rx Band, TMA Tx Band, Max Gain, Min Gain and Gain Resolution) that are shown with values are displayed for information only, no change of data is allowed for these fields:
6. After verifying the accuracy of all fields, click **Configure**. Alternately, the user may go back and edit/change any of the selections made or click the **Cancel** button to quit this process without making any changes to the TMA's current configuration.
7. After the **Configure** button has been activated, the user will be prompted to confirm changes to the TMA unit are to be applied. Click **Yes** to proceed with the changes, or click **No** to return to the configuration screen (Figure 21-3).
   When proceeding to make changes, the selected settings will be sent to the TMA unit and stored there. The main screen will change the status of this device to **Configuring** to indicate that new settings are being sent to the TMA.
8. During the sending of configuration changes to the TMA unit, The configuration dialog closes and the **Device Information** list display status as **Configuring** for the relevant TMA unit (Figure 21-4).
9. When the configuration process is complete, a pop-up dialog box will display the results. Normally, the dialog box will show that the changes were successfully sent to the device (Figure 21-4). However, if the configuration process was unable to communicate with the TMA unit for any reason, a failure message will appear.

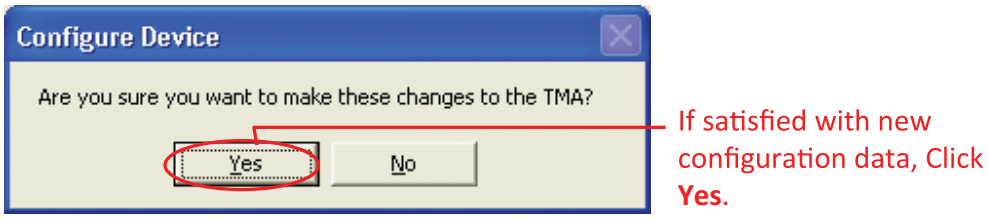
Configure Device
Are you sure you want to make these changes to the TMA?
Yes
No
If satisfied with new configuration data, Click Yes.

Figure 21-3. Choosing to Continue with Configuration Changes to the TMA.

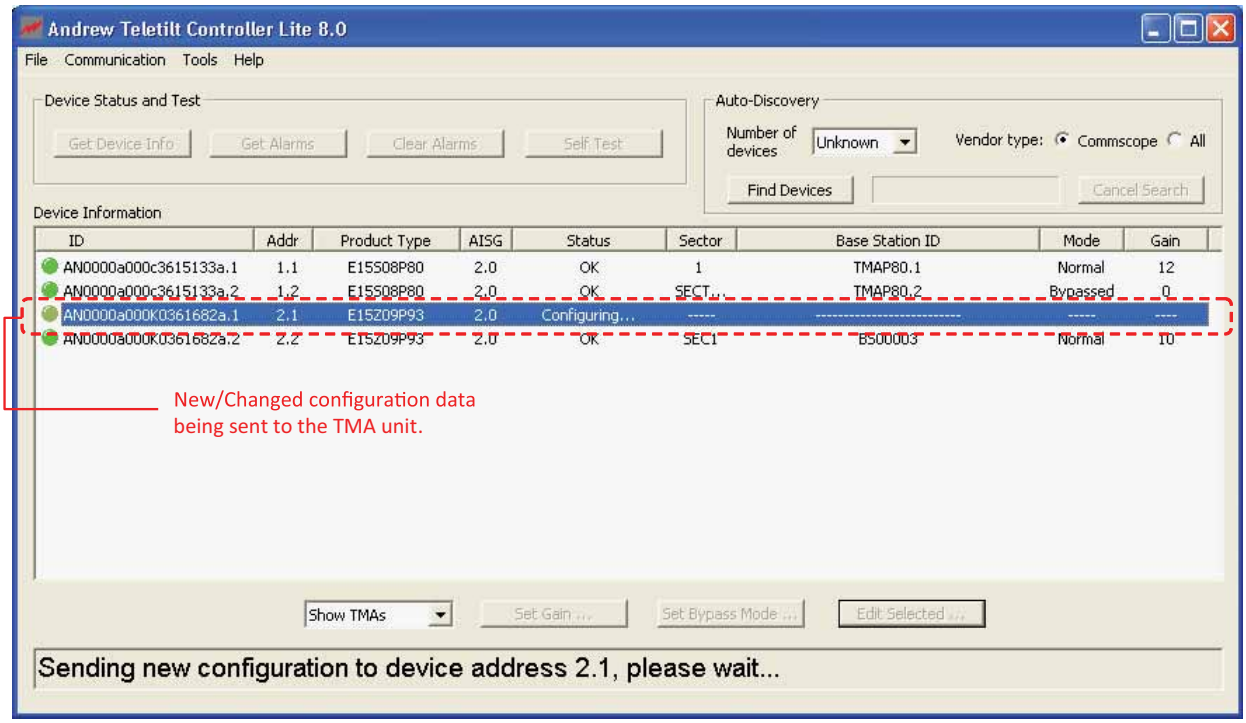
Andrew Teletilt Controller Lite 8.0
File Communication Tools Help
Device Status and Test
Get Device Info
Get Alarms
Clear Alarms
Self Test
Auto-Discovery
Number of devices
Unknown
Vendor type: Commscope All
Find Devices
Cancel Search
Device Information
ID Addr Product Type AISG Status Sector Base Station ID Mode Gain
AN0000a000c3615133a.1 1.1 E15S08P80 2.0 OK 1 TMAP80.1 Normal 12
AN0000a000c3615133a.2 1.2 E15S08P80 2.0 OK SECT... TMAP80.2 Bypassed 0
AN0000a000K0361682a.1 2.1 E15Z09P93 2.0 Configuring... ----- ----- ----- ----
AN0000a000K0361682a.2 2.2 E15Z09P93 2.0 OK SEC1 B500003 Normal 10
New/Changed configuration data being sent to the TMA unit.
Show TMAs
Set Gain ...
Set Bypass Mode ...
Edit Selected ...
Sending new configuration to device address 2.1, please wait...

Figure 21-4. Configuration Changes sent to the TMA.

Figure 21-5. Confirmation of Configuration Changes to the TMA

Section 22
Changing the Gain on a Variable-Gain TMA

Some TMAs support variable gain, while others are fixed gain. A variable gain TMA is easily recognized as its Minimum Gain value is less than its Maximum Gain value. On a fixed gain TMA, the Minimum and Maximum Gain values are equal. The ATC-Lite allows changing the gain value on variable gain TMAs.

1. Switch to TMA Devices view by selecting 'Show TMAs' from the drop down list below the **Device information** list.
2. Select the TMA that requires a Gain change (Figure 22-1).
3. Click on **Set Gain** at the bottom of the screen (Figures 22-1).

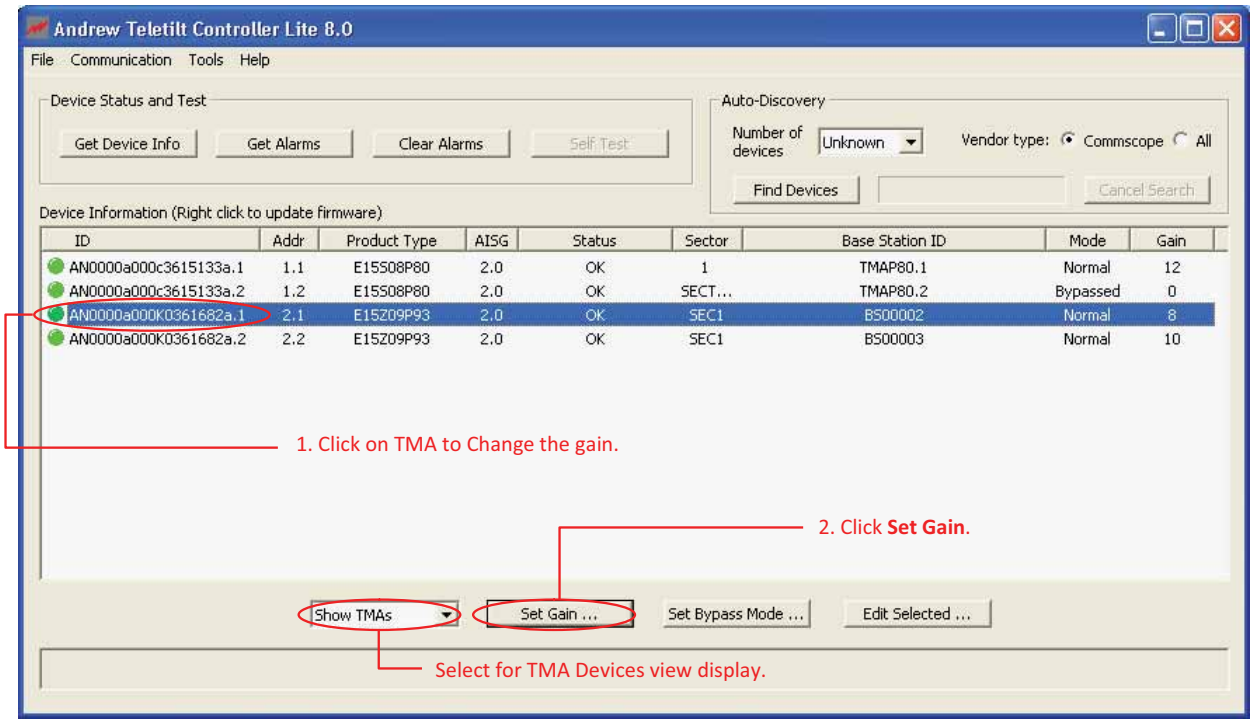
Andrew Teletilt Controller Lite 8.0
File Communication Tools Help
Device Status and Test
Get Device Info
Get Alarms
Clear Alarms
Self Test
Auto-Discovery
Number of devices
Unknown
Vendor type: Commscope All
Find Devices
Cancel Search
Device Information (Right click to update firmware)
ID Addr Product Type AISG Status Sector Base Station ID Mode Gain
AN0000a000c3615133a.1 1.1 E15S08P80 2.0 OK 1 TMAP80.1 Normal 12
AN0000a000c3615133a.2 1.2 E15S08P80 2.0 OK SECT... TMAP80.2 Bypassed 0
AN0000a000K0361682a.1 2.1 E15Z09P93 2.0 OK SEC1 BS00002 Normal 8
AN0000a000K0361682a.2 2.2 E15Z09P93 2.0 OK SEC1 BS00003 Normal 10
1. Click on TMA to Change the gain.
2. Click Set Gain.
Show TMAs
Set Gain ...
Set Bypass Mode ...
Edit Selected ...
Select for TMA Devices view display.

Figure 22-1. Selecting TMA to change the Gain.

4. The **TMA Device …Operation** screen will appear (Figure 22-2).
Note. TMA data (TMA Rx Band, TMA Tx Band, Min Gain, Max Gain, Gain Resolution and Current Gain) from the device are displayed on this screen: This information may be used as a reference to help to set the new Gain.
This screen will display the configurable parameter **New Gain** and **Set Gain** as disabled for a Fixed Gain TMA and enabled for Variable Gain TMA.
5. If the selected TMA is a Fixed Gain, the **TMA Device** dialog displays all the values only for viewing (Figure 22-2). Click to close the dialog box to return back the Device Information list.
Note the following in Figure 22-2:

- The ID of the device to be configured is displayed in the title bar of the dialog box.
- TMA Rx and Tx Band values displayed are High and Low frequency values.
- Minimum, Maximum and Current Gain values are same. If the TMA unit is in bypassed mode, the current Gain would display zero value.
- **New Gain** field and the button **Set Gain** are disabled, signifying that the Set Gain is not al lowed.

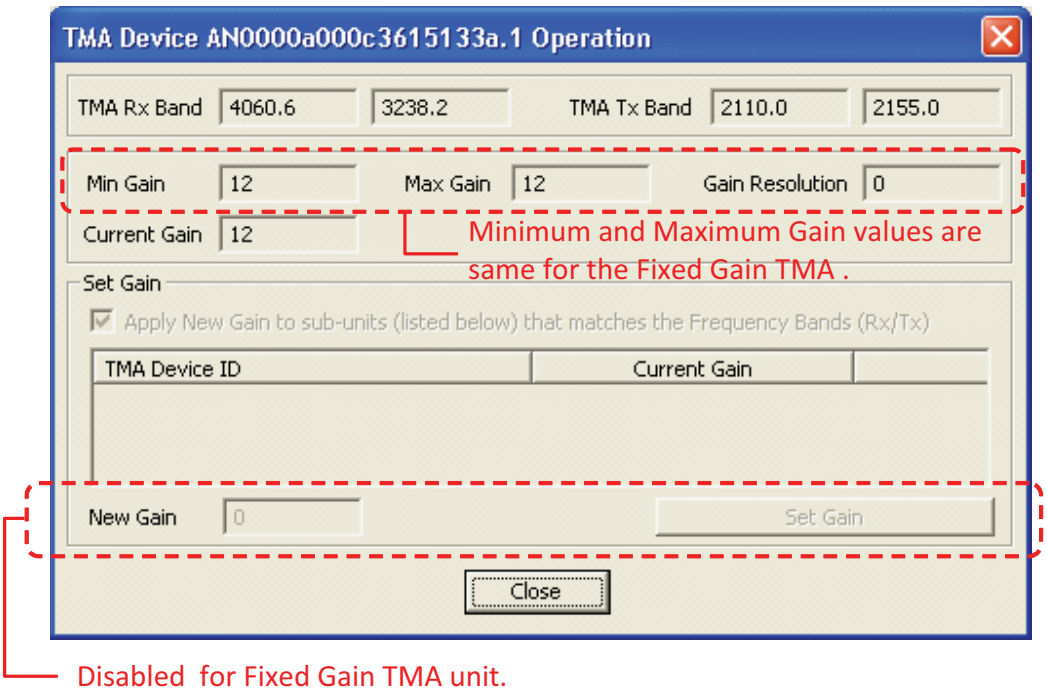

Figure 22-2. Set Gain for Fixed Gain TMA

6. Click on **Close** to close the dialog box to return back the Device Information list.

7. Open up the **TMA Device …Operation** dialog box through step 3 for TMA which is a Vari able Gain. The dialog displays relevant TMA data and enables the fields to allow the change of Gain (Figure 22-3).
   Note the following in Figure 22-3:

- The ID of the device to be configured is displayed in the title bar of the dialog box.
- TMA Rx and Tx Band values displayed are High and Low frequency values.
- Minimum, Maximum Gain values are different. If the TMA unit is in bypassed mode the current Gain would display zero value.
- There is a list that displays the device name and current gain for the subunits of TMA that is in the same address and matches the Rx and Tx band values (High and Low).
- The check box 'Apply New Gain to sub-units (listed below) that matches the Frequency Bands(Rx/Tx)' is selected based on the status of menu **Tools→Tower Mounted Amplifier (TMA)→Apply new Gain to all related Sub units** from the main screen. If this option is selected, **Set Gain** will send the new Gain value to all the sub units of TMA listed. If this option not selected, **Set Gain** will send the new Gain value to the current TMA only.

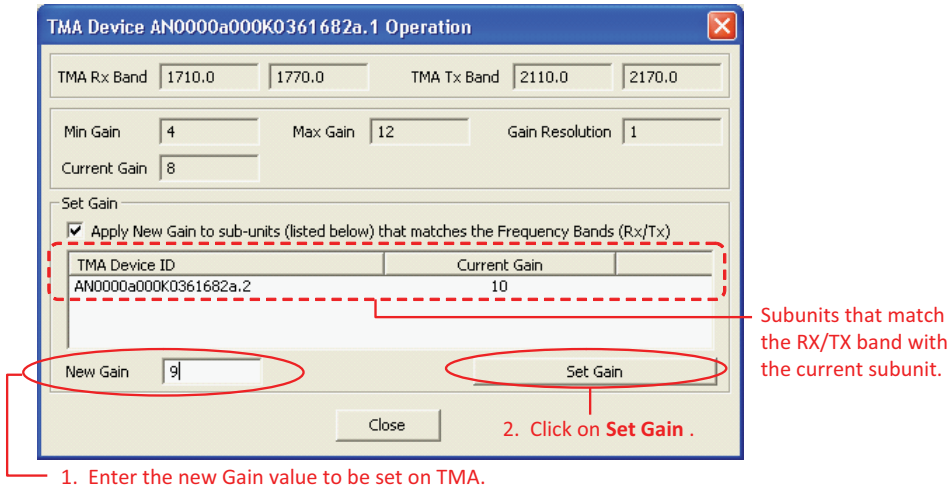

Figure 22-3. Set Gain for Variable Gain TMA

8. Enter the new Gain value in the **New Gain** text entry field. The new Gain value should be between the minimum and maximum Gain values for the TMA. Also the new Gain value should be in steps of Gain Resolution available. The new Gain value is validated for the before mentioned rules and if not compliant an error is displayed in a message box.
9. Click the **Set Gain** button to send the new Gain value to the TMA and to any sub units based on the check box (Apply New Gain…) selection. The user will be prompted to confirm that the new Gain is to be applied to the TMA. Click **Yes** to proceed with the sending of new Gain, or click **No** to return to the **TMA Device…Operation** screen (Figure 22-4).

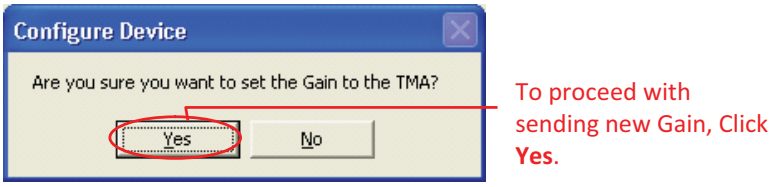

Figure 22-4. Choosing to continue sending new Gain to TMA

10. When the sending of new Gain is complete, a pop-up dialog box will display the results. Normally the dialog box will show that the setting of new Gain was successfully sent to TMA (and sub units) (Figure 22-5). However, if the configuration process was unable to communicate with the TMA for any reason, a failure message will appear.
If this occurs, ensure that all cables and connectors to the TMA are properly connected, and that the system is still properly powered up. Also, verify that the TMA is present in the **Device Information** list, and that it does not have a status reading of **Not Reporting**. A status of **Not Reporting** indicates that connectivity to the TMA has been lost. After verifying that each of these items is correct, repeat the sending of new Gain process.

Figure 22-5. Confirmation of sending new Gain to TMA

11. When the new Gain has been sent to the TMA, the Column Gain will update with the new value(s) (Figure 22-6).

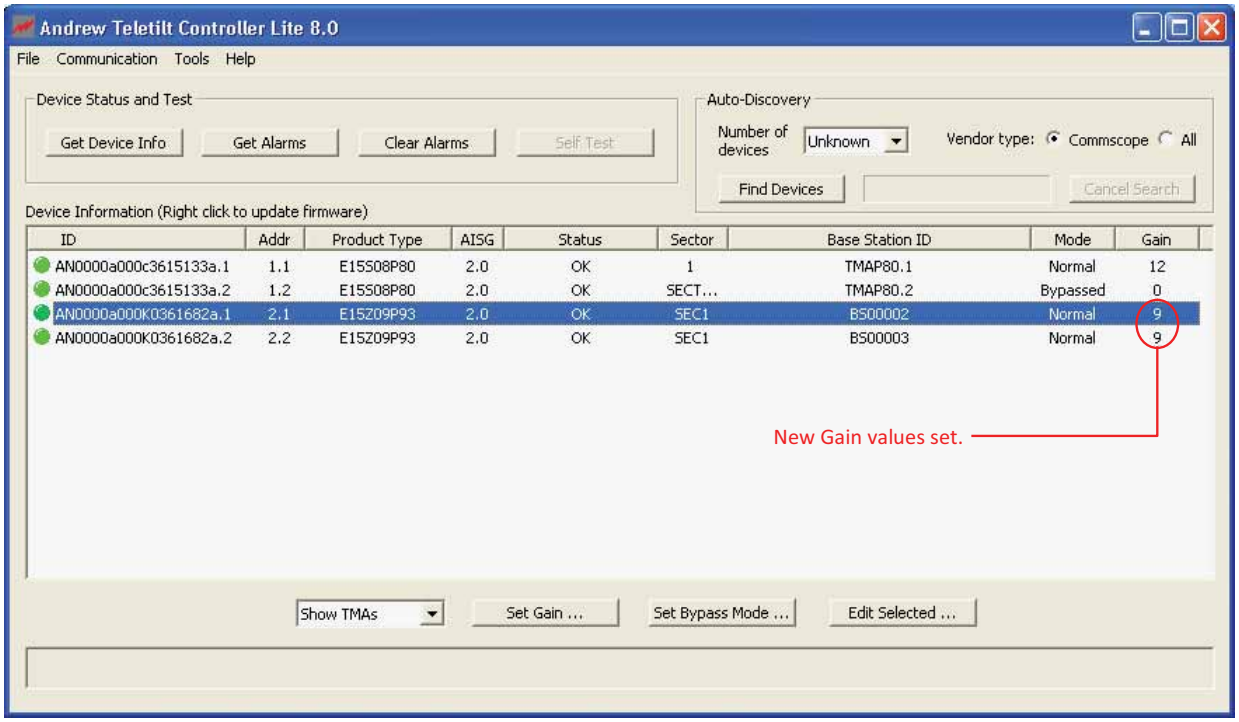
Andrew Teletilt Controller Lite 8.0
File Communication Tools Help
Device Status and Test
Get Device Info
Get Alarms
Clear Alarms
Self Test
Auto-Discovery
Number of devices
Unknown
Vendor type: Commscope All
Find Devices
Cancel Search
Device Information (Right click to update firmware)
ID Addr Product Type AISG Status Sector Base Station ID Mode Gain
AN0000a000c3615133a.1 1.1 E15S08P80 2.0 OK 1 TMAP80.1 Normal 12
AN0000a000c3615133a.2 1.2 E15S08P80 2.0 OK SECT... TMAP80.2 Bypassed 0
AN0000a000K0361682a.1 2.1 E15Z09P93 2.0 OK SEC1 BS00002 Normal 9
AN0000a000K0361682a.2 2.2 E15Z09P93 2.0 OK SEC1 BS00003 Normal 9
New Gain values set.
Show TMAs
Set Gain ...
Set Bypass Mode ...
Edit Selected ...

Figure 22-6. new Gain values set on TMA units

Section 23
Changing the Operating Mode on a TMA

Each TMA device can operate either with its amplifier on or with it bypassed. The ATC-Lite allows changing the TMA operating mode. In the Device Information List, when **Show TMAs** is selected, the current operating mode of each TMA is displayed in the Mode column. 'Normal' indicates that the TMA is operating with its amplifier on, while 'Bypassed' indicates that the TMA amplifier is bypassed. (Figure 23-1).

1. Switch to TMA Devices view by selecting 'Show TMAs' from the drop down list below the **Device Information** list
2. From the **Device Information** list, click on the TMA to change the operating mode (Figure 23-1).
3. Click **Set Bypass Mode** at the bottom of the screen (Figure 23-1).

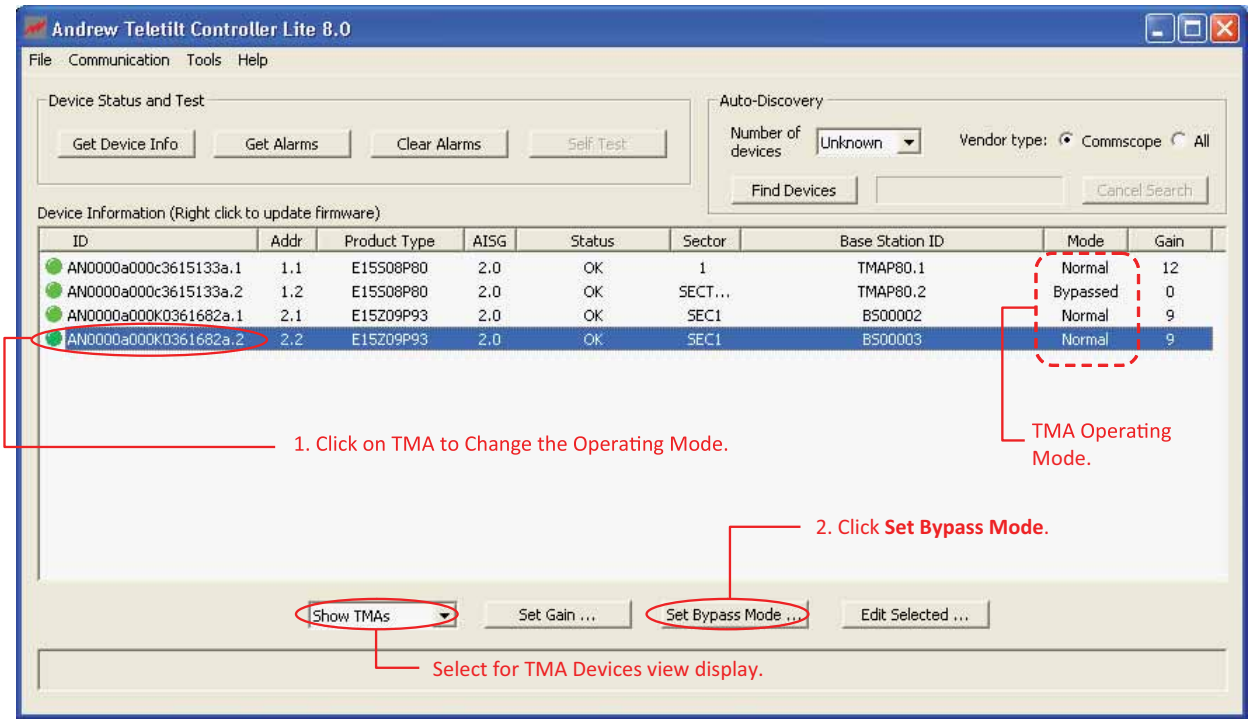
Andrew Teletilt Controller Lite 8.0
File Communication Tools Help
Device Status and Test
Get Device Info
Get Alarms
Clear Alarms
Self Test
Auto-Discovery
Number of devices
Unknown
Vendor type: Commscope All
Find Devices
Cancel Search
Device Information (Right click to update firmware)
ID Addr Product Type AISG Status Sector Base Station ID Mode Gain
AN0000a000c3615133a.1 1.1 E15S08P80 2.0 OK 1 TMAP80.1 Normal 12
AN0000a000c3615133a.2 1.2 E15S08P80 2.0 OK SECT... TMAP80.2 Bypassed 0
AN0000a000K0361682a.1 2.1 E15Z09P93 2.0 OK SEC1 BS00002 Normal 9
AN0000a000K0361682a.2 2.2 E15Z09P93 2.0 OK SEC1 BS00003 Normal 9
1. Click on TMA to Change the Operating Mode.
TMA Operating Mode.
2. Click Set Bypass Mode.
Show TMAs
Set Gain ...
Set Bypass Mode ...
Edit Selected ...
Select for TMA Devices view display.

Figure 23-1. Selecting TMA to change Operating Mode

4. The **TMA Device …Operation** screen will appear (Figure 23-2).
   Note. TMA data (TMA Rx Band, TMA Tx Band, Min Gain, Max Gain, Gain Resolution and Current Gain) from the device are displayed on this screen: This information may be used as a reference to help to change the operating mode.
5. Select the appropriate operating mode from the drop down list (Figure 23-2).
6. Click on Set Bypass Mode button to apply the new operating mode to be sent to the TMA (Figure 23-2).

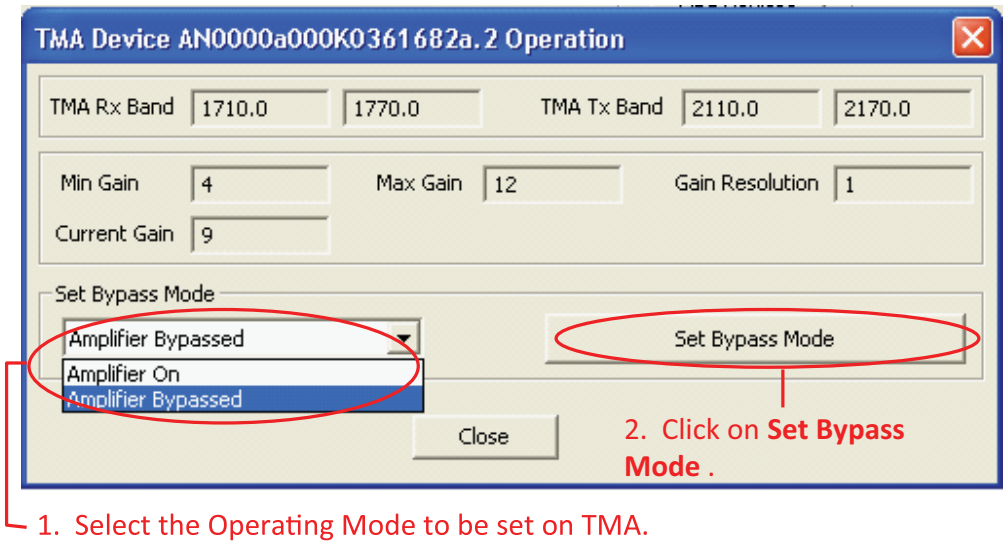

Figure 23-2. Selecting new Operating Mode for TMA

7. When the change of operating mode of TMA is complete, a pop-up dialog box will display the results. Normally the dialog box will show that change of operating mode was successfully sent to TMA (Figure 23-3). However, if the configuration process was unable to communicate with the TMA for any reason, a failure message will appear.
   If this occurs, ensure that all cables and connectors to the TMA are properly connected, and that the system is still properly powered up. Also, verify that the TMA is present in the **Device Information** list, and that it does not have a status reading of **Not Reporting**. A status of **Not Reporting** indicates that connectivity to the TMA has been lost. After verifying that each of these items is correct, repeat the change of operating mode process.

Figure 23-3. Confirmation of changing the operating mode of TMA

8. When the operating mode of the TMA has been successfully completed, the Column **Mode** will display the new mode (Figure 23-4).
Note. If a TMA is changes its operating mode to bypass mode, the current Gain provided by device is zero. If a TMA is changed from bypass to normal (Amplifier On) mode the current Gain shown is the stored value in the device.

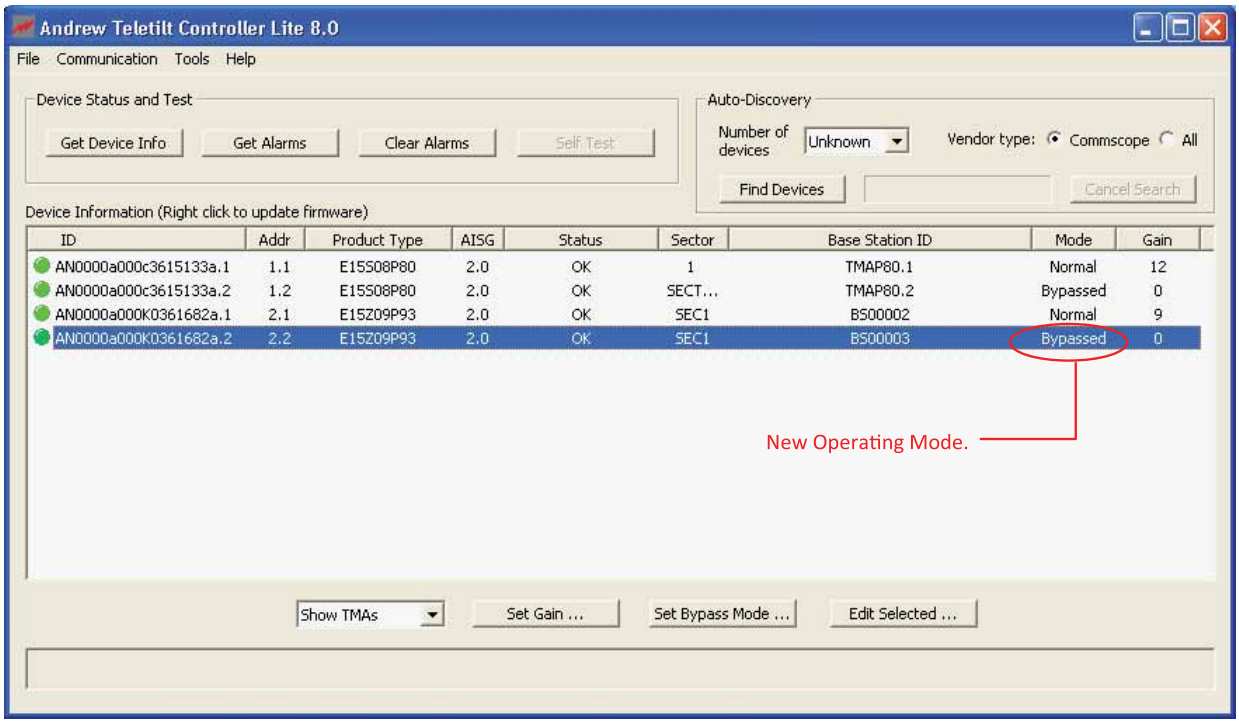
Andrew Teletilt Controller Lite 8.0
File Communication Tools Help
Device Status and Test
Get Device Info
Get Alarms
Clear Alarms
Self Test
Auto-Discovery
Number of devices
Unknown
Vendor type: Commscope All
Find Devices
Cancel Search
Device Information (Right click to update firmware)
ID Addr Product Type AISG Status Sector Base Station ID Mode Gain
AN0000a000c3615133a.1 1.1 E15S08P80 2.0 OK 1 TMAP80.1 Normal 12
AN0000a000c3615133a.2 1.2 E15S08P80 2.0 OK SECT... TMAP80.2 Bypassed 0
AN0000a000K0361682a.1 2.1 E15Z09P93 2.0 OK SEC1 BS00002 Normal 9
AN0000a000K0361682a.2 2.2 E15Z09P93 2.0 OK SEC1 BS00003 Bypassed 0
New Operating Mode.
Show TMAs
Set Gain ...
Set Bypass Mode ...
Edit Selected ...

Figure 23-4. Operating Mode changed for TMA

This page intentionally left blank.

Part 9

Appendix

This page intentionally left blank.

Appendix A
Letter of Compliance

Certification Services

TÜV

TUV Rheinland
of North America

Attn.: Mr. Hal Asbridge
Andrew Corporation
2601 Telecom Parkway
Richardson, TX 75082-3521
USA

Izabela Marinovich

09/26/2005

Re: CB-Certification

Standards:	IEC 60950-1:2001
CB Certificate Number:	US-TUVR-2596
Test Report Number:	30582097.001
Product:	Controller
Model Designation(s):	ATC200-LITE-USB

Dear Mr. Asbridge

Enclosed please find your CB certificate and test report for above mentioned product.

We at TUV Rheinland of North America, Inc. make every effort to provide you with error free documentation. In the event that you find any errors, please inform us as soon as possible so that we may make the necessary corrections.

Please feel free to contact me if you have any questions concerning this matter or in the future concerning the services offered by TUV Rheinland of North America, Inc.

Sincerely,
TUV Rheinland of North America, Inc.

Izabela Marinovich
Product Safety Division

TUV Rheinland
of North America, Inc.
North American Headquarters

12 Commerce Road
Newtown, CT 06470

Tel: +1 (203) 426-0888
Fax: +1 (203) 426-4009
Mail: info@tuv.com
Web: www.tuv.com
Toll Free: +1 TUV-411-0042

Member of
TUV Rheinland Group

This page intentionally left blank.

Appendix B
Declaration of Conformity

NTS Test Report No. B4217-CE Final

TEST SUMMARY

This test record demonstrates "CE" Mark compliance with the following EMC requirements for the **DBRC-PMI**

EMISSIONS	IMMUNITY
European Regions: ♦ EN55022 Class B Emissions (Radiated & Conducted) ♦ EN61000-3-2; Harmonics ♦ EN61000-3-3; Flicker North America Regions: ♦ CFR 47, Part 15, Subpart B, Class B, FCC Emissions ♦ ICES-003 Issue 2, Rev. 1, Class B ITE Emissions AS/NZS CISPR 22-2004 (Australia/New Zealand)	European Regions: ♦ EN 61000-6-1 Immunity: • EN61000-4-2:95, ESD, ± 8 kV Air, ± 4 kV Contact • EN61000-4-3:95 RF Immunity, 10 V/m • EN61000-4-4:95 EFT, 1 kV • EN61000-4-5:95 Surge; 1Kv line to line, 2Kv line to earth • EN61000-4-6:95 Conducted Susceptibility, 10Vrms • EN61000-4-8:93 Power Frequency Magnetic Field 3A/m • EN61000-4-11:94 Voltage DIP and interrupt

Andrew Corporation is responsible for the tested product configuration, continued product compliance with these standards listed, and for the appropriate auditing of subsequent products, as required.

This is to certify that the following report is true and correct to the best of my knowledge.

Dieu Vo,
EMI Operations Supervisor
FCC, CE, Telecommunications

Robert Stevens
Quality Assurance Manager

This page intentionally left blank.

ANDREW
A CommScope Company

Teletilt® System Site Configuration Worksheet

SITE I.D.

Actuator	Antenna	Actuator Serial No.	Sector/ Orientation	Height	Miscellaneous
1					
2					
3					
4					
5					
6					
7					
8					
9					
10					
11					
12					
13					
14					
15					
16					

ANDREW®
A CommScope Company

Teletilt® System Site Configuration Worksheet

SITE I.D.

Actuator	Antenna	Actuator Serial No.	Sector/ Orientation	Height	Miscellaneous
17					
18					
19					
20					
21					
22					
23					
24					
25					
26					
27					
28					
29					
30					
31					
32					